




# ASUS X42J Disk Drive Replacement

This guide will show you how to replace your disk drive if it has stop reading your disk.

Written By: Jonathan Cole

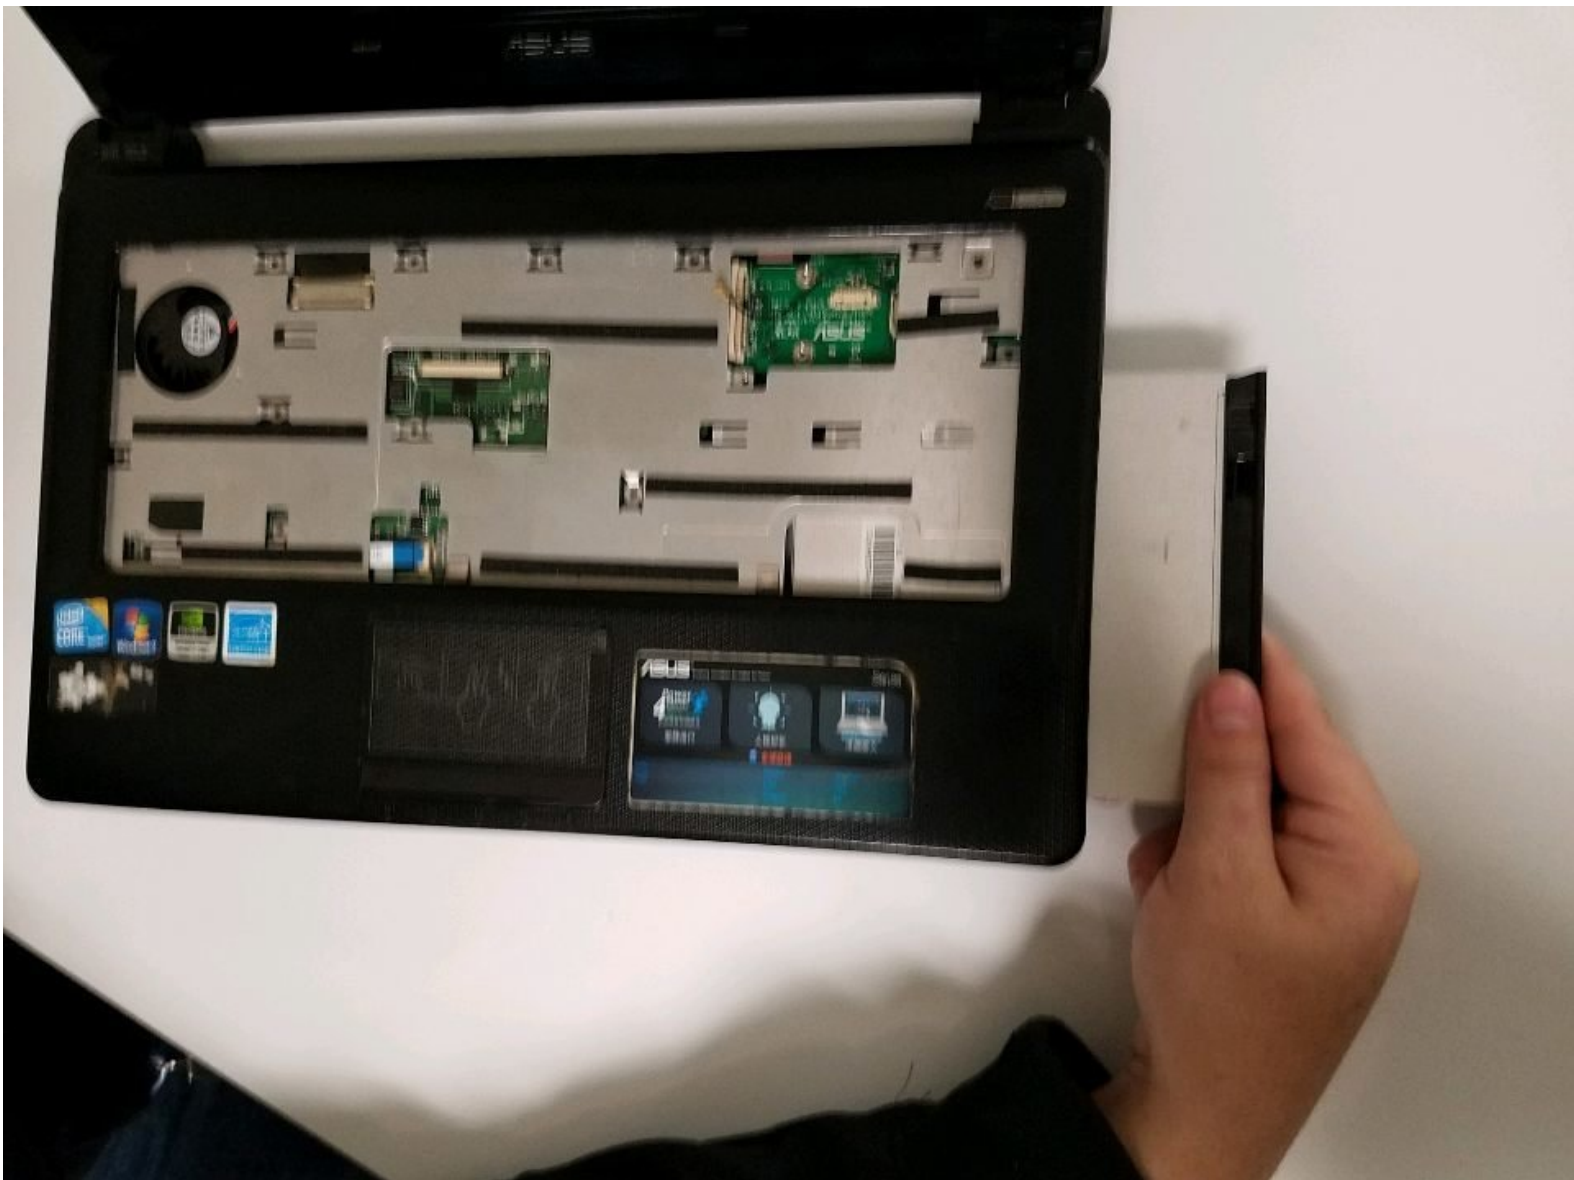

**TOOLS:**

- [Phillips #0 Screwdriver](#) (1)

**PARTS:**

- [Optical Disk Drive](#) (1)

## Step 1 — Disk Drive



- Use the Phillips #0 screwdriver to remove the two screws on the back of the laptop.

## Step 2



- Slide the disk drive out of the device.

To reassemble your device, follow these instructions in reverse order.