




# Samsung Blackjack Antenna Replacement

Replace the antenna on your Samsung Blackjack.

Written By: Kristin Manna

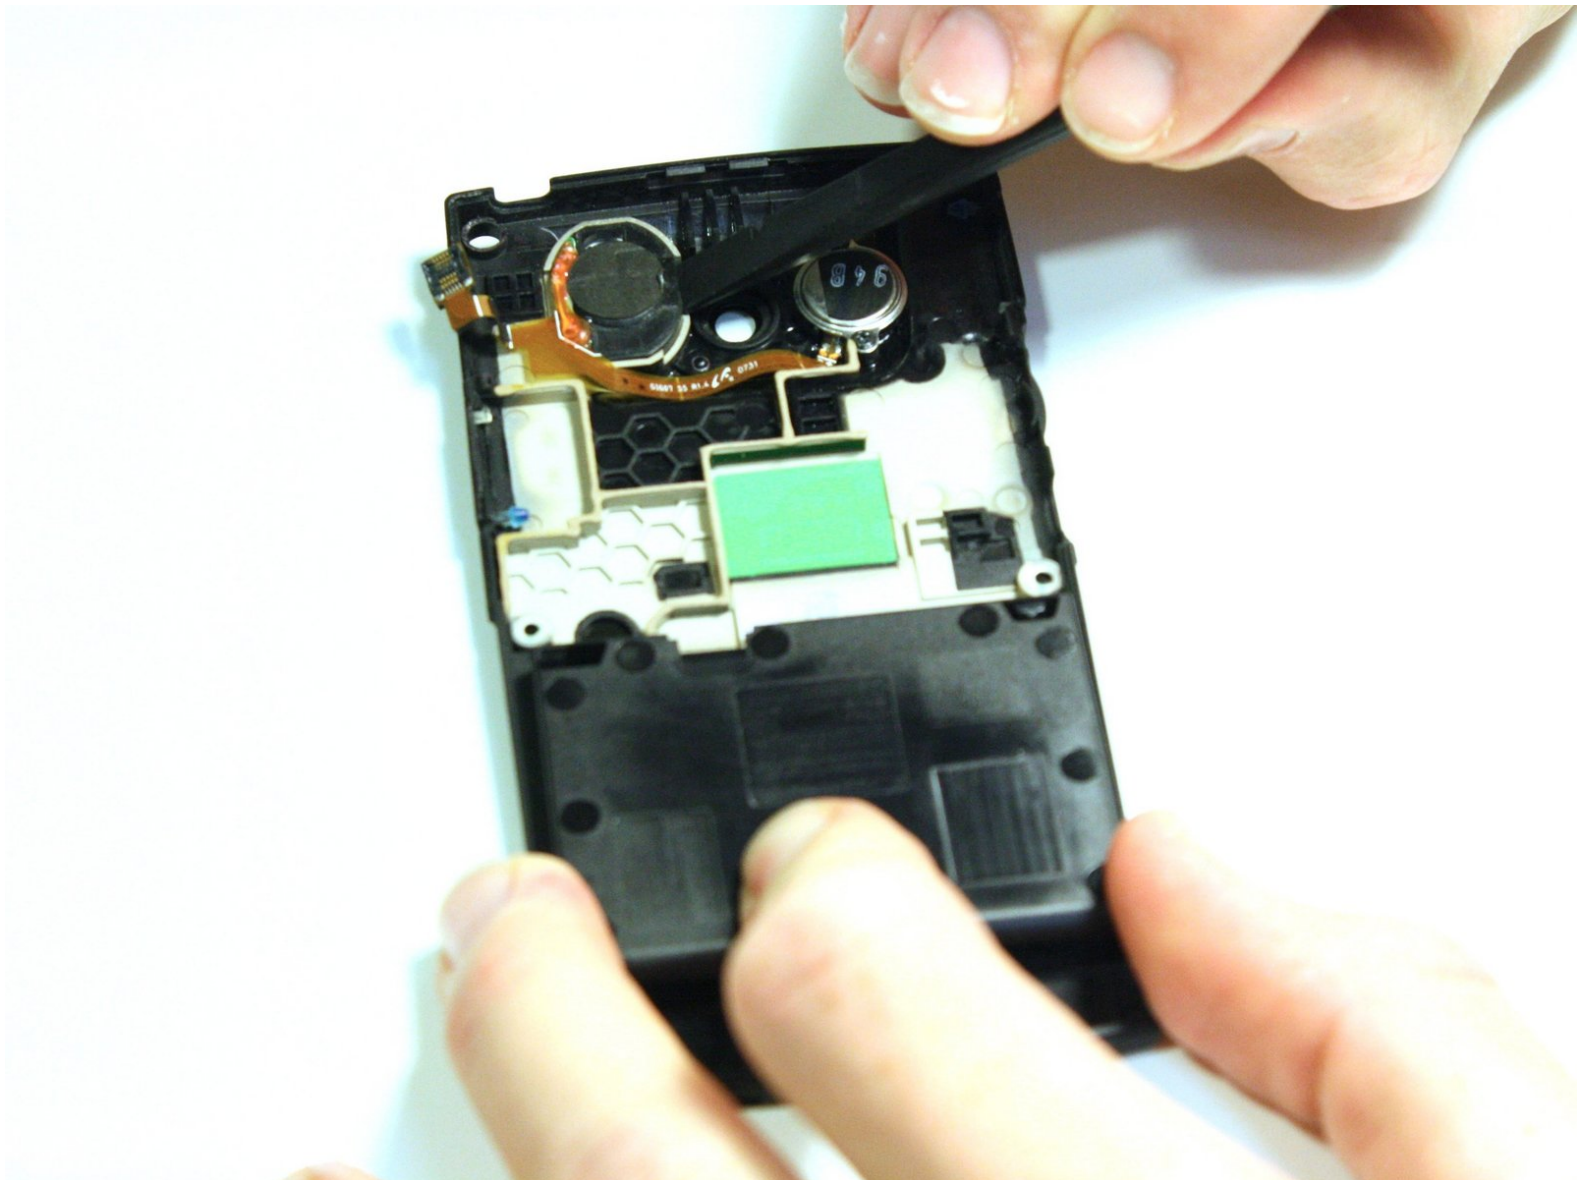

---

## INTRODUCTION

Use this guide to replace a broken or damaged antenna.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery Cover



- Hold the device with the screen facing away from you and the camera towards you.
- Place your thumb on the bottom half of the phone and slide the cover off while gently pushing down on the cover.

## Step 2 — Battery

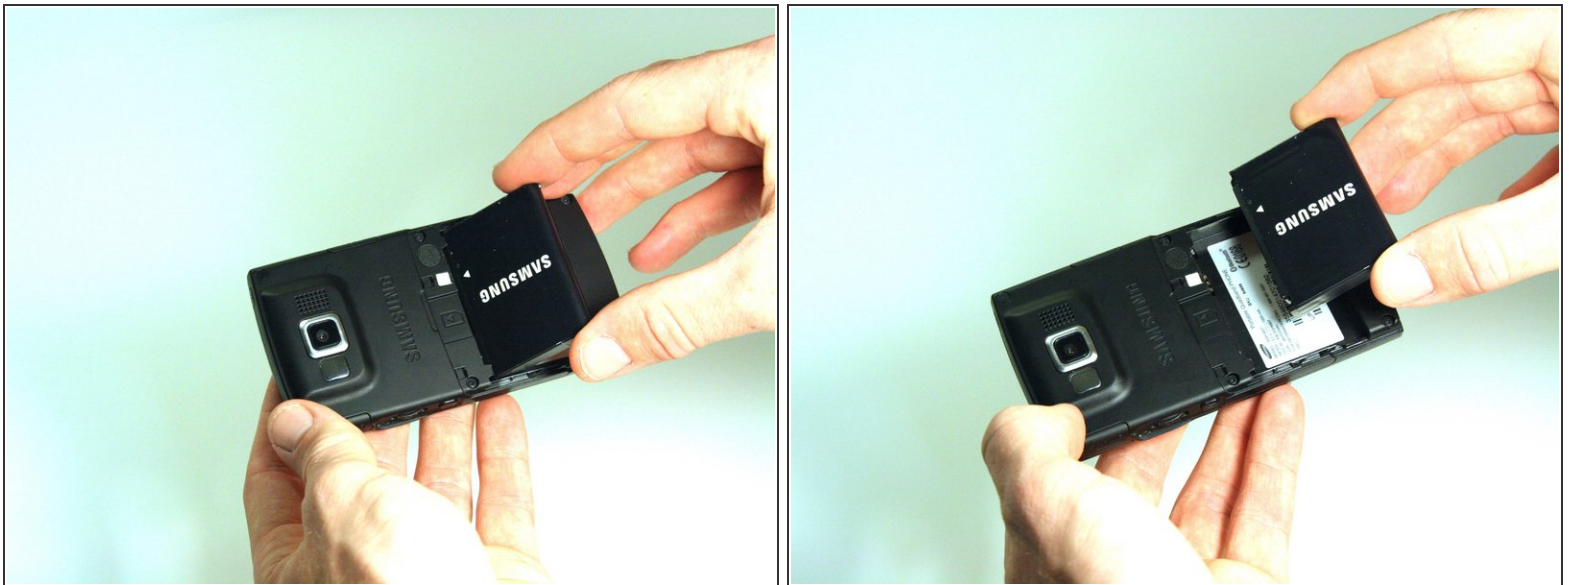

- Place your fingers on both sides of the bottom of the battery and lift upwards.
- Pull the battery away from the phone.



### Step 3 — SIM Card



- Place your thumb on the SIM card.
- Slide the card out of the slot.

### Step 4 — Back Phone Casing



- Use the spudger to remove the rubber stoppers from the top of the cover.
- Use the Phillips 00 screw driver to remove the screws from each of the four corners and the two on sides (six total).

## Step 5





- Use the spudger to loosen and separate the front and back covers.
- Pick up the back cover once loosened.

 ***The front and back covers will be attached to each other by a gold wire.***

- Remove the gold wire connecting the back cover to the motherboard to completely separate the covers.




## Step 6 — Antenna

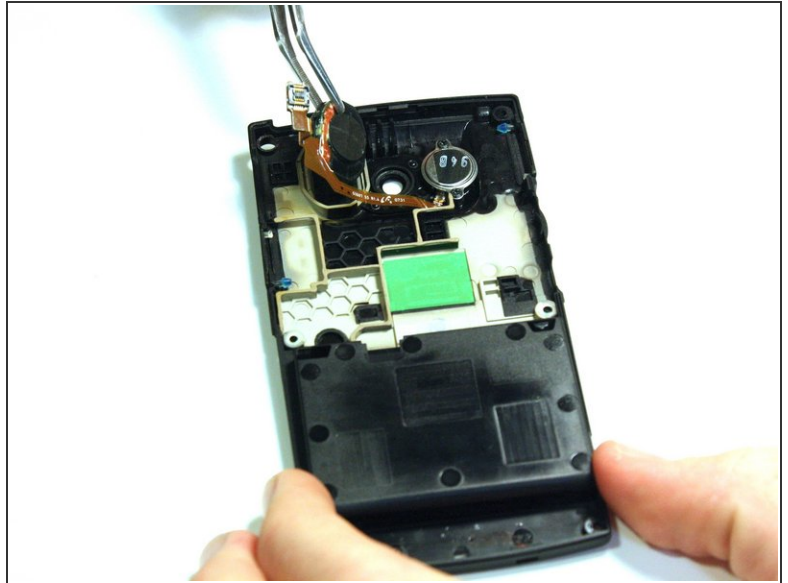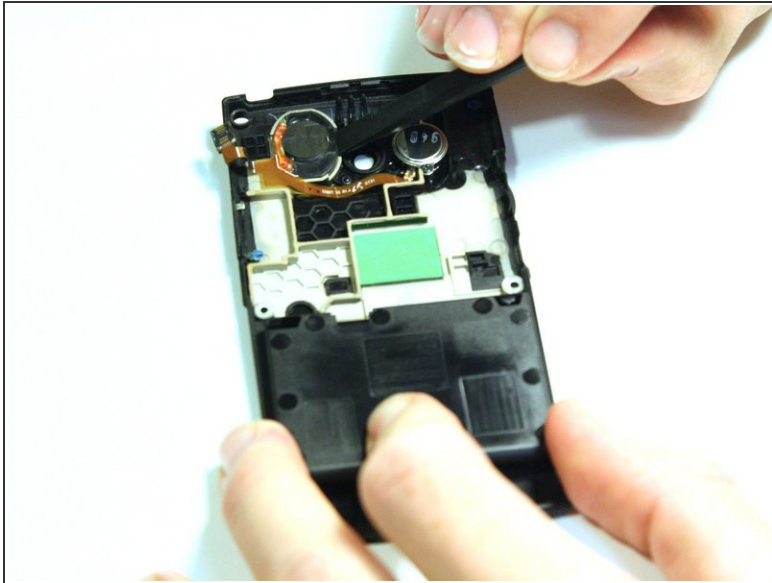

**i** Note: The antenna is located on the back case of the phone. Flip over the back case of the phone so that the interior is facing up.

- Use spudger to help loosen the antenna.
- Once the antenna is loose, use tweezers to remove antenna.

## Step 7

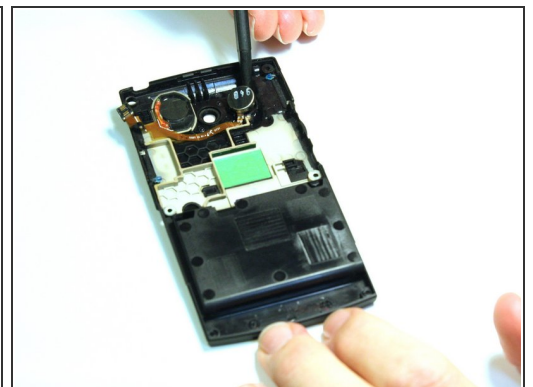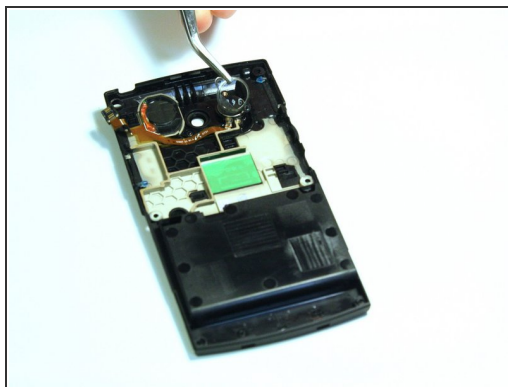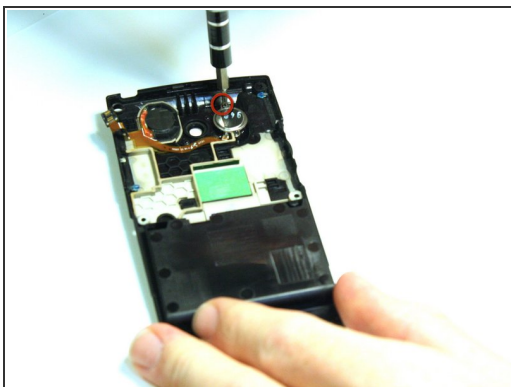

- Use the Phillips 00 screwdriver to remove the screw from the casing around the speaker.
- Use tweezers to lift the casing around the speaker.
- Use spudger to dislodge the speaker.

To reassemble your device, follow these instructions in reverse order.