



# Asus ROG G56JK Hard Drive Replacement

This guide will show you how to replace the Hard Drive for the Asus ROG G56JK laptop.

Written By: Brandon Wells



---

## INTRODUCTION

Replace a broken or malfunctioning Hard Drive.

Before starting on this guide, unplug the laptop from its charger and turn the laptop off.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery




- Push the slider to the opposite side, while pulling out the battery.
- Remove the battery from the device.

## Step 2 — Hard Drive



- Remove the 4 mm screw on the cover using a Phillips #0 screwdriver.
- Remove the cover for the hard drive by pushing down and sliding it towards yourself.

## Step 3

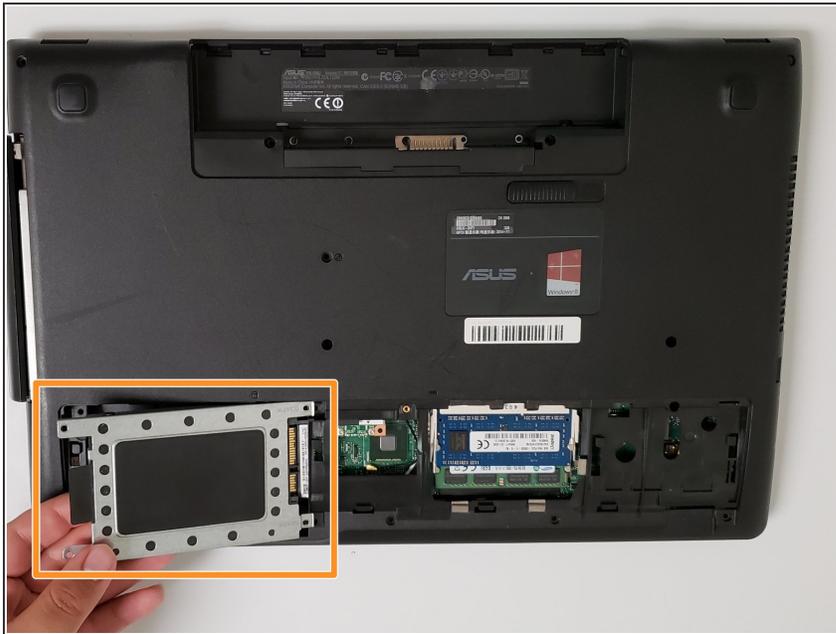

- Slide the hard drive to left and remove it from the device.

To reassemble your device, follow these instructions in reverse order.