 




Alienware M17x P01E Coin Cell Battery Replacement

This guide will show you how to replace your coin cell battery in your Alienware M17x P01E.

Written By: Jose

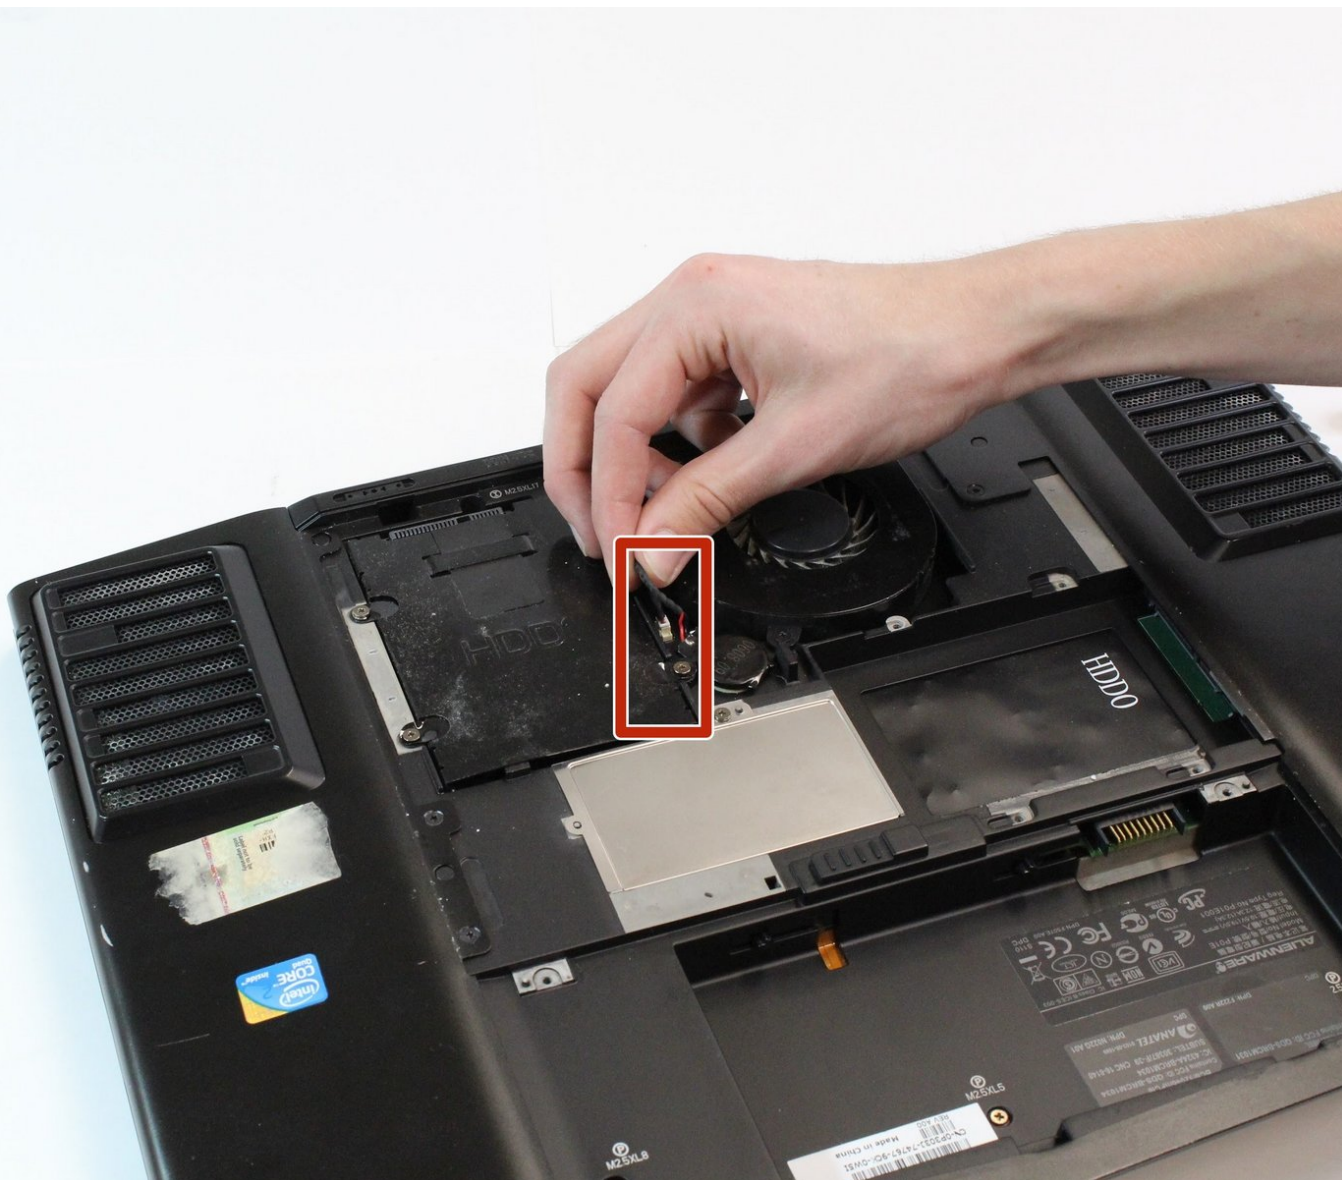

INTRODUCTION

Is your computer heating up unexpectedly and not working properly? Consider using this guide to replace the coin cell battery in your laptop.




TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



 Please power off the computer and deplete the battery before attempting the following step.

Step 2



- Press down on the battery latch and slide it to the left.
- Lift the battery out once it pops out.

Step 3 — Compartment Door



 
- Loosen the two silver Phillips #1 screws.
- ⓘ The screws are held to the compartment door by a washer and cannot be removed.

Step 4



- Use your hand to gently lift and remove the compartment door.

Step 5 — Coin Cell Battery

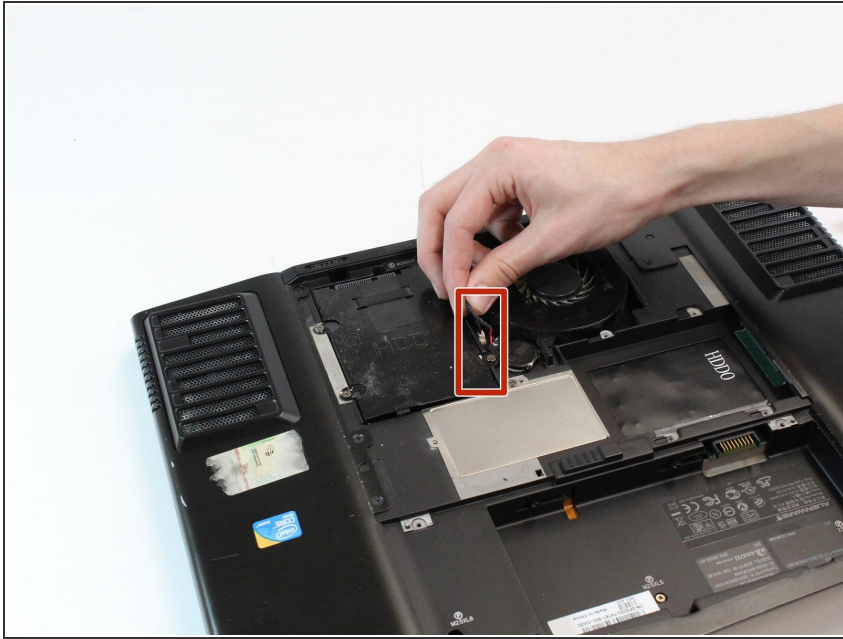

- Gently pull on the coin cell battery cable to disconnect it from the laptop.

Step 6



- Pull on the battery to remove.

To reassemble your device, follow these instructions in reverse order.