



# Samsung Chromebook 2 XE503c12 Screen Replacement

Replace your broken screen on a Samsung Chromebook 2 XE503c12

Written By: Jordan W Jones



## INTRODUCTION

Issues with a broken or cracked screen can be resolved by following this guide. The only tools required will be a plastic prying device, and a standard Phillips #0 Screwdriver

---

### TOOLS:


- [Magnetic Project Mat](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery




- Flip device over so that the underside is facing up.
- Remove nine, 7mm PH#0 screws from the bottom.

## Step 2

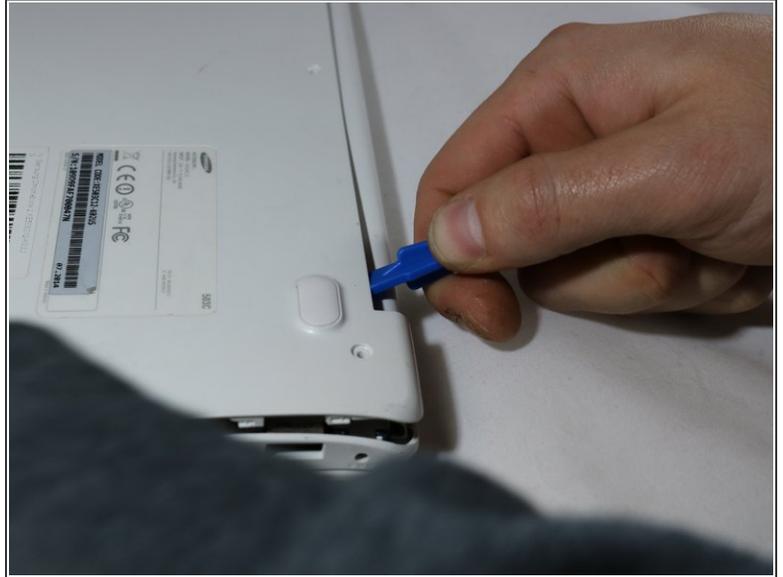


- Using the plastic opening tool, pry open the bottom of the Chromebook case, working all around the computer.
- Lift the panel out of the way to reveal the battery.

## Step 3

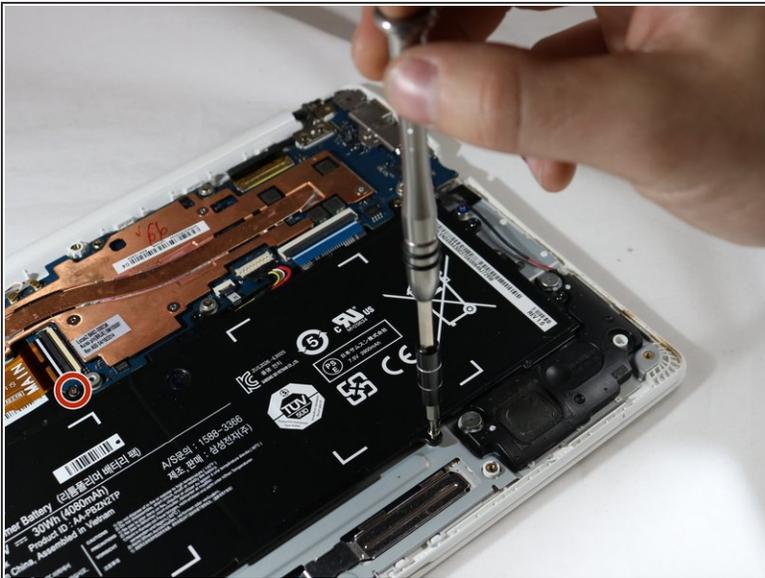

- Remove four, 5mm Phillips #0 screws connecting the battery to the laptop


## Step 4

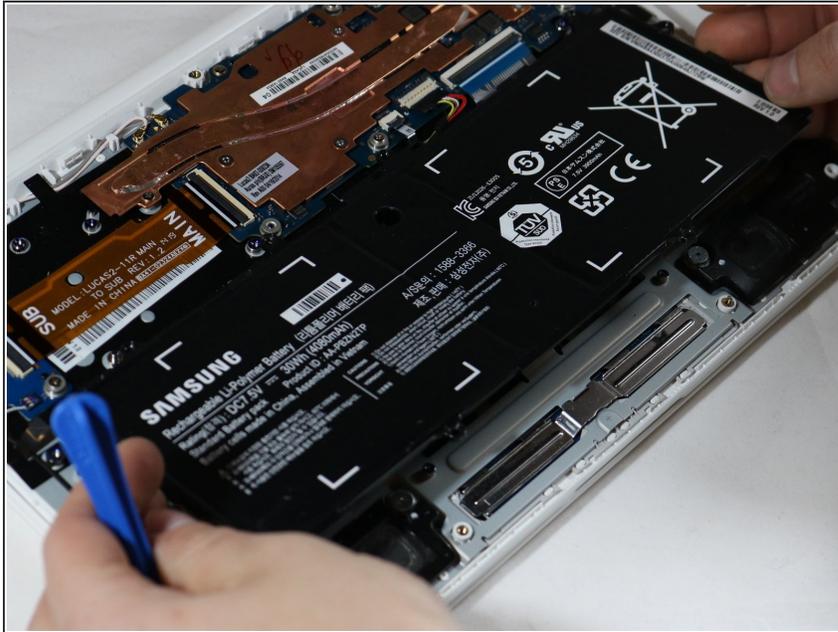

- Lift the battery, and pull it up and towards you, away from the connector.


⚠ Be sure to lift gently to avoid damage to connector

## Step 5

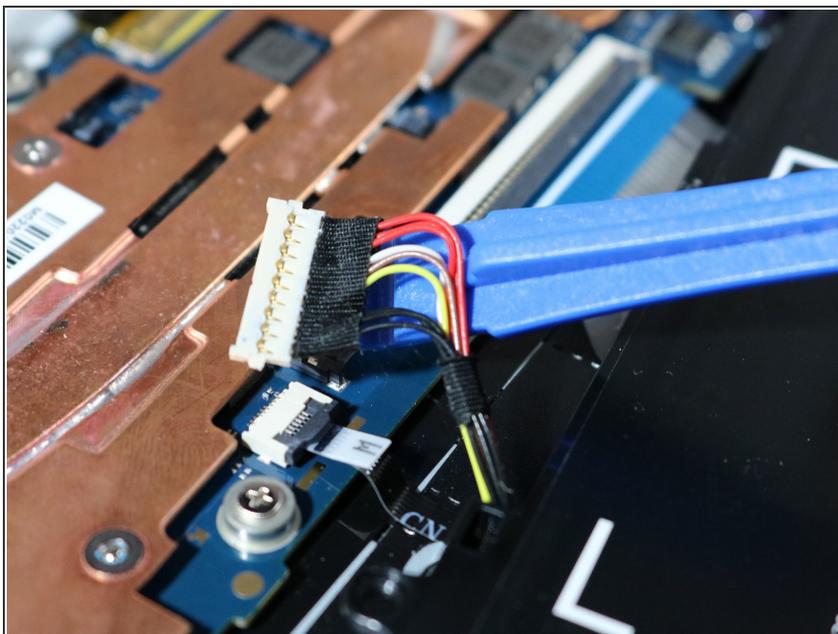



- Using a plastic opening tool, pry the connector up from the contact.
- Remove the battery from the device.

## Step 6 — Screen

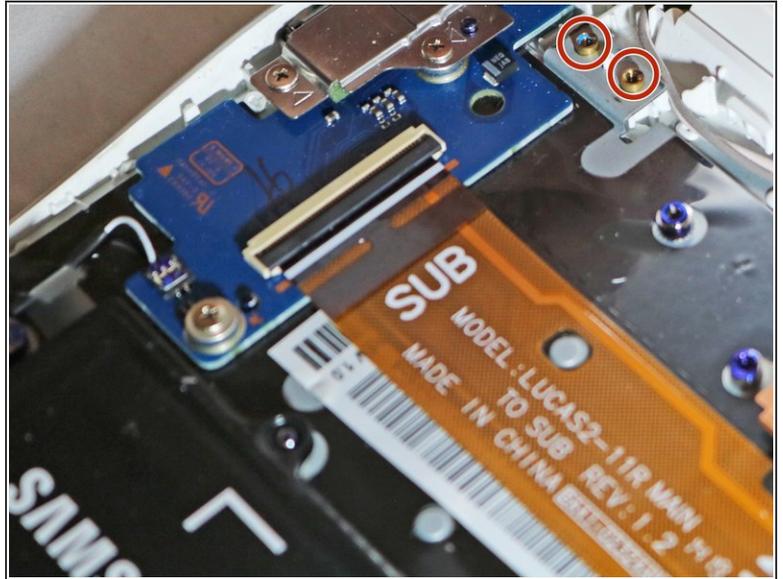


- Remove the four 5mm Phillips #0 screws on the hinges.

## Step 7

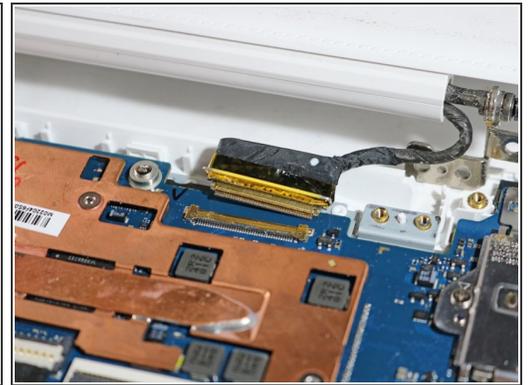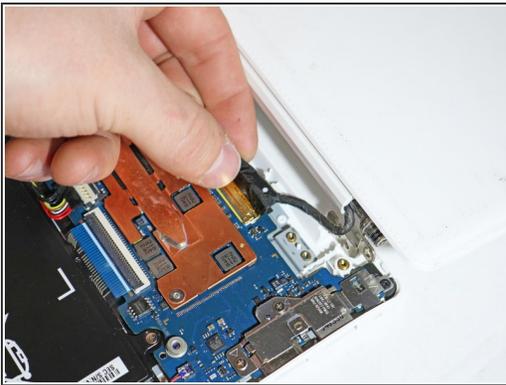


- Unplug two auxiliary wires leading to the top lid.
- Using the plastic prying tool, lift the hinge on the connector up and pull the connector away.

## Step 8

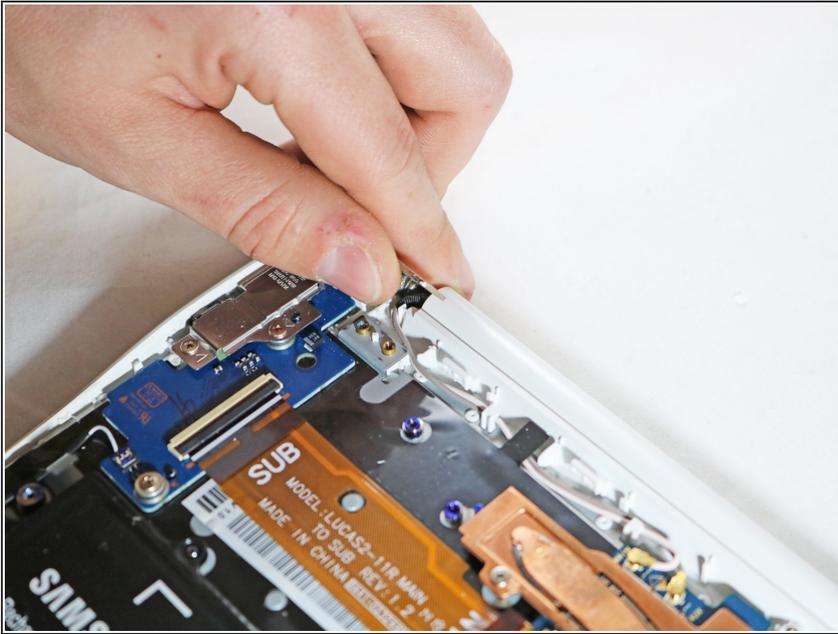

- Lift the hinges up and separate the top lid from the bottom casing.

## Step 9

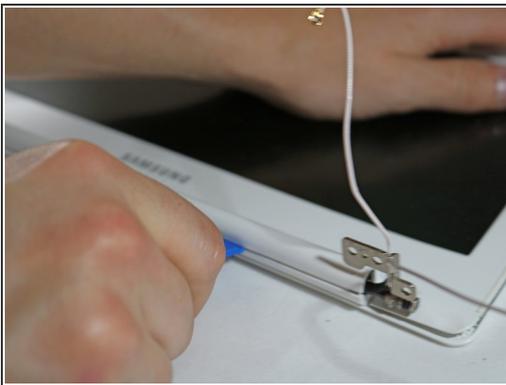

- Using the plastic prying tool, carefully pry the casing apart from the screen.

 When prying case apart, there is a risk of screen and parts of the casing shattering and cutting you.

## Step 10



- Remove the four 5mm Phillips #0 screws holding the screen in place.

## Step 11



- Lift and remove the screen from the device.

To reassemble your device, follow these instructions in reverse order.