



HP Chromebook CB2L Keyboard Replacement

In this guide, we will be showing you how to remove the keyboard from your HP Chromebook CB2L.

Written By: Nathan Petrie



INTRODUCTION

In this guide, we will be showing you how to remove the keyboard from your HP Chromebook CB2L.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:



- [HP Chromebook CB2L Keyboard](#) (1)

Step 1 — Keyboard

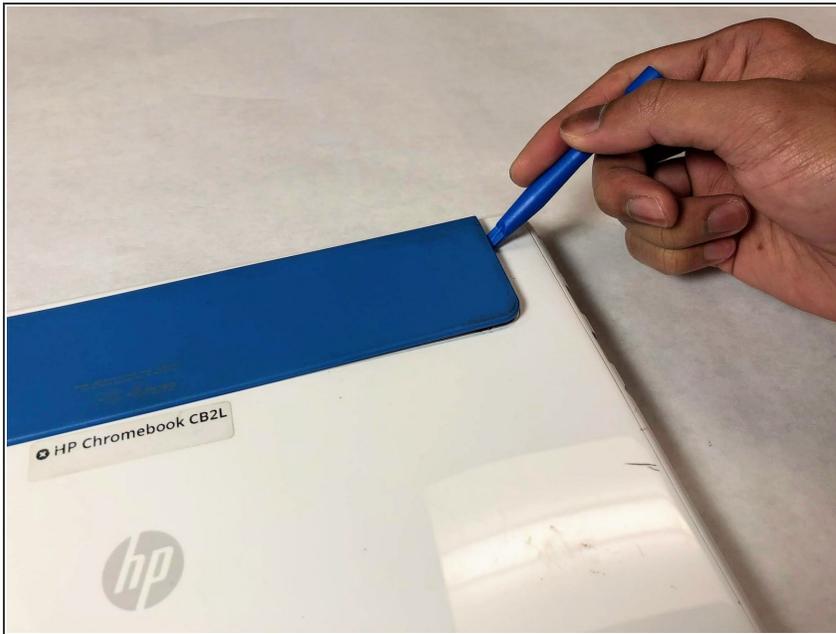


- Flip the Chromebook over so the blue panels are showing.
 - Starting in the top left or right corner, use the plastic opening tool to remove the large blue panel.
- ⚠ This piece has fragile plastic connectors. Don't damage them.

Step 2

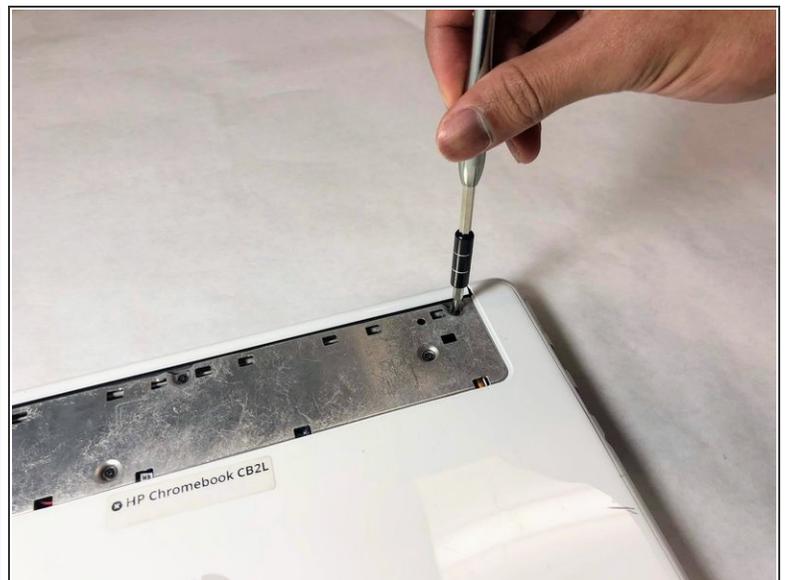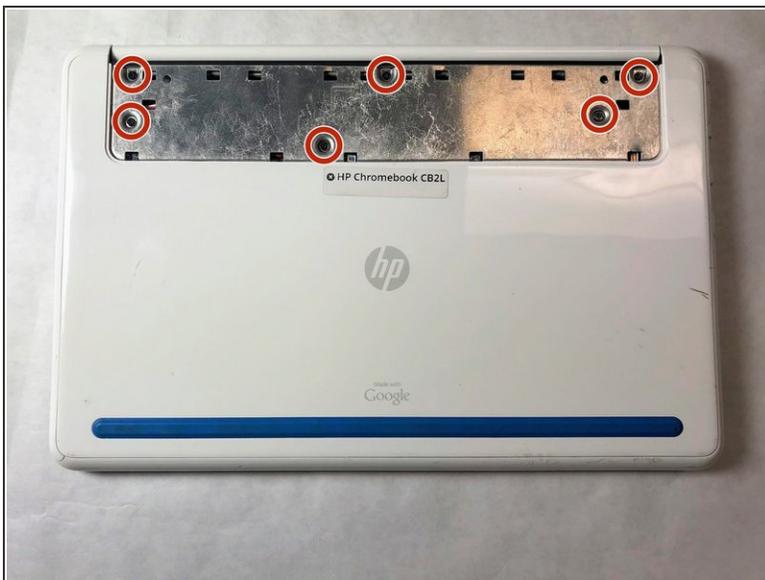


- Remove six 4.77mm screws using the Phillips #1 screwdriver.

Step 3

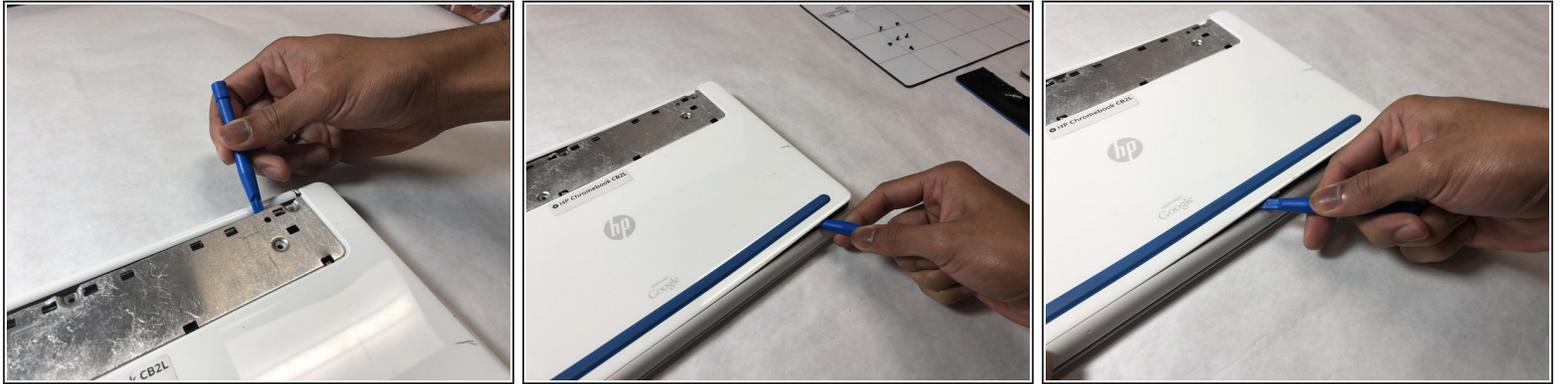



- Starting in the top right-hand corner of the exposed metal piece, use the blue plastic opening tool to remove the back panel.

Step 4

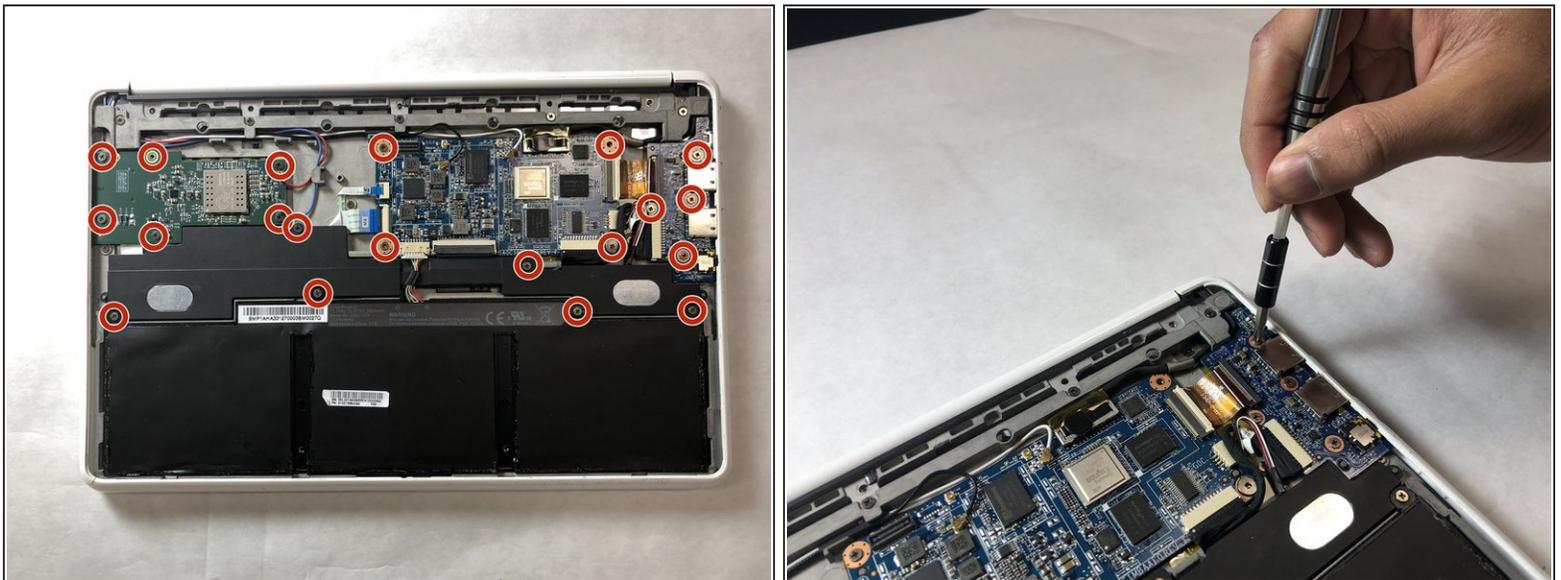




- Remove twenty 3.42mm screws with the Phillips #1 screwdriver.

Step 5

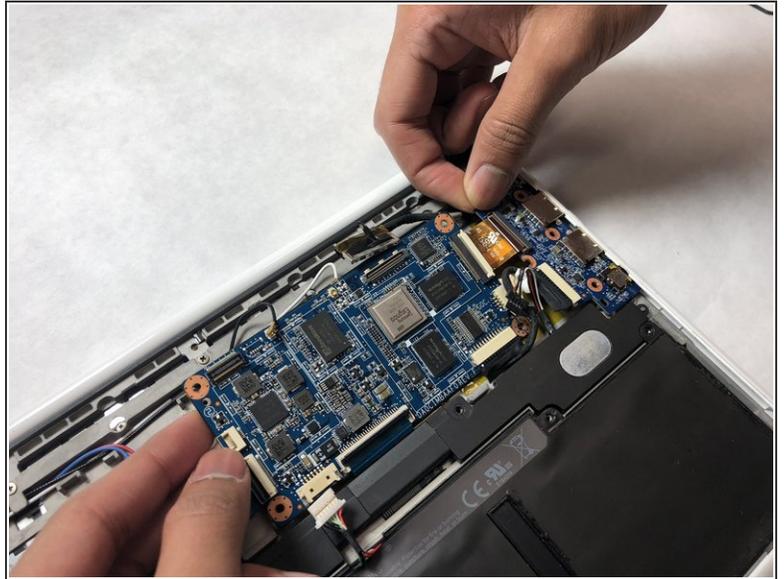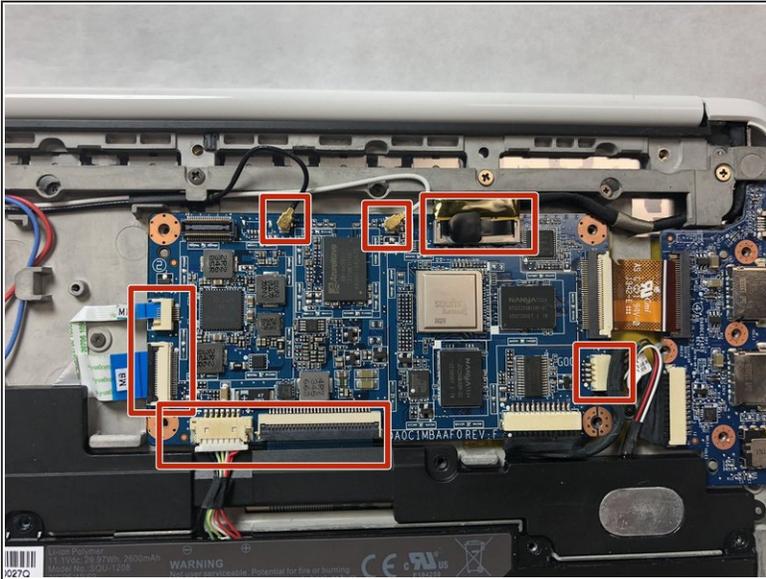



- Remove the black and white antennae wires, the white ribbon cables, the large black connector, and the speaker cable from the motherboard.
- Grabbing the boards by the edges, remove the motherboard and audio/USB board.

Step 6

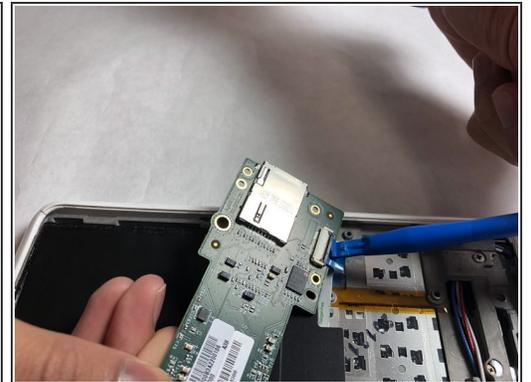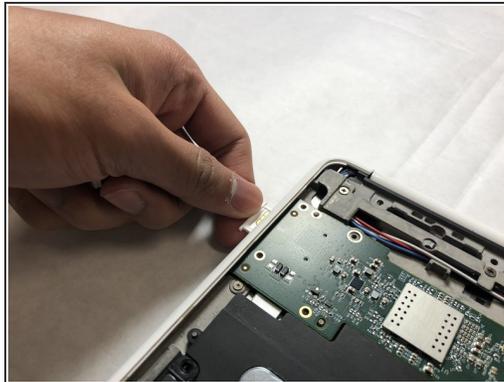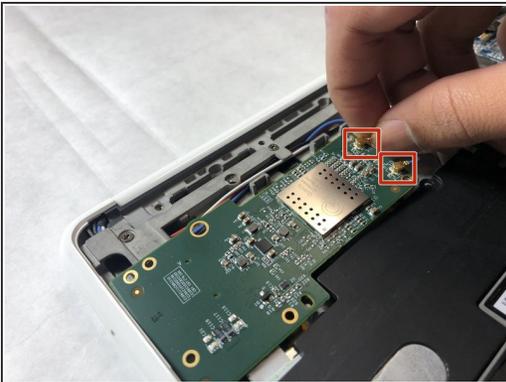



- Remove the red and blue antennae wires from the SIM card board.
- Remove the SIM card tray.
- Flip the board over and use the plastic opening tool to remove the ribbon cable, then remove the board.

Step 7

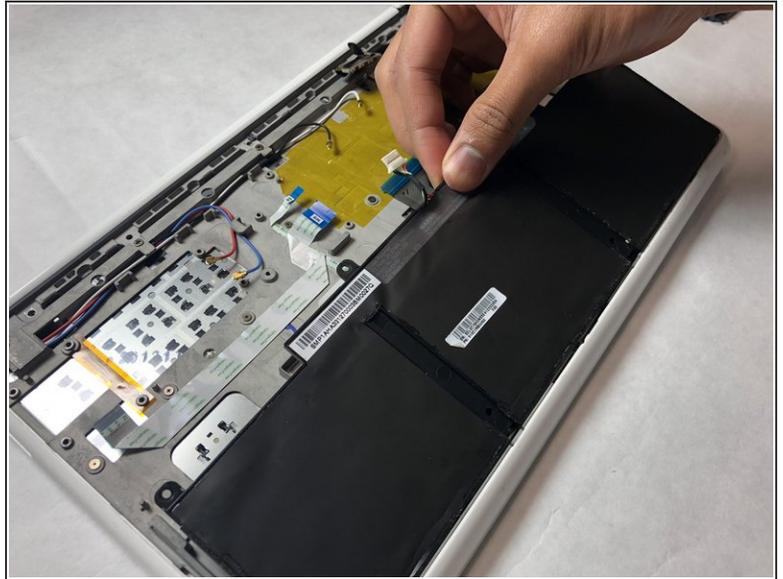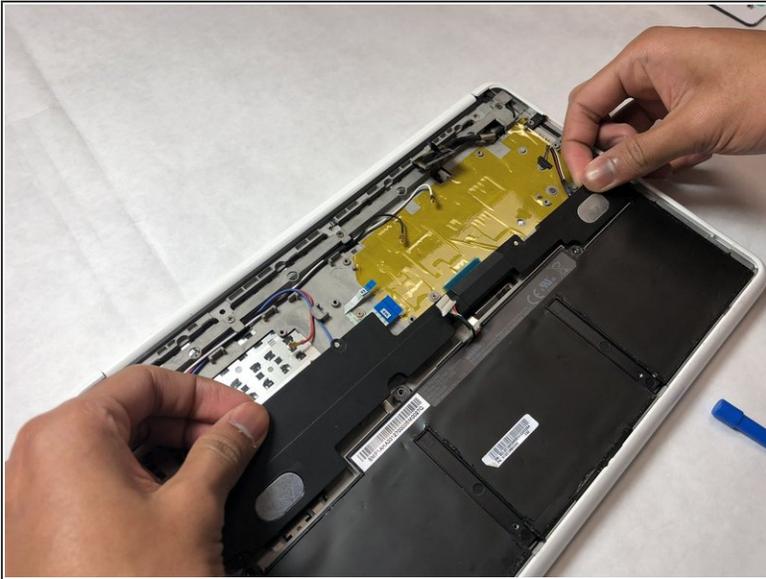

- Remove the speakers and battery.

Step 8

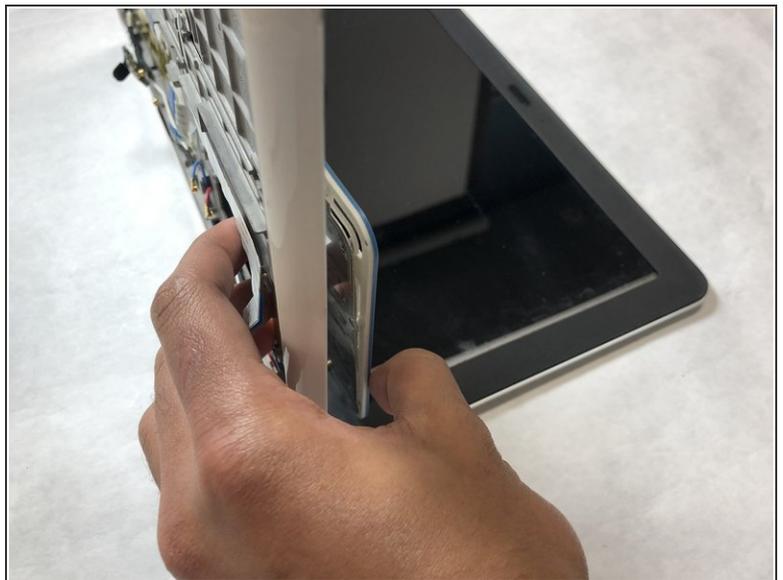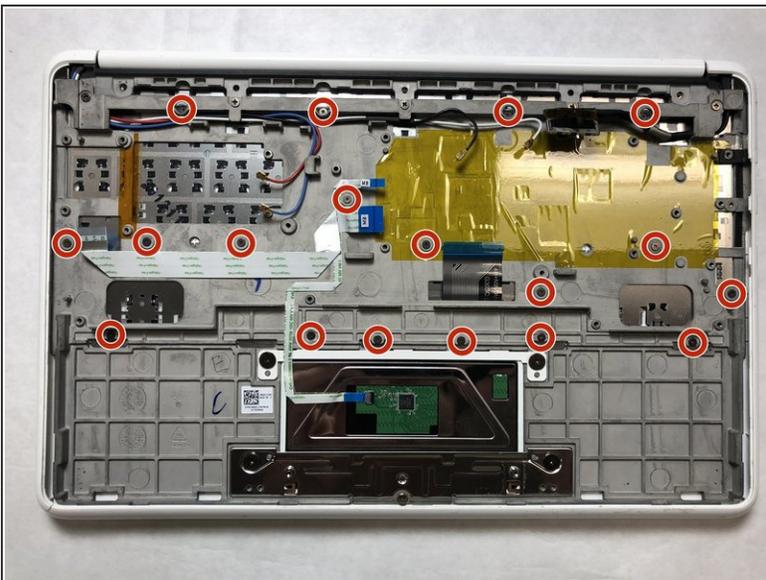

- Remove eighteen 2.5mm screws using the Phillips #1 screwdriver.
- Flip the Chromebook so the top is on the table and the push out the keyboard from the back.

To reassemble your device, follow these instructions in reverse order.