




# Asus ROG G751JT-DH72 RAM Replacement

This guide will instruct users on how to safely remove and install new RAM cards on your Asus ROG G751JT-DH72.

Written By: Anum Haidari

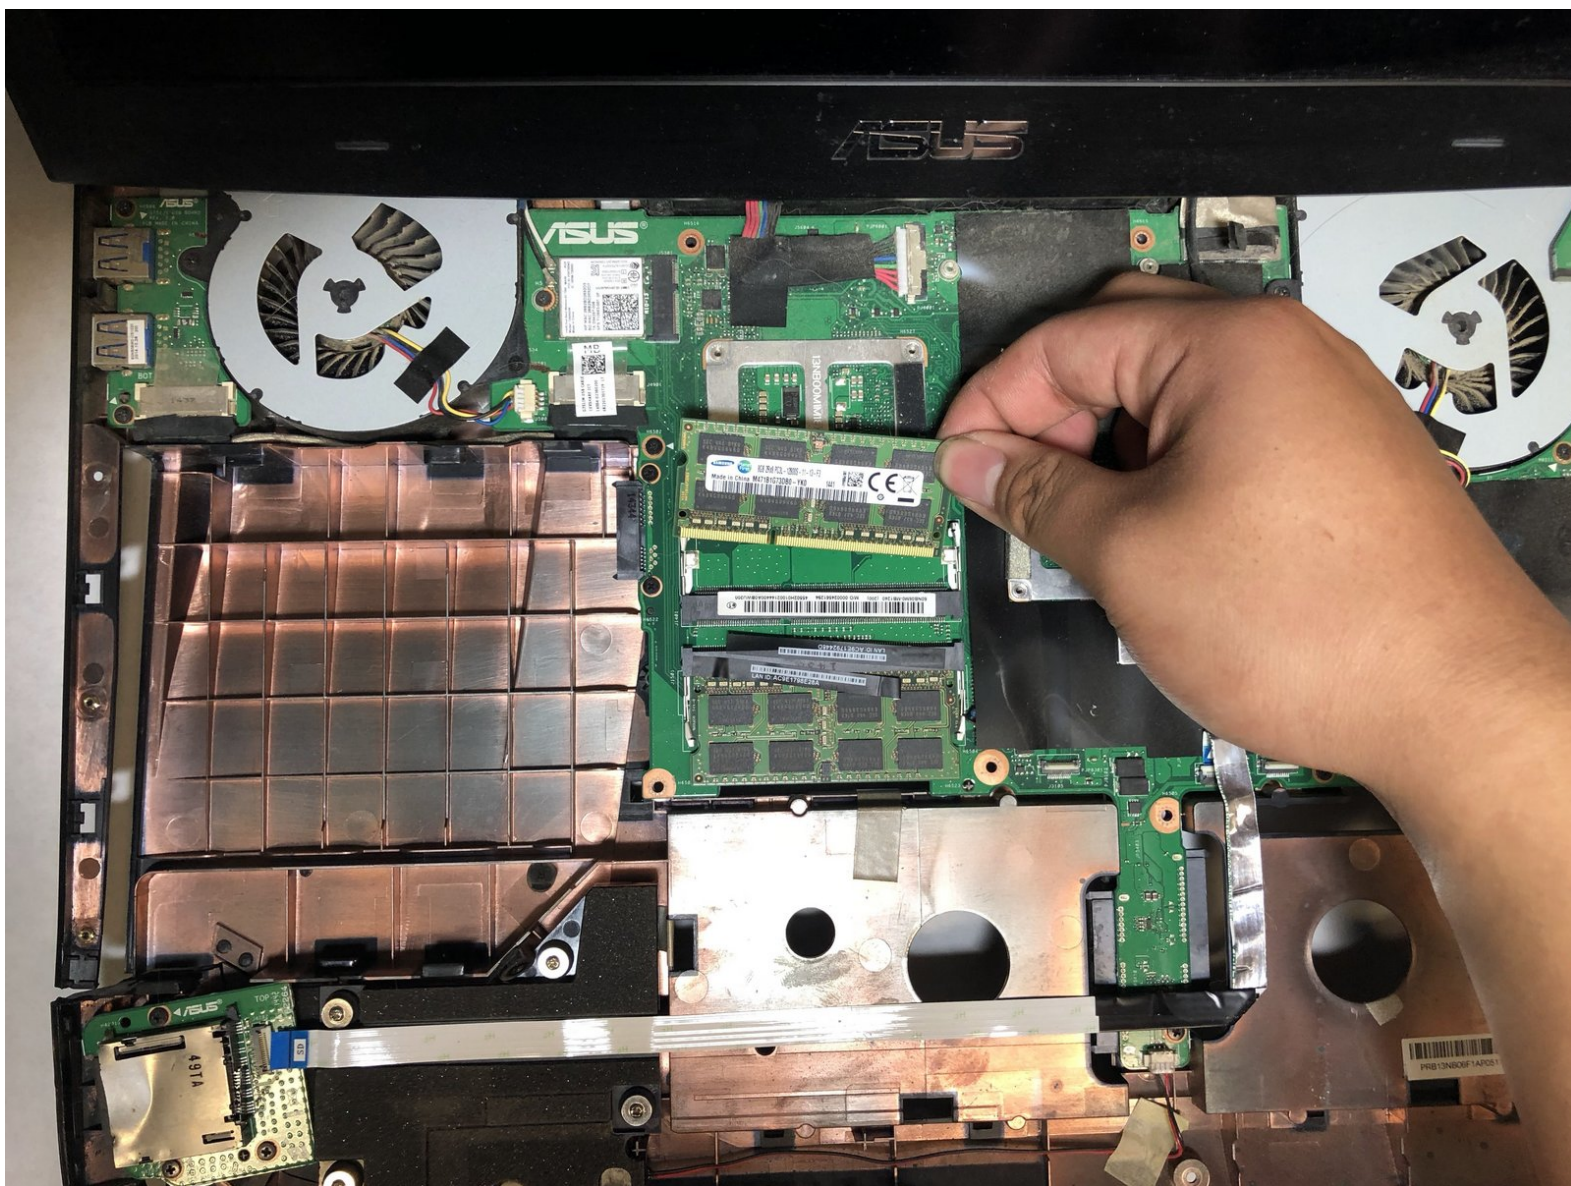

---

# INTRODUCTION

Use this guide to replace the RAM in your device.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-



## Step 1 — RAM



- Lift up the rubber tab located in the upper-right corner of the backing plate.

## Step 2




- Use a Phillips #1 screwdriver to remove the 5.2 mm screw behind the rubber tap.

### Step 3



- Carefully pull the backing plate off. If you have a pry tool, you can pry on the edges carefully.

### Step 4

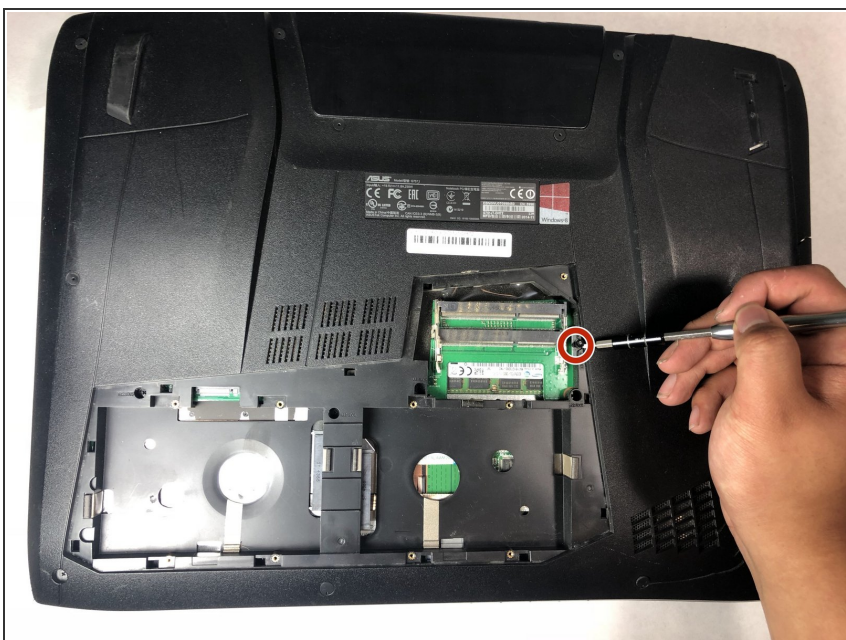

- Use a Phillips #1 screwdriver to remove the 5mm screw on the right side.




## Step 5




- Pull out the optical drive to reveal the screws holding the laptop cover.

## Step 6

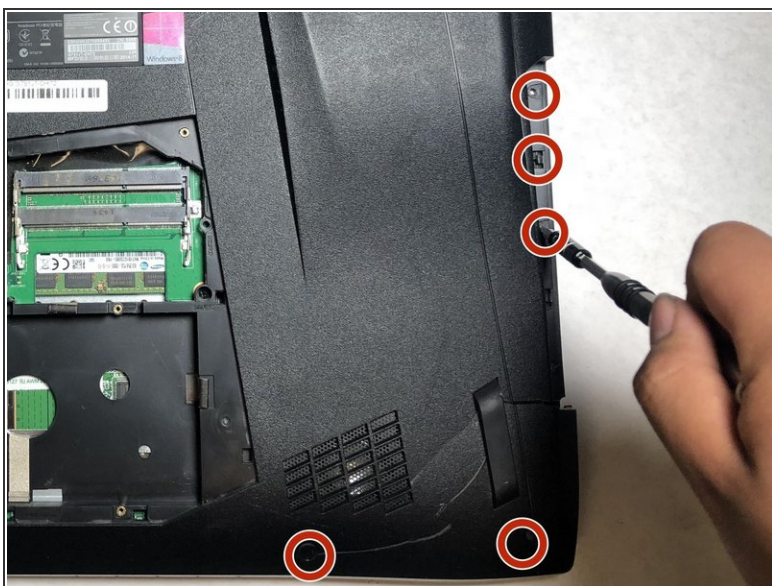

- Remove all 10 5.2mm Phillips screws holding the main back cover using the Phillips #1 screwdriver.

## Step 7

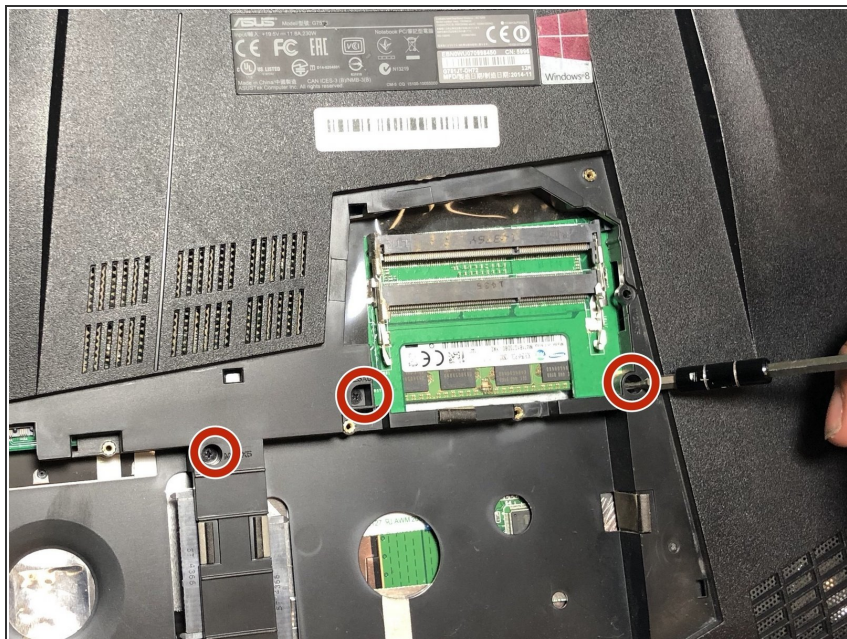

- Remove the four 5.2mm screws directly behind the backing plate using the Phillips #1 screwdriver.

## Step 8



- Flip over the laptop and pry the 2 vent covers off.





## Step 9





- Remove the two 6.8mm Phillips screws directly below the vent covers using the Phillips #1 screwdriver.

## Step 10

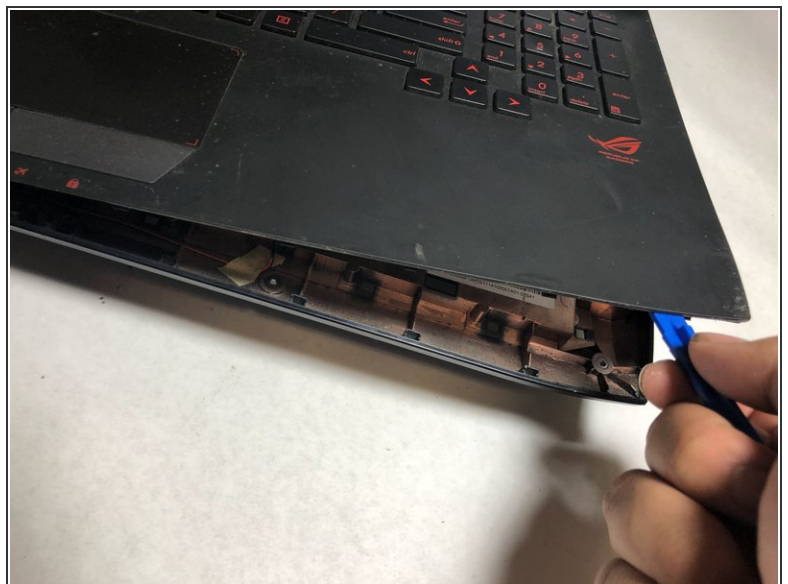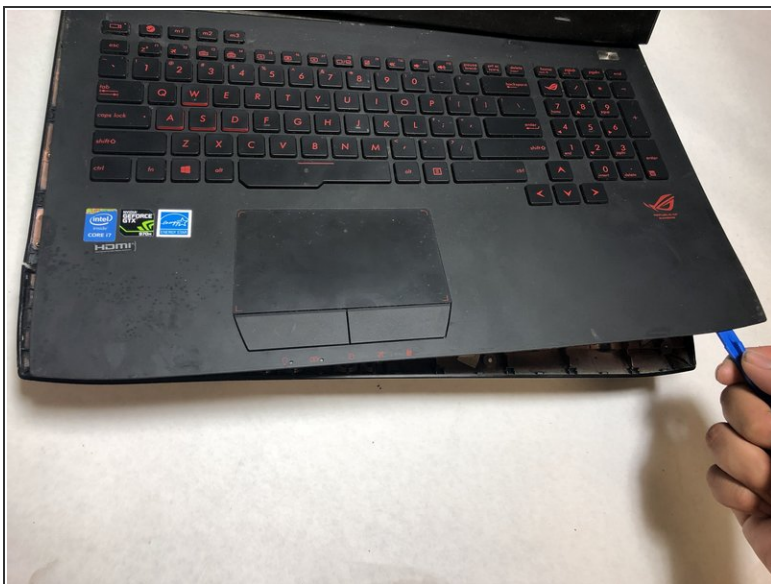


- Pry along the edges of the keyboard to lift it up.
- ⓘ Be careful not to damage the ribbon connectors.

## Step 11

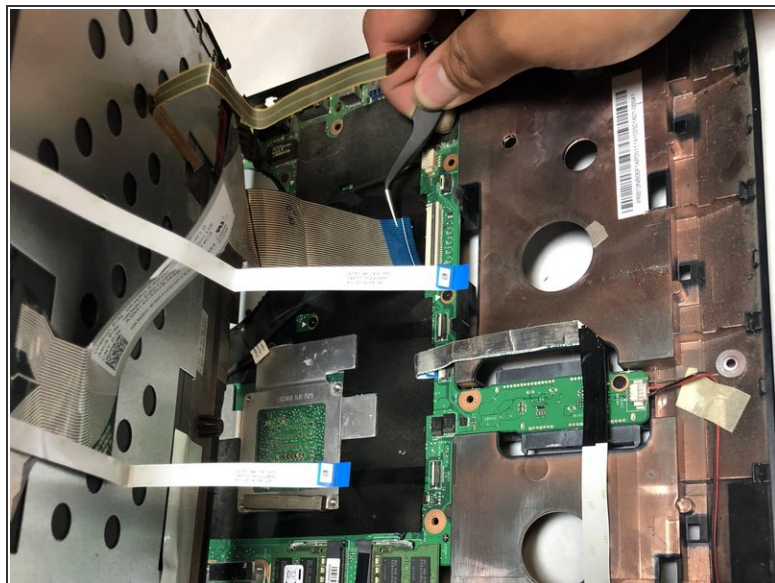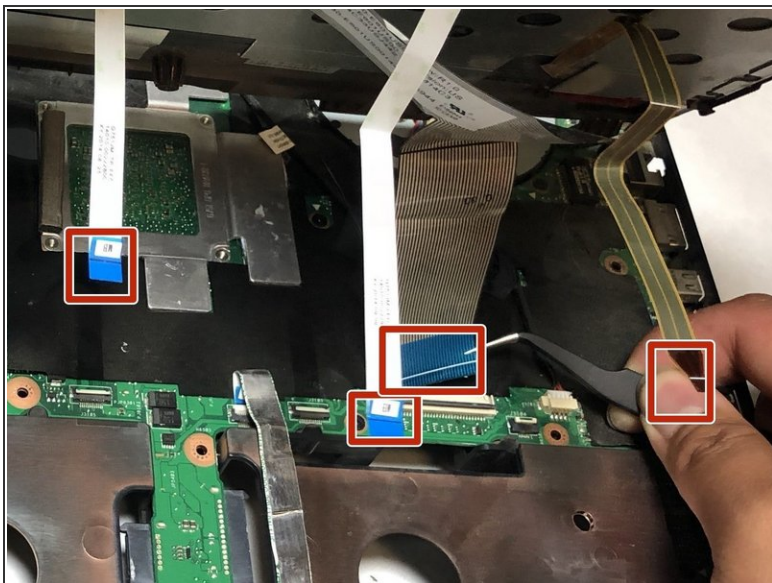

- Disconnect all 4 ribbon connectors with a tweezer.

## Step 12

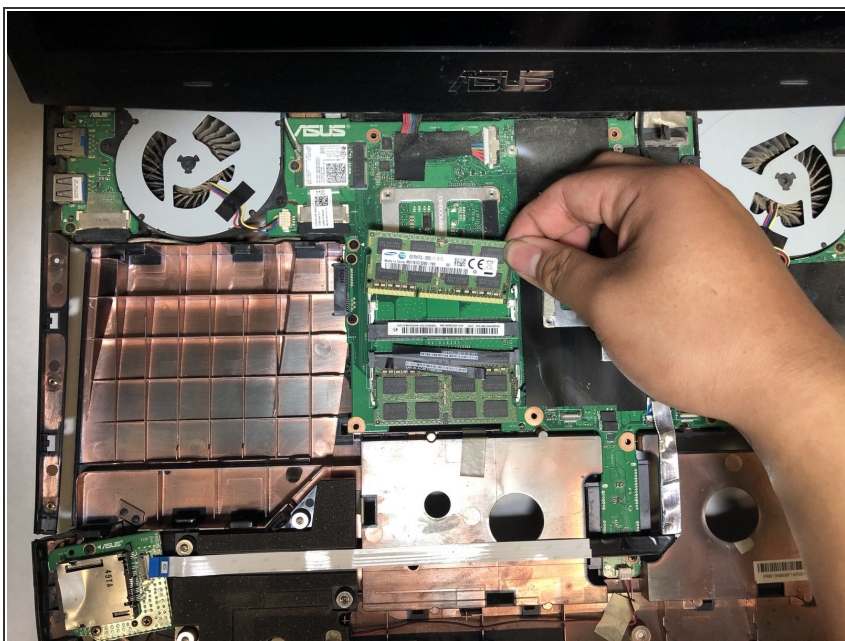

- Carefully, pull on the side tabs to release the RAM card.

To reassemble your device, follow these instructions in reverse order.