


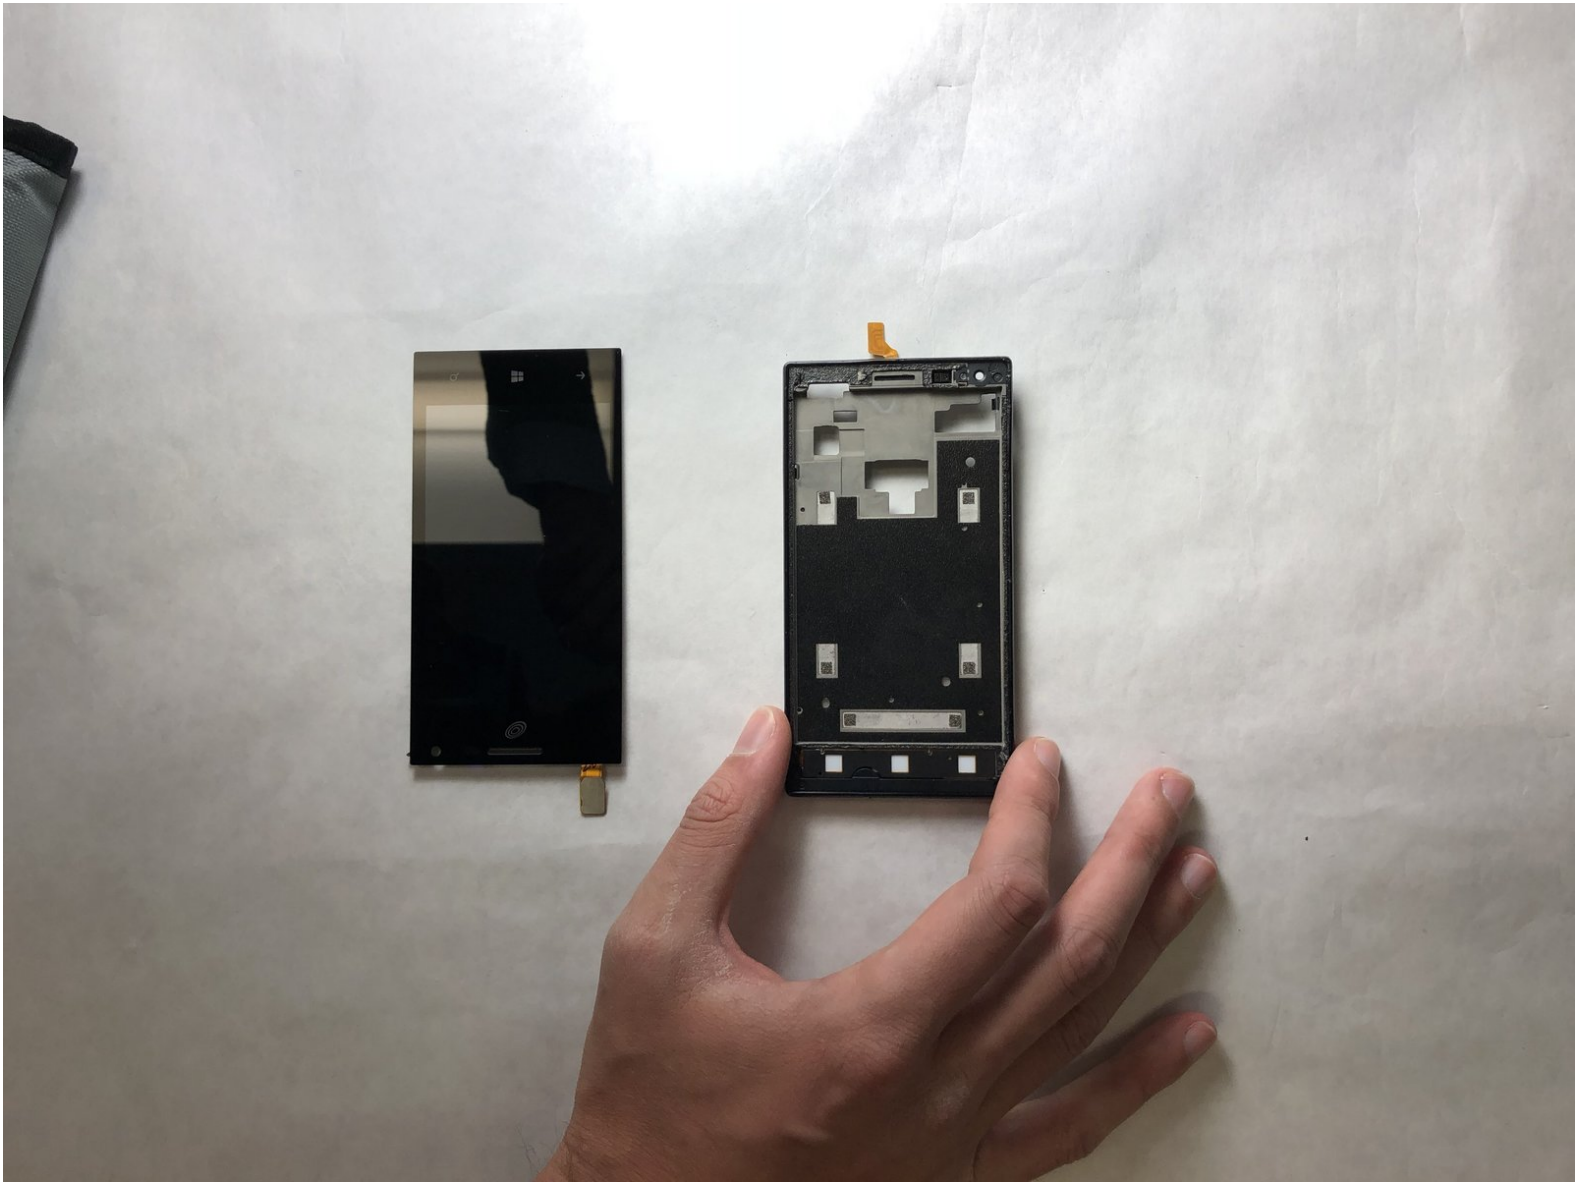

# Huawei Ascend W1 Display Replacement

Use this guide to replace the front screen on...

Written By: Tanner Cline



# INTRODUCTION

Use this guide to replace the front screen on your Huawei Ascend W1. This guide will show you how to remove the old display. Remember to be careful when removing all the parts as parts can break easily.



## TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [Small Needle Nose Pliers](#) (1)
  - [Tweezers](#) (1)
  - [Hair Dryer](#) (1)
-

## Step 1 — The phone's orientation.



- Flip the device over so that the back of the phone is facing you and the screen is against your palm.

## Step 2 — Removing the back cover.



- Locate the slit at the bottom of the back cover.
- Using your fingernail, lift up on the back cover to expose the battery.

## Step 3



- Lift the back cover off the phone.
- ⓘ The back cover is snapped onto the phone so you will feel it unsnapping as you remove it.


## Step 4 — Removing the battery.



- Find the indented notch at the base of the battery.
- Lift the battery out of the phone with your fingers by pressing forward and lifting upward.




## Step 5 — Remove all the screws.

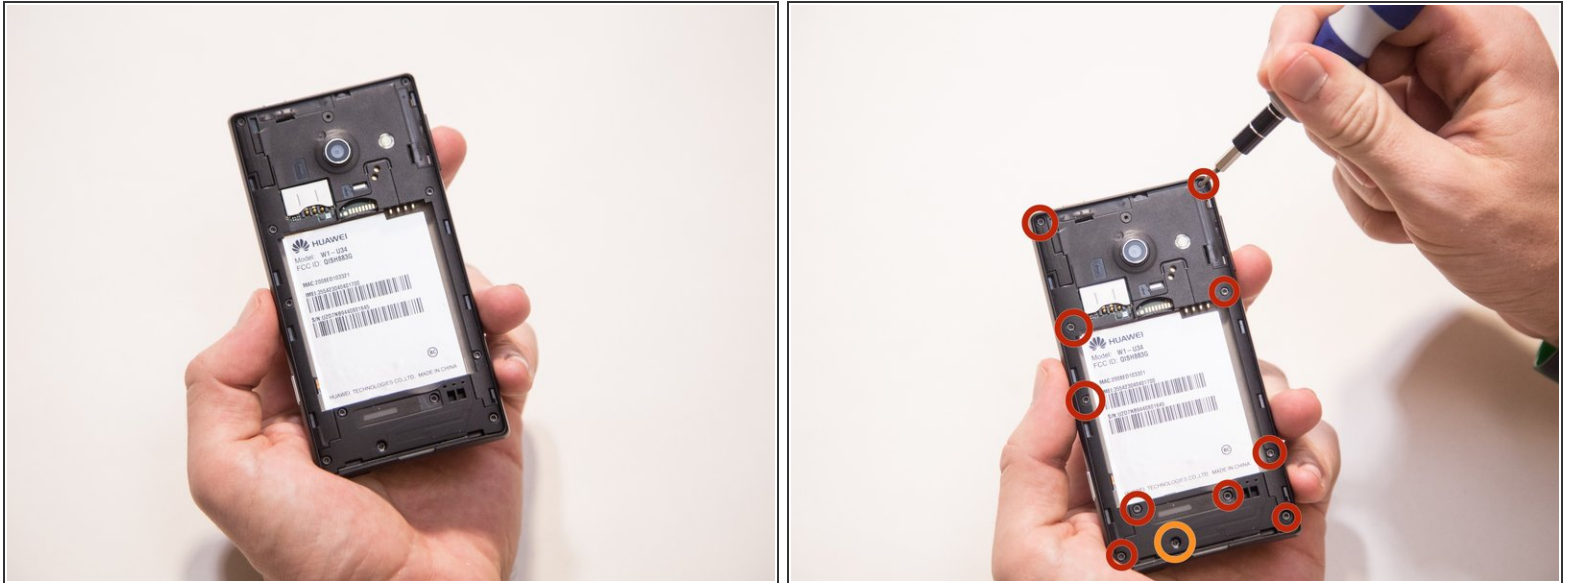


- After removing the battery, remove the screws using a T6 screwdriver.
- There are eleven screws that hold the middle cover to the rest of the phone.
- The screw that is marked by the orange circle is covered by a white dot.

## Step 6 — Removing lower section of the middle cover.

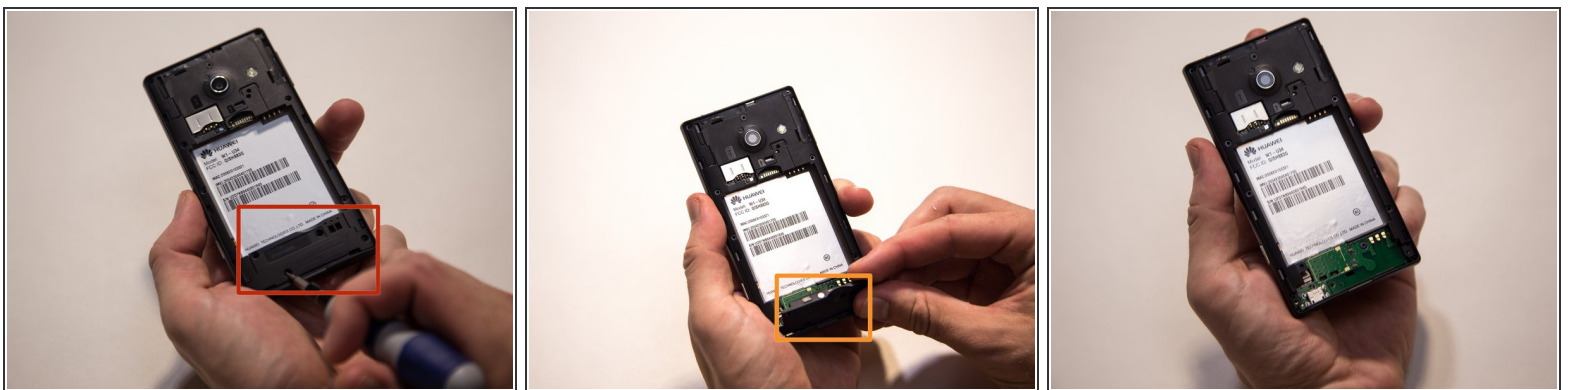


- After all the screws are removed, use your fingers to remove the lower section of the middle cover.
- Pull the lower section of the middle cover outward towards you, exposing the circuit board underneath.

## Step 7 — Removing the rest of the middle cover.

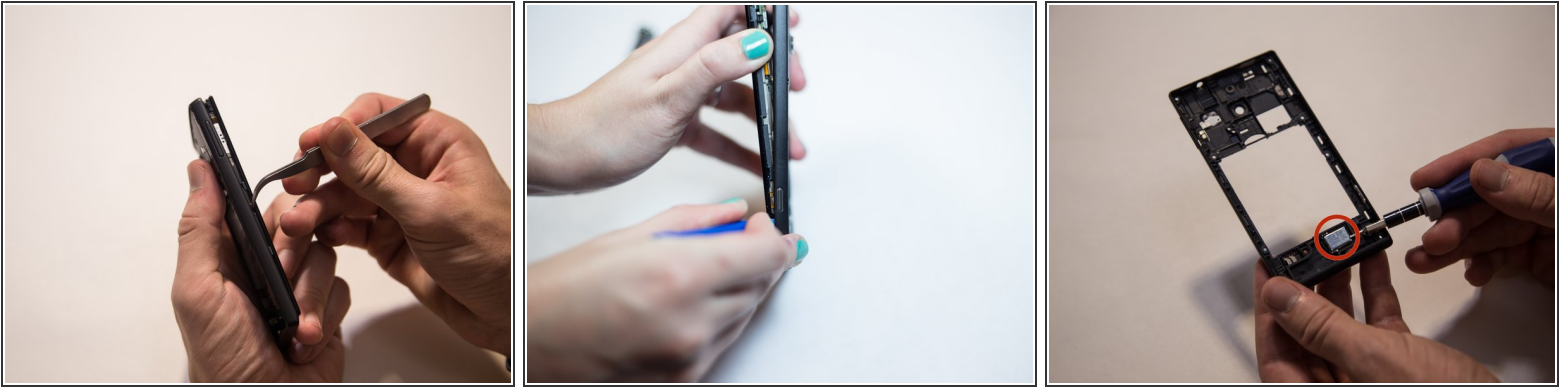

- Begin working your way around the sides of the cover plate, unsnapping it gently.
- The middle cover is a thin piece of plastic with the external speaker inside of it.
- ☑ Be **gentle** as you remove circuit cover. The parts might break if you are too forceful.

## Step 8 — Locating the antenna.

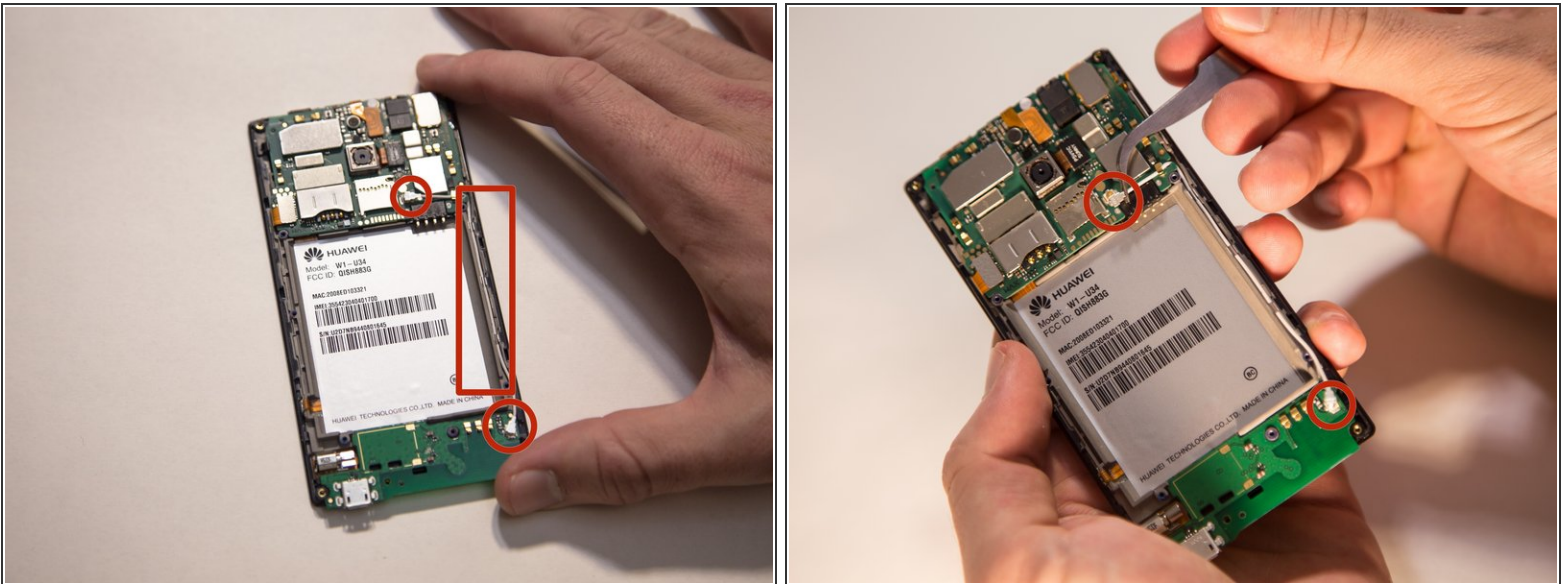


- ⓘ The middle covers are removed.
- The antenna is a thin white wire that connects to the circuit board in two locations.

## Step 9 — Removing the antenna



- Lift gently at each connector of the white wire to disconnect the antenna from the port.

## Step 10 — Motherboard

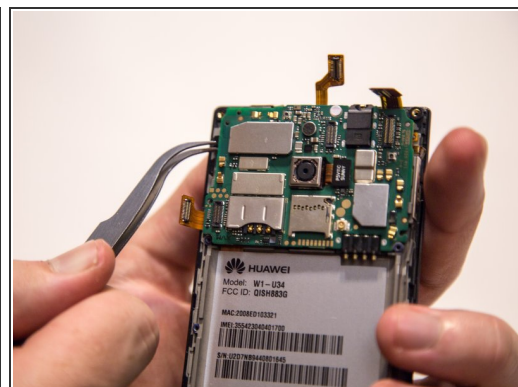

- Use a plastic spudger or your fingers to gently pry up the four flex cables from the main board.



## Step 11



- i** With the back of the phone facing you, there will be a small black clip on the left side holding the main board in place.
- Gently pry up near the small black clip with your fingers or a plastic spudger to detach the main board.



## Step 12 — Display



- Gently pry up near the small black clip with a plastic spudger to detach the charging board.



## Step 13

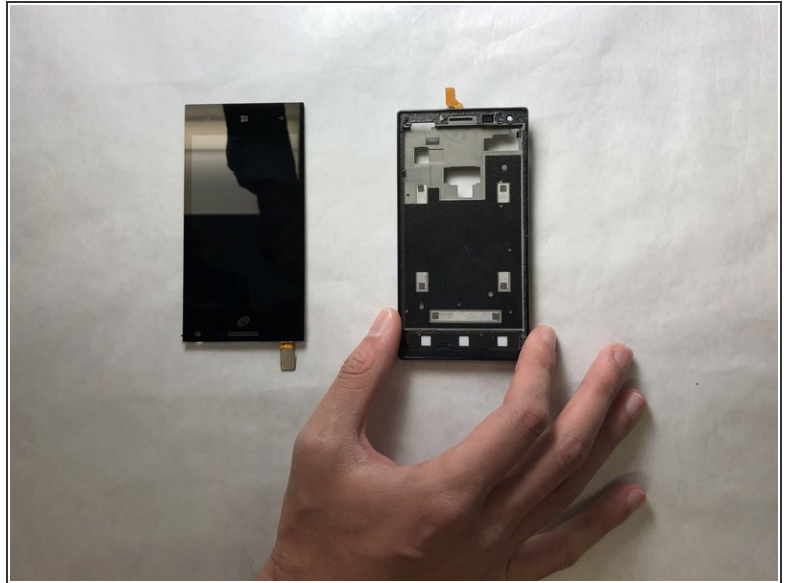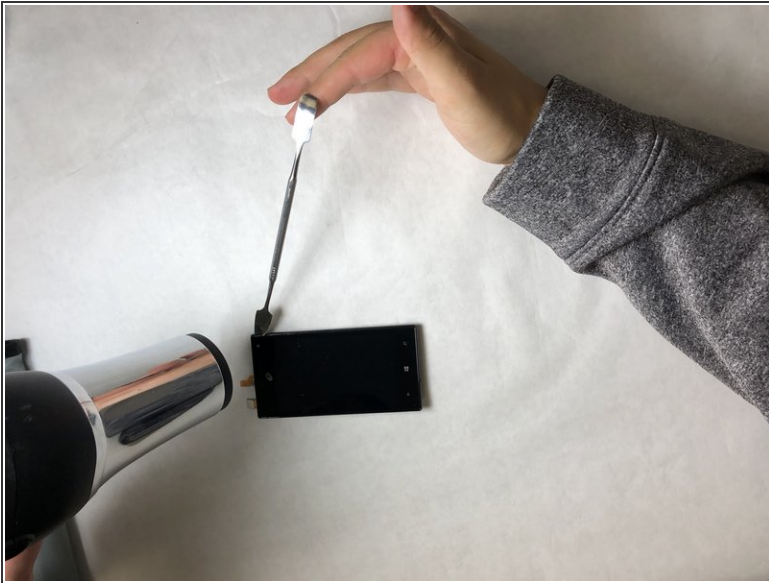

- Apply heat using a heat gun or blow dryer in close proximity to the device. Then use the metal spudger to pry the display screen from the frame.

To reassemble your device, follow these instructions in reverse order.