



# Toshiba HD-A2 Fan Replacement

Replace the broken fan to avoid overheating of the DVD player.

Written By: Nouriyah Saleh



---

## INTRODUCTION

If you find that your DVD player is overheating, use this guide to remove and replace the fan.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top Panel



- Remove the three 6mm Phillips head screws on the back of the DVD player with a Phillips #1 screwdriver.


## Step 2



- Remove the two 3mm Phillips screws on each side of the DVD player using the Phillips #1 screwdriver.



### Step 3

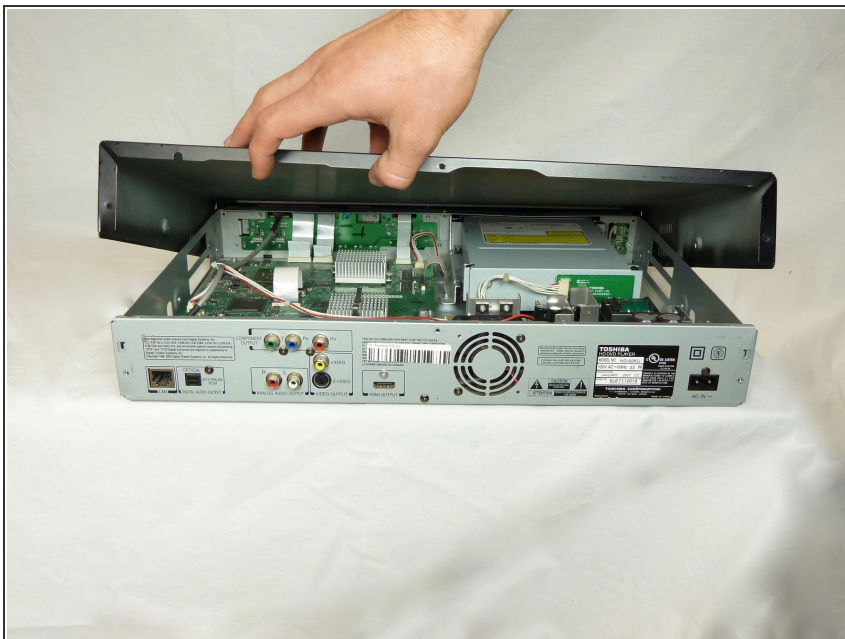


- Using your hand, gently lift the black top panel and safely place it off to the side.

### Step 4 — Fan





- The fan will be attached to the case, connected to the yellow circuit board.

## Step 5

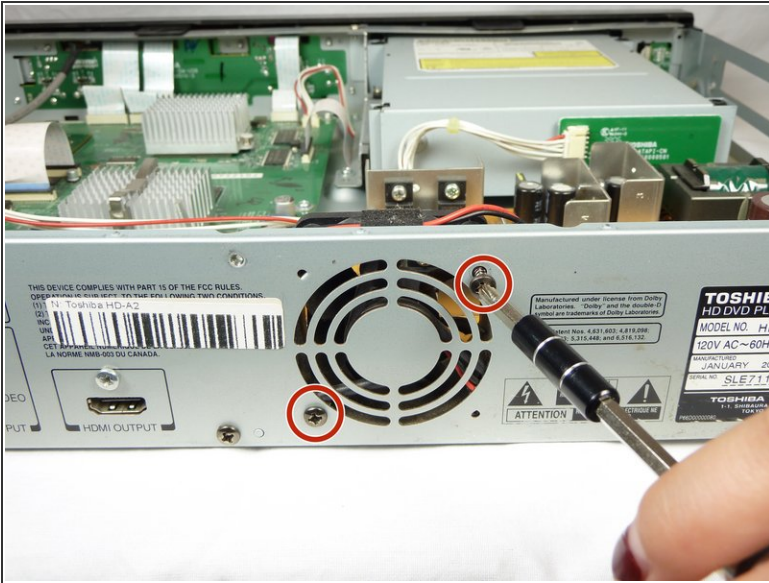

- Remove the two 7mm Phillips head screws attaching the fan to the case of the DVD player.

## Step 6

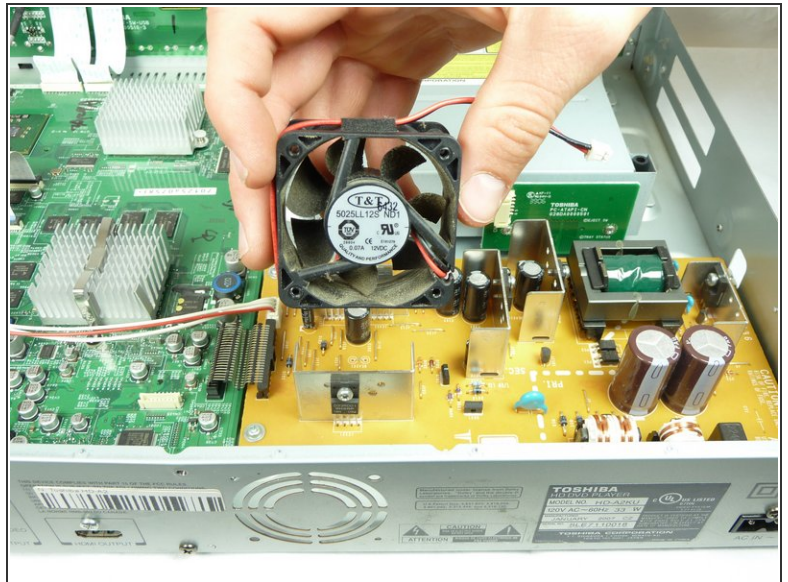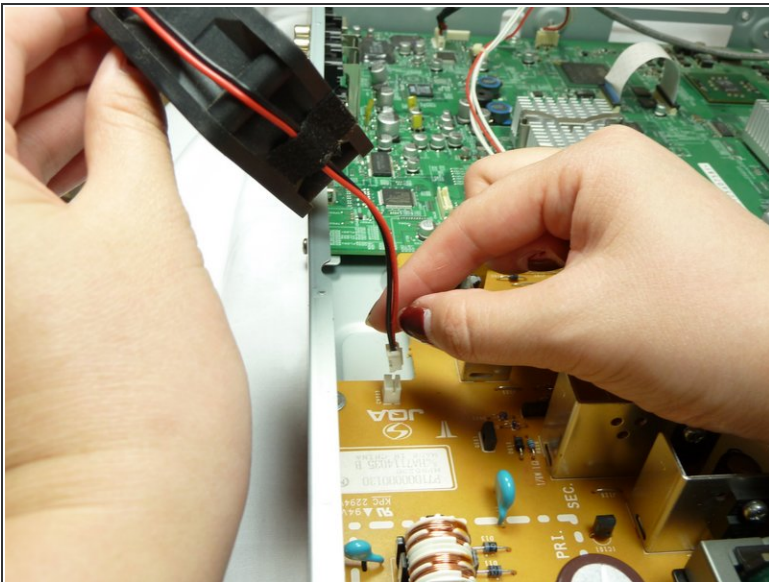

- Use your fingers to unplug the red and black wire from the yellow circuit board to completely remove the fan.

To reassemble your device, follow these instructions in reverse order.