



# Acer Aspire V3-551-8469 RAM Replacement

Use this guide to replace RAM in an Acer Aspire V3-551-8469.

Written By: Maritsa Garcia



---

## INTRODUCTION

The Random Access Memory (RAM) stores information that needs to be retrieved quickly or often. The RAM is one common component in a laptop that fails often and needs to be replaced. Use this guide to replace broken the RAM on your Acer Aspire V3-551-8469 laptop. No complicated manipulation is required.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — RAM




- To release the battery, slide the orange tab to the right with a spudger.
- The battery is now released and can be picked up and set to the side.

## Step 2

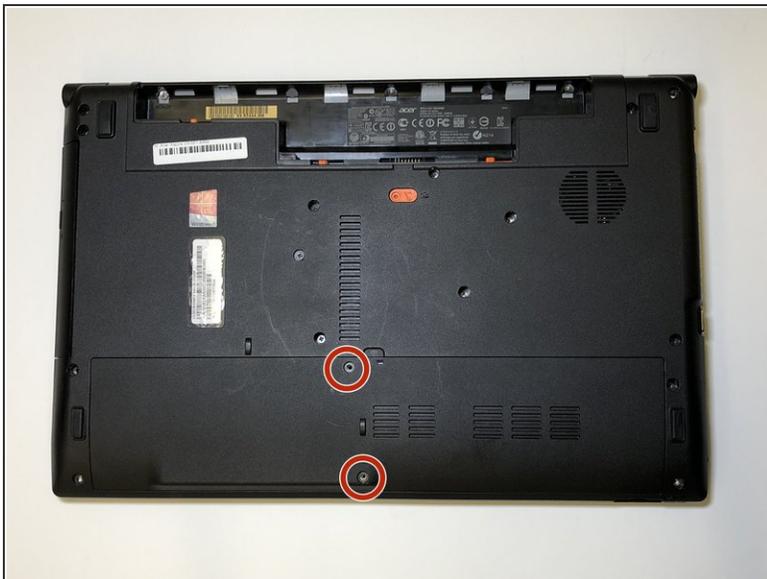


- Remove the two 5.3 mm Phillips #0 screws.

### Step 3

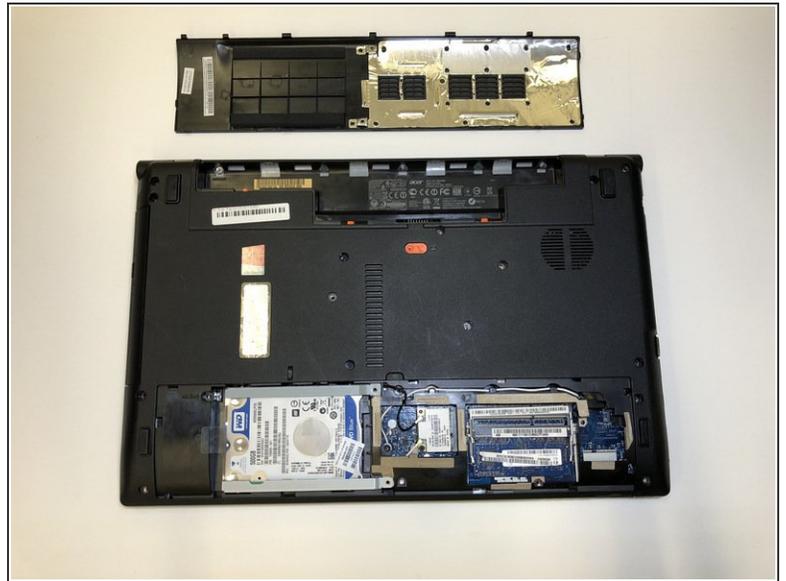

- Pull off the back panel.

### Step 4

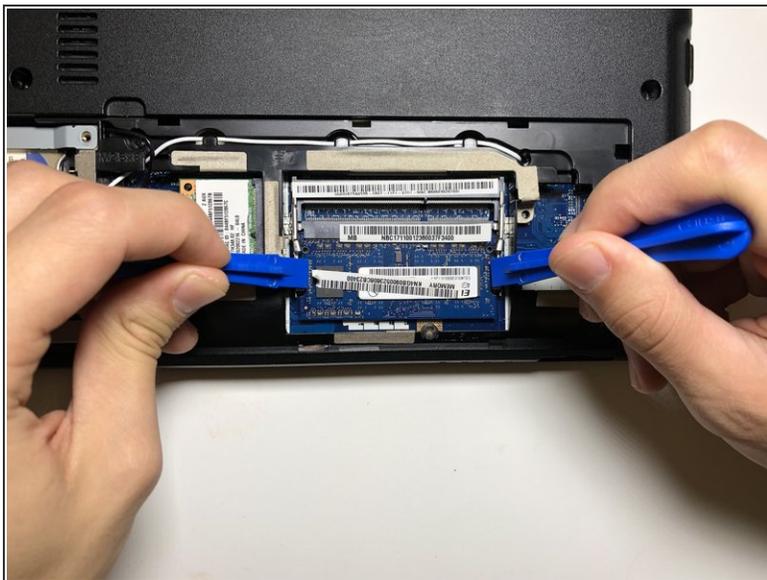

- Use two plastic opening tools to pry the two clips outward to release the RAM chip.

To reassemble your device, follow these instructions in reverse order.