


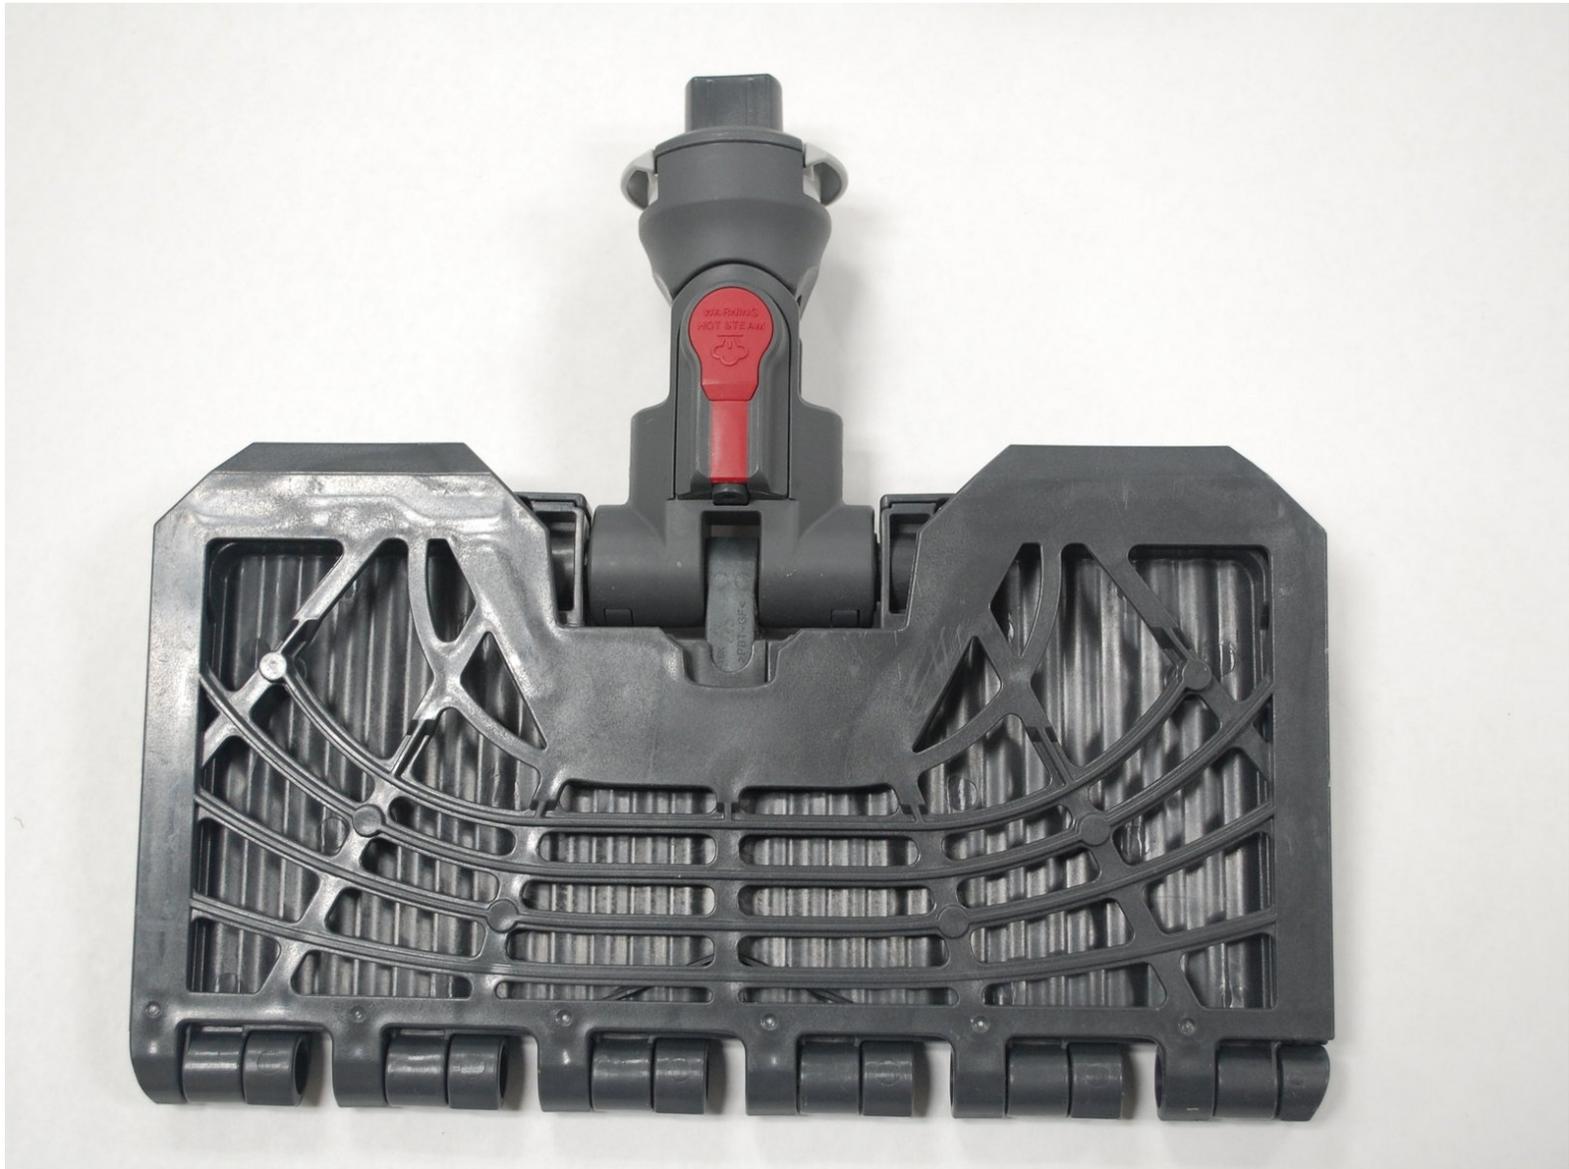

Shark Professional Steam Pocket Mop Head Replacement

Replace the mop head of the Steam Pocket Mop in case of damage to the part.


Written By: Tyler Wicke



INTRODUCTION

If you need to replace or re-install the mop head of your Steam Pocket Mop, this guide will walk you through the process. There are no tools needed.

Step 1 — Mop Head

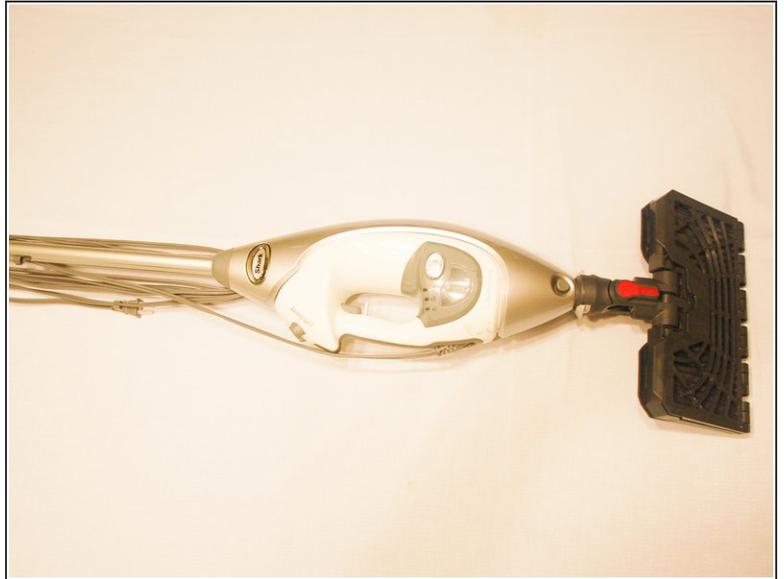

- Turn off the Steam Pocket Mop and unplug it from the wall.

⚠ Be sure that any water in the water tank cools before proceeding.

Step 2



- Push down on the round, grey release button near the connection point, while pulling the mop head out.
- The mop head should slide out and detach.

☑ When reassembling, you should hear it click into place if it is properly installed.

To reassemble your device, follow these instructions in reverse order.