



# Lenovo IdeaPad Y410p Ram Replacement

This guide easily explains how to replace the ram in a Lenovo IdeaPad Y410p.

Written By: Nick Torres



---

## INTRODUCTION

This guide will help you replace the RAM and fix issues like, your laptop running slowly or commonly used apps and functions showing error messages.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-


## Step 1 — Battery



⚠ Turn off your laptop before starting.


- Flip the laptop over so the model stickers are facing up.

## Step 2

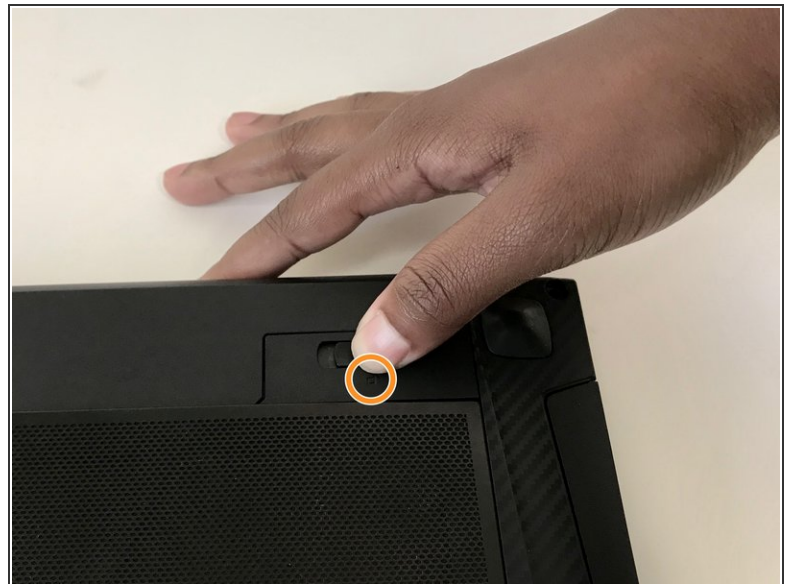

- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.

### Step 3

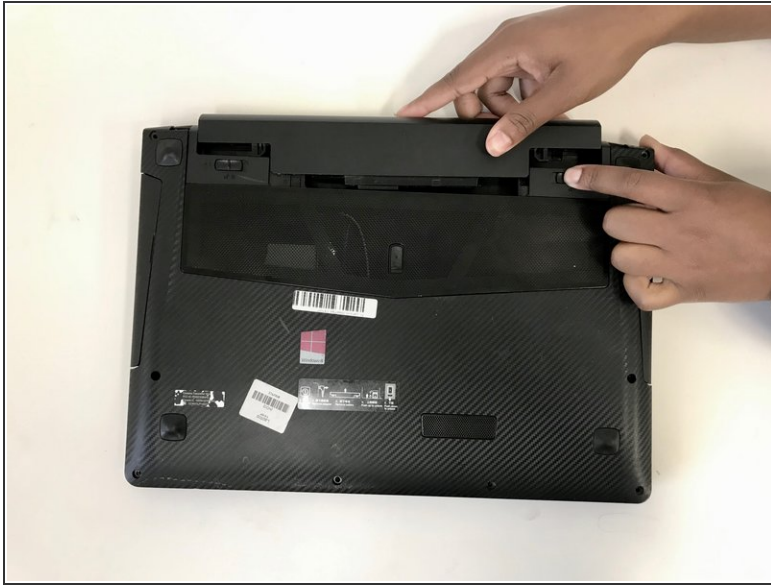

- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.


### Step 4 — Ram



- Using the Phillips #0 screwdriver remove the eight 8mm screws that fasten the bottom cover.
- Lift the bottom cover off using a metal spudger and set it aside.





## Step 5

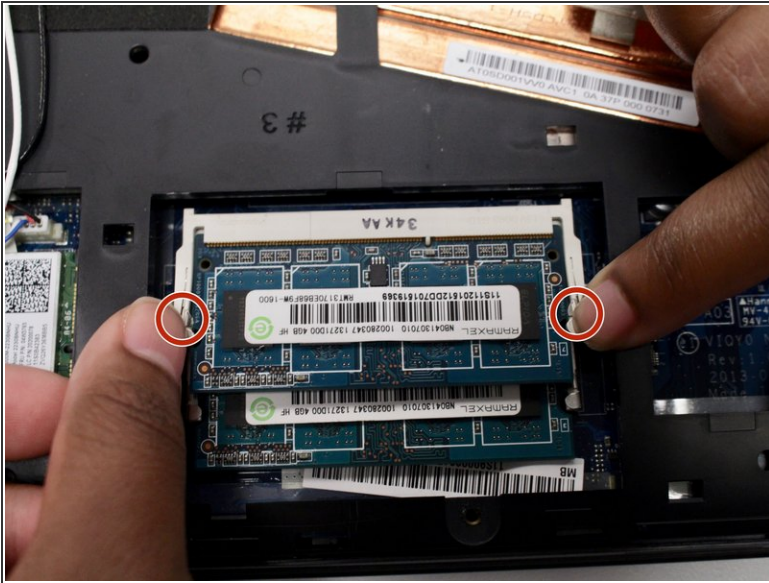

- Simultaneously pull apart both clips that are holding the RAM module down.
- When the RAM module is released carefully pull it out.

## Step 6

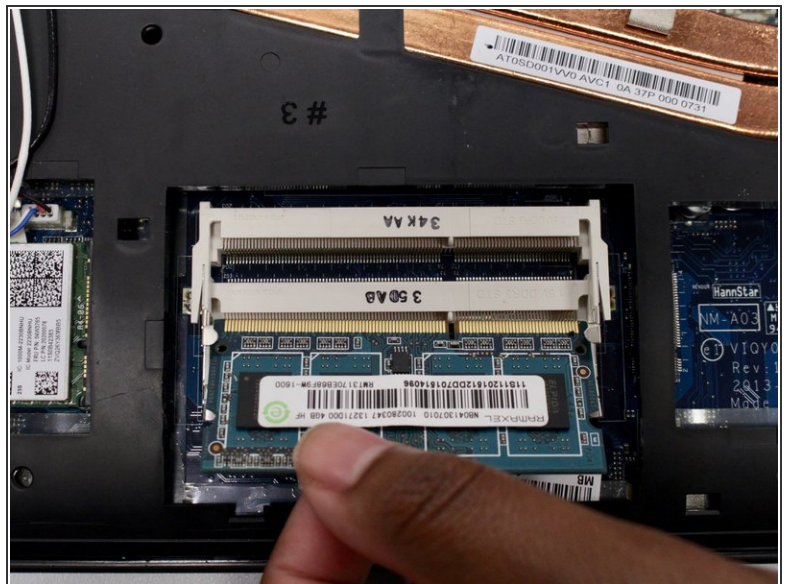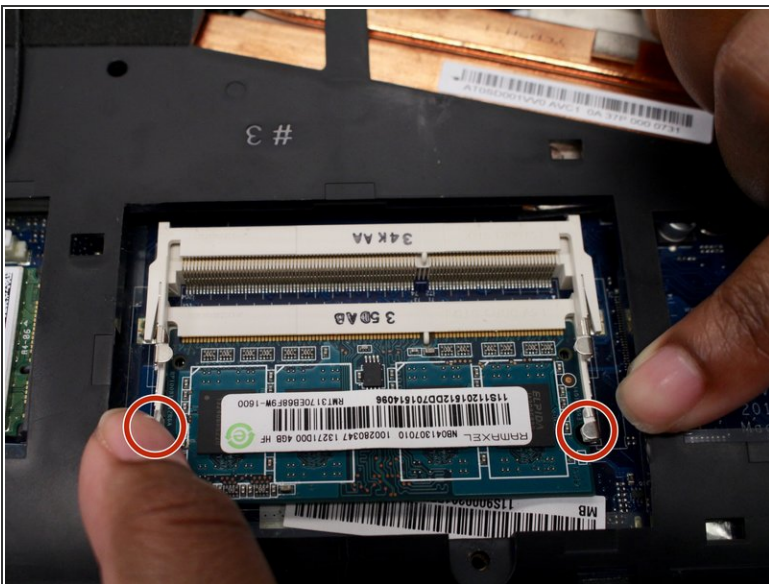

- ⓘ There is a second ram module under the first one.
- Repeat Step 5 with lower Ram module.

To reassemble your device, follow these instructions in reverse order.