



Asus K55VD RAM Replacement

Replace your Asus K55VD laptop's RAM to improve the speed and response time of your device.

Written By: Dahlia Adam



INTRODUCTION

When the RAM is replaced, you will have the ability to easily access frequently used files, boost the speed of your laptop and eliminate error messages. Before you begin, you must ensure that the device is completely powered off and the battery is removed.




TOOLS:

- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



 Power off the device completely

- Flip the device over to its back cover.
- Use the switches to release the battery from its adapter.

Step 2 — RAM



- To access the compartment that holds the RAM, flip the laptop so the bottom cover is facing upward and the battery compartment is facing away from you.

Step 3




- Use a Phillips #0 screwdriver to remove the two screws that hold down the compartment cover.

Step 4



- Lift the cover and locate the green and blue RAM sticks on the right side of the device.

Step 5

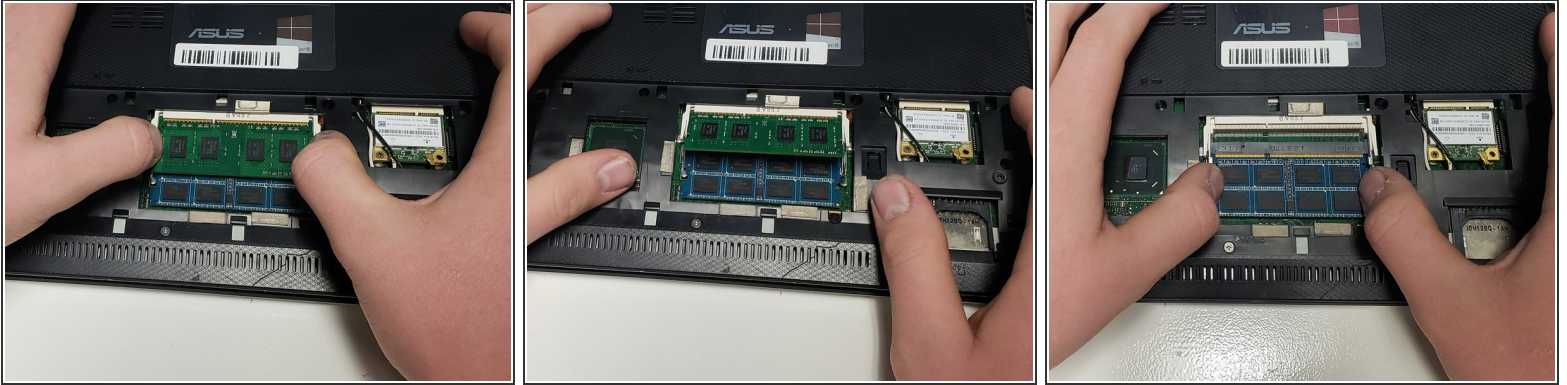

- To remove the green RAM stick, push outward on the inner sides of the two metal chip holders simultaneously.
- Pull out the stick once it is released from the holders.
- Repeat this step on the lower level that holds the blue RAM stick.

To reassemble your device, follow these instructions in reverse order.