




Nokia Lumia 925 Front Camera Replacement

This guide will explain how to replace the front camera of the Nokia Lumia 925.

Written By: O'Ryan Lacour

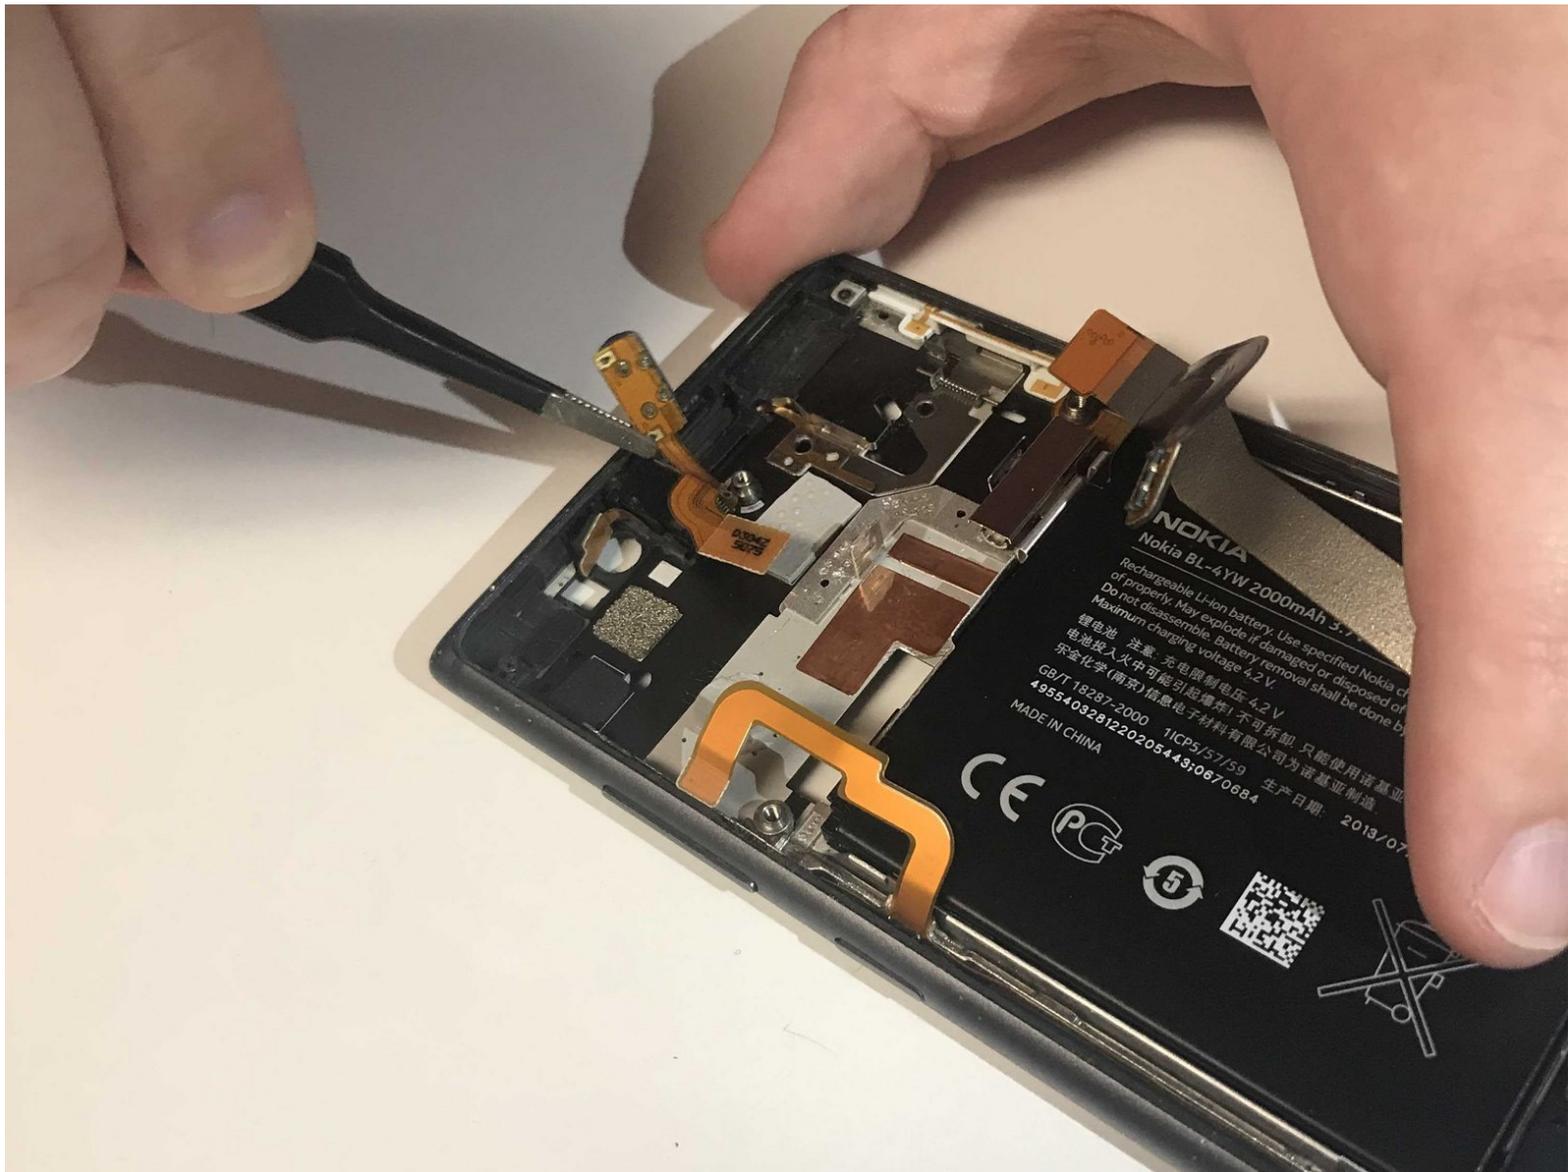

 **TOOLS:**


- [T7 Torx Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Motherboard



- Remove the sim card holder by inserting tweezers into the hole. Push down and the holder will spring back up.
- Pull out the holder until it is completely separate.
- ⓘ Something like a paperclip will work if there are no tweezers available.

Step 2

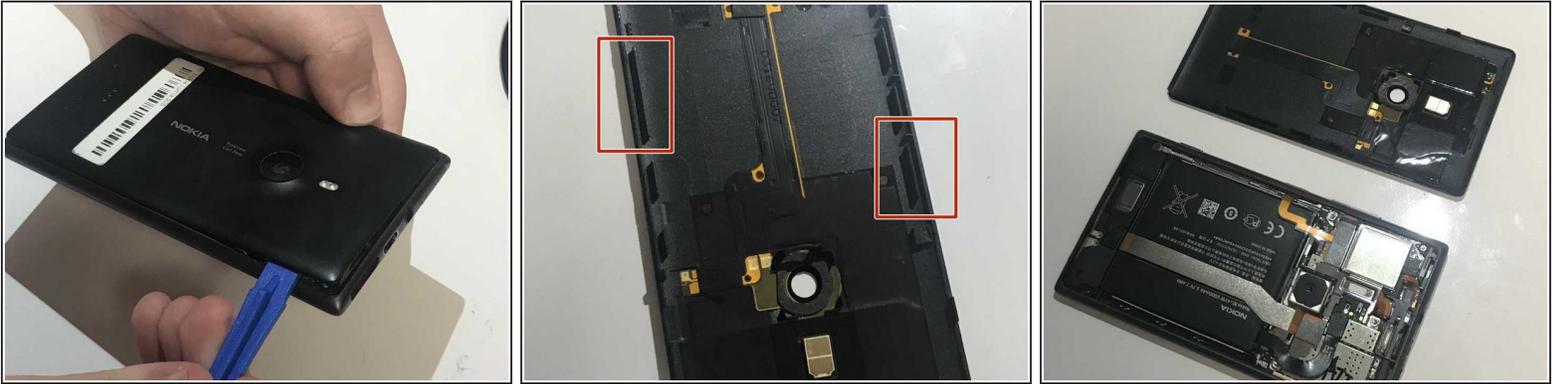

- Slide a plastic opening tool under the back cover.
 - Slide the tool around the outsides of the cover to fully dislodge the pins holding the cover to the phone.
- ⚠ Some pins are facing the opposite way from the others.

Step 3



- Remove the 3 screws using the T7 Torx screwdriver.
- Unclip the black tab connector.

Step 4



- Remove the silver metal cover.

⚠ Be careful of the tape under the right square side of the panel. Using a spudger helps.

Step 5



- Unclip the two orange tabs.
- Remove the four silver screws using the T5 Torx screwdriver.

Step 6




- Remove the motherboard by sliding tweezers between it and the back of the screen. Lift up.

Step 7 — Display





- Push the screen from the inside of the phone.
- Pull the screen off.
- ⓘ Slide the electronic strip through the small opening.

Step 8 — Speaker

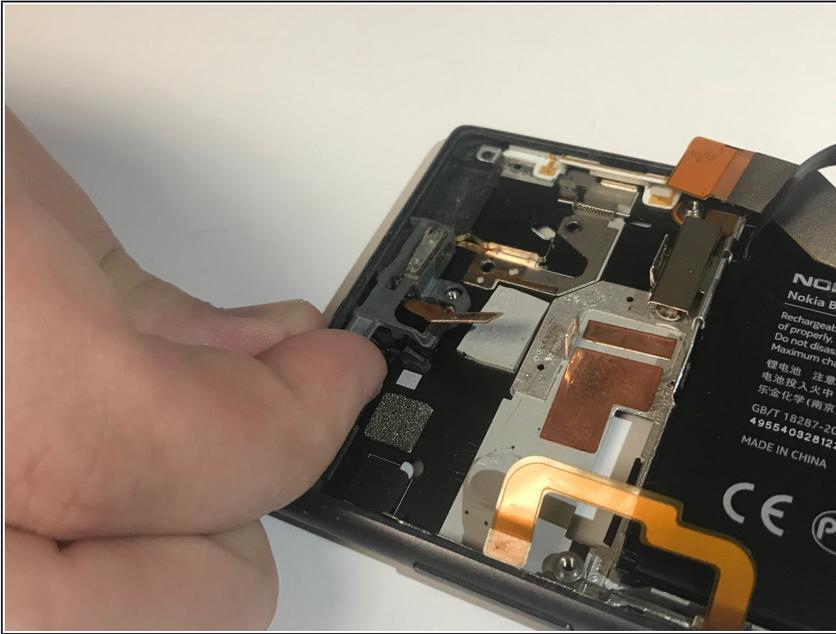


- Locate the grey speaker/camera cover.
- Carefully remove the cover with either a pair of tweezers or your fingers.

Step 9

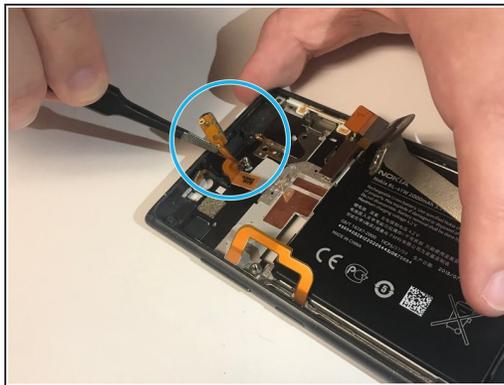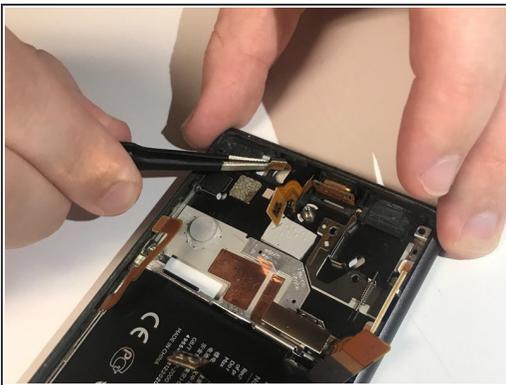

- With a pair of tweezers, gently remove the orange colored tab closest to the speaker.

Step 10 — Front Camera

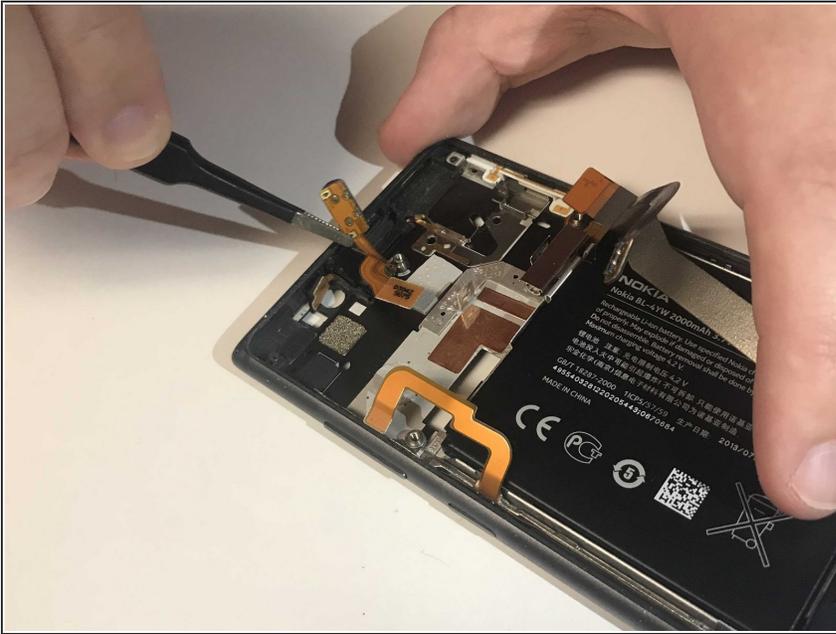

- Pull at the orange section until it becomes loose.
- ⓘ It is located in the upper leftmost section of the phone behind the front camera.

Step 11



- Pull vertically on the same orange section until the front camera comes out.
- ⚠ The front camera as well as the speaker may come out after the last step so be careful.

To reassemble your device, follow these instructions in reverse order.