


Samsung Galaxy Core Prime Home Button Replacement

This guide will help users replace their Samsung Galaxy Core Prime home button.

Written By: Kate Vogel

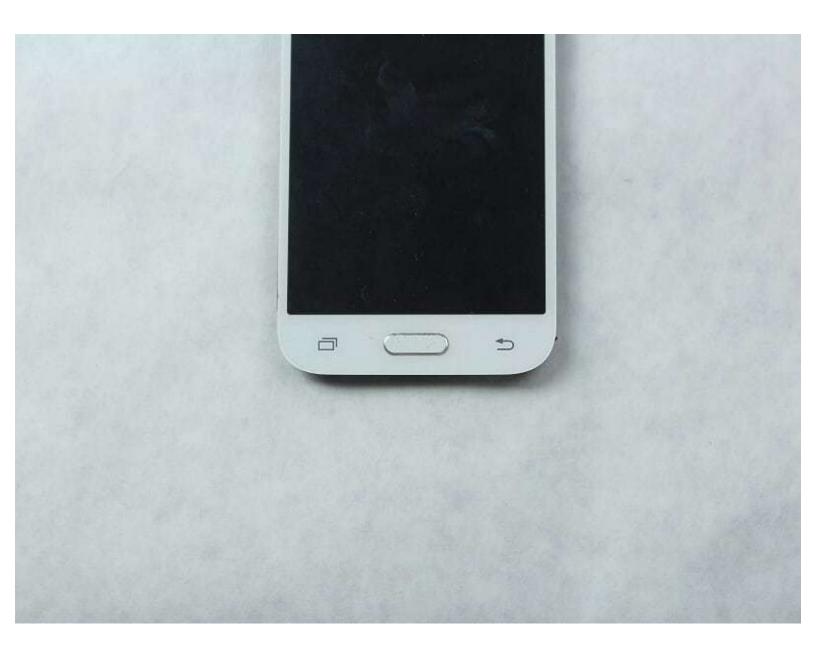

INTRODUCTION

A common problem you may have with the Samsung Galaxy Core Prime is a sticky or broken home button. Rather than go somewhere to fix it you can use this guide to help you remove or readjust the button. You will need tweezers, a heat gun or hair dryer, a Phillips #00 screwdriver, and an iFixit Opening Tool.



TOOLS:

- Heat Gun (1)
- iFixit Opening Tools (1)
- Tweezers (1)
- Phillips #00 Screwdriver (1)

Step 1 — Battery




 Turn the smartphone off by using the power button on the right-hand side.

Step 2



 Turn the smartphone over so that the rear camera is face up.

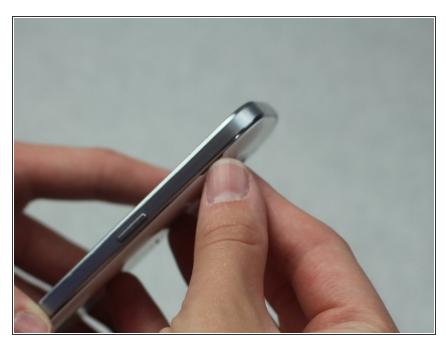

 Use your fingernail or a flat tool to lift the back cover.

Step 4





• Locate the battery near the bottom of the phone. The battery is square, flat, and is labeled 'SAMSUNG'.




 Use your fingernail or a flat tool to lift the battery out.

Step 6 — Home Button



 Use your thumb to remove the sim card.



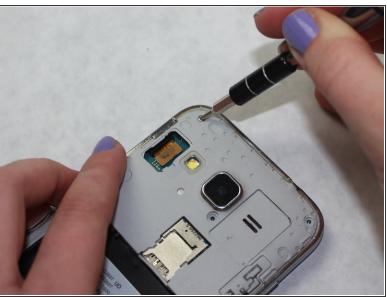


Use a Phillips #00 screwdriver to remove the eight 4 mm screws that secure the midframe.

Step 8




- Heat the frame with a hair dryer or heat gun. Do this until the adhesive is loosened.
- ↑ Take care when using these heating tools.

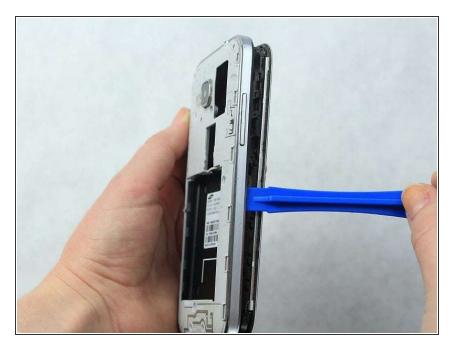


Use a flat tool or the <u>iFixit Opening</u>
<u>Tool</u> to lift the midframe.

Step 10

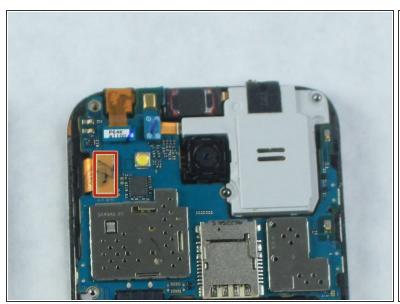



Disconnect the LCD screen/touch screen ribbon from the motherboard using tweezers.

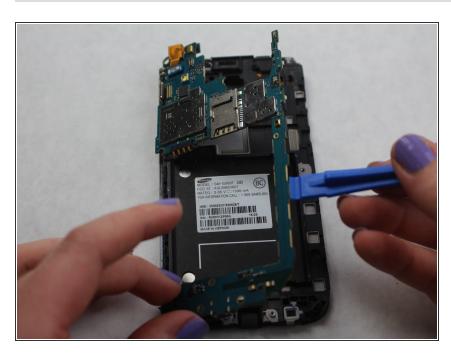


 Lift the motherboard out using the <u>iFixit Opening Tool</u>.

Step 12




 Heat the sides of the screen with a heat gun or hair dryer.

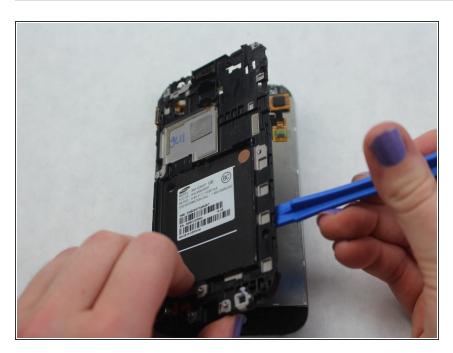

 Use the <u>iFixit Opening Tool</u> to remove the plastic panel that separates the motherboard and the screen.

Step 14

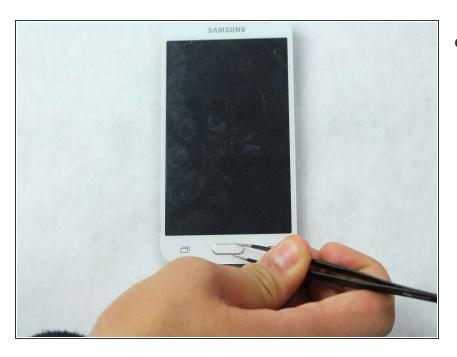

 Use tweezers to remove the home button.

To reassemble your device, follow these instructions in reverse order.