



HP 15-f162dx RAM Replacement

Written By: Abdulrahman Bogshan





TOOLS:

Essential Electronics Toolkit (1)

Step 1 — RAM



- ① Be sure to power off and unplug your device before you begin the repair.
- Use a small Phillips screwdriver to remove the four screws from the RAM cover. Remove the RAM cover.
- Using your fingers, pull the metal arms (located on both sides of the RAM stick) slightly away from it .
- ① The RAM will pop up by a few millimeters.
- ⚠ Remove it at an angle and not straight up so you don't damage the socket.

To reassemble your device, follow these instructions in reverse order.