



ASUS Transformer Book Flip TP500LA Hard Drive Replacement

This guide will show you how to access, remove, and replace the hard drive of the ASUS Transformer Book Flip TP500LA.

Written By: Set Strat



INTRODUCTION

Before proceeding with this guide, be sure you have all the required tools and the replacement hard drive.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)



PARTS:


- [250 GB SSD](#) (1)
- [500 GB SSD](#) (1)
- [1 TB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Hard Drive

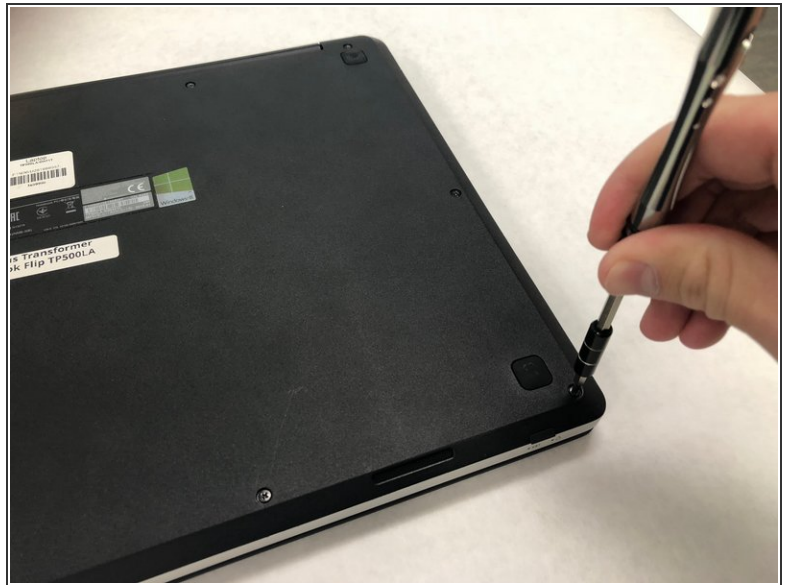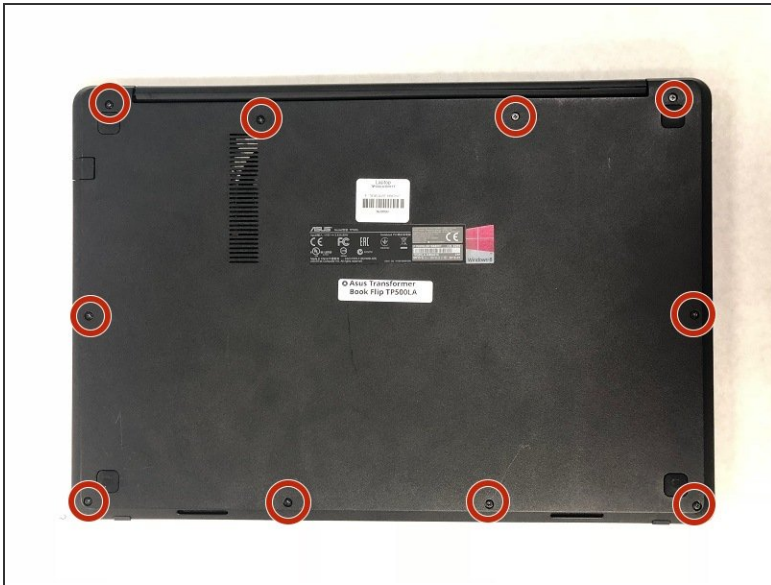



- Remove the ten 10.7 mm Phillips #0 screws from the back cover of the Asus laptop.

Step 2

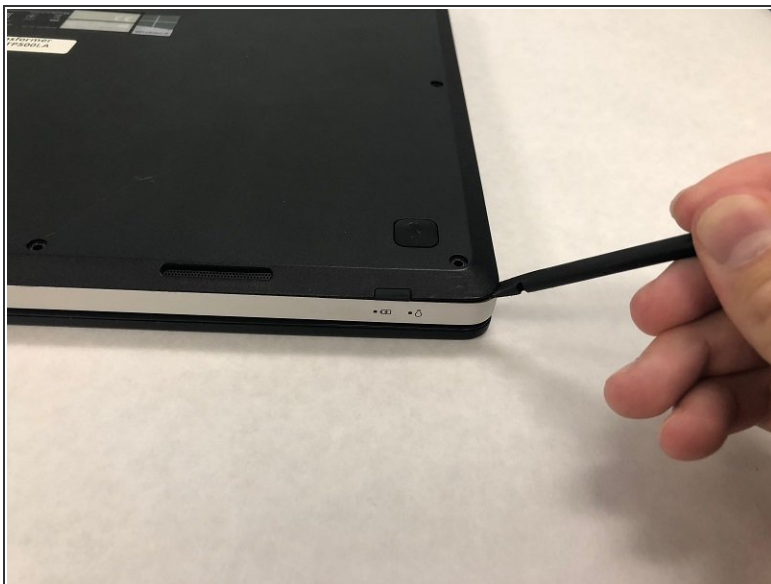

- Insert the heavy duty spudger between the back cover and the laptop frame. Pull the black pry tool along the edge of the laptop, unlatching the back cover from the frame.

Step 3

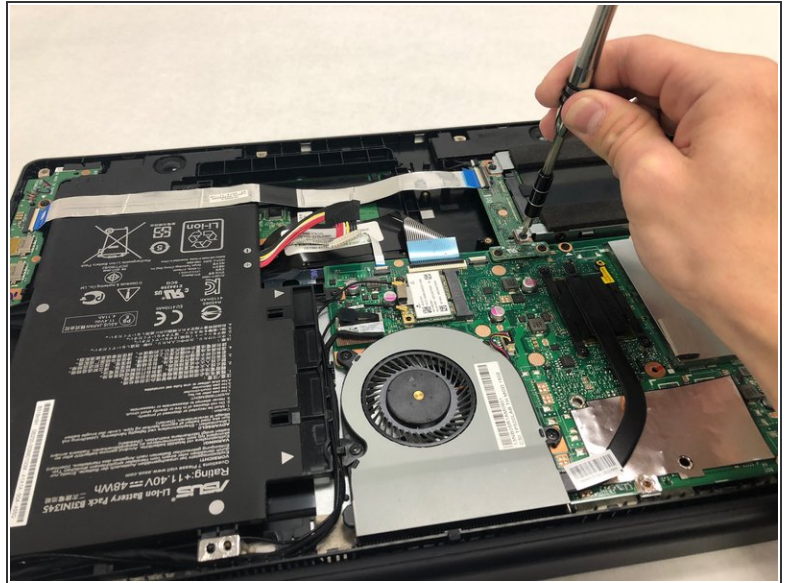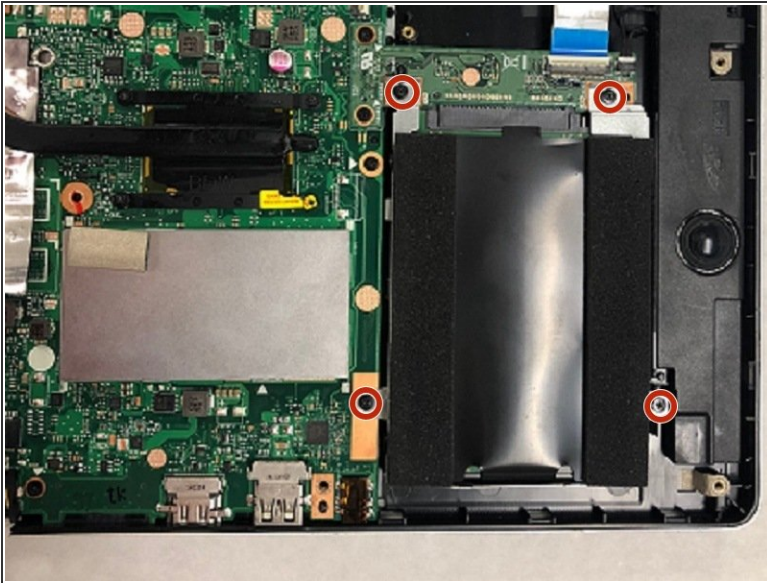

- Remove the four 4.7mm Philips #0 screws securing the hard drive.

Step 4



- Remove the hard drive by sliding it out of its socket.

To reassemble your device, follow these instructions in reverse order.