



# Chefman RJ-38-V2-35 Fryer Basket Replacement

This is a guide for replacing the fryer basket alignment clips on a Chefman RJ38-V2-35.

Written By: Benn Rutledge



---

## INTRODUCTION

If your Chefman RJ38-V2-35 air fryer basket is not snapping into place properly, here's how to replace the clips on the basket. This is a quick and easy guide with no special tools required.

---

### **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Fryer Basket



- ⚠ Make sure the air fryer is unplugged and the basket is cool enough to handle.
- Remove the basket from the air fryer.

## Step 2

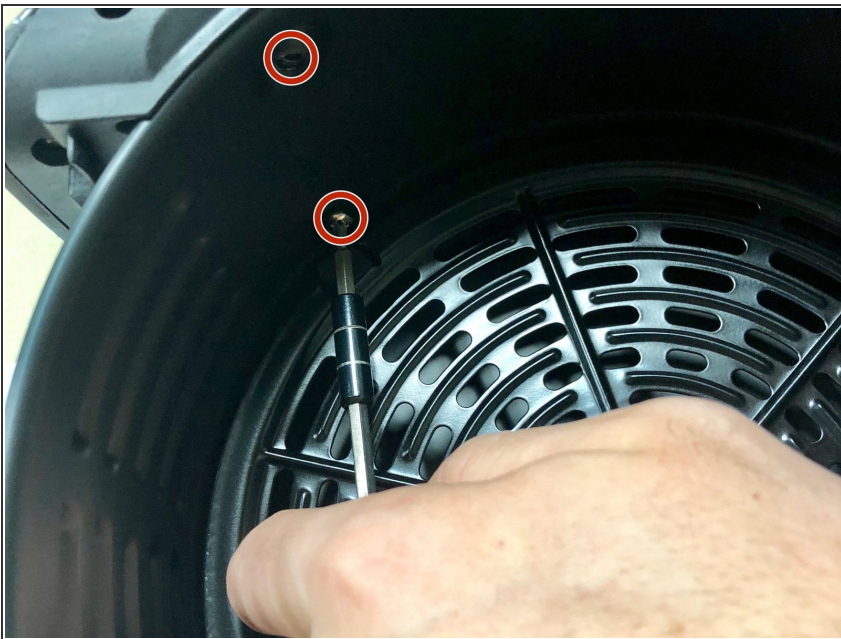

- Place the fryer basket on a flat surface.
- Using the Phillips #1 screwdriver, remove four 5mm screws on the inside of the fryer basket (left two screws shown).



### Step 3



- Separate the handle from the basket.

To reassemble your device, follow these instructions in reverse order.