



Asus ROG G74SX-DH73-3D Disc/Optical Drive Replacement

How to replace a Asus ROG G74SX-DH73-3D optical drive.

Written By: Jackson Reynolds







TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Disc/Optical Drive

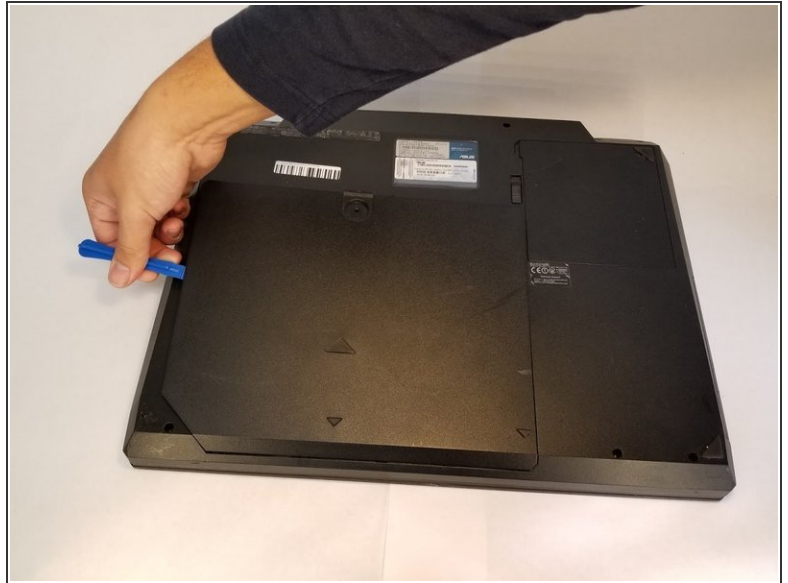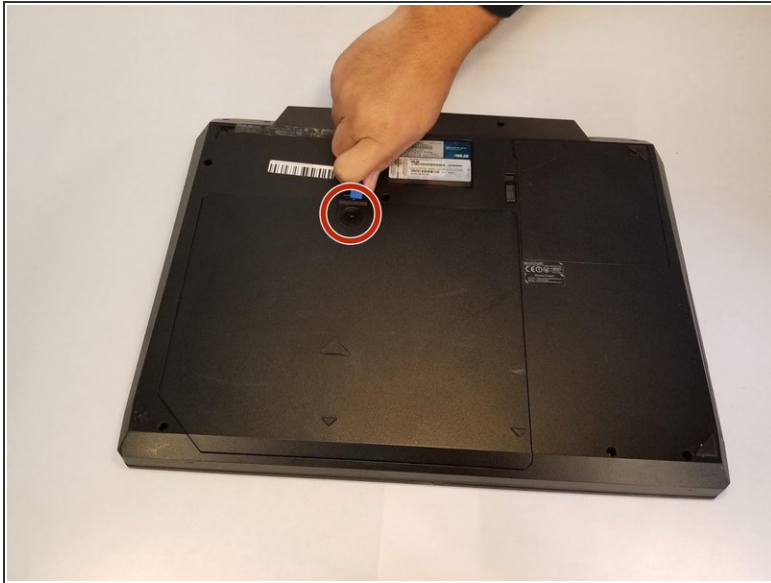


- Place the device upside-down. Unscrew the screw at the top of the cover and remove the cover by using a plastic opening tool.

Step 2

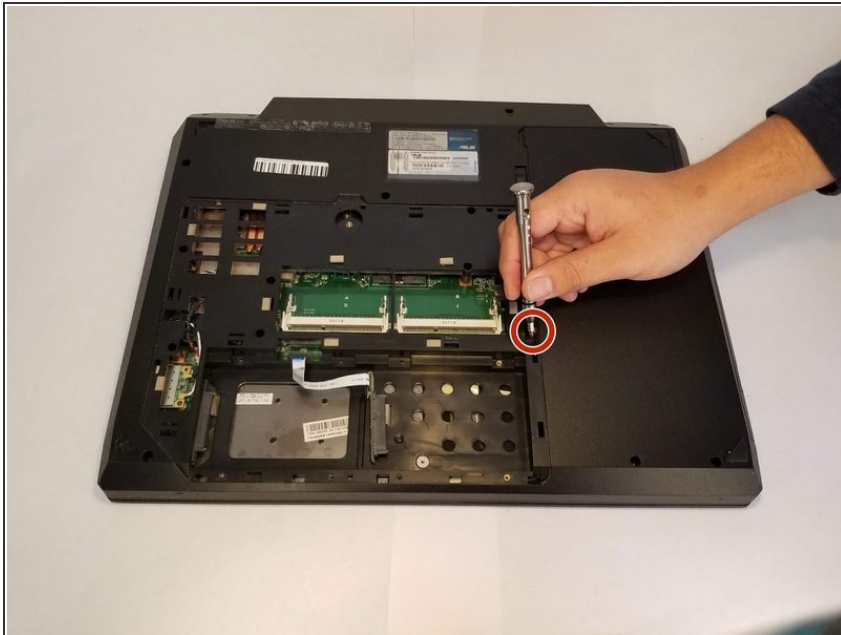

- Remove the screw that is located on the right edge of the removed cover. The screw is in a small opening.

Step 3

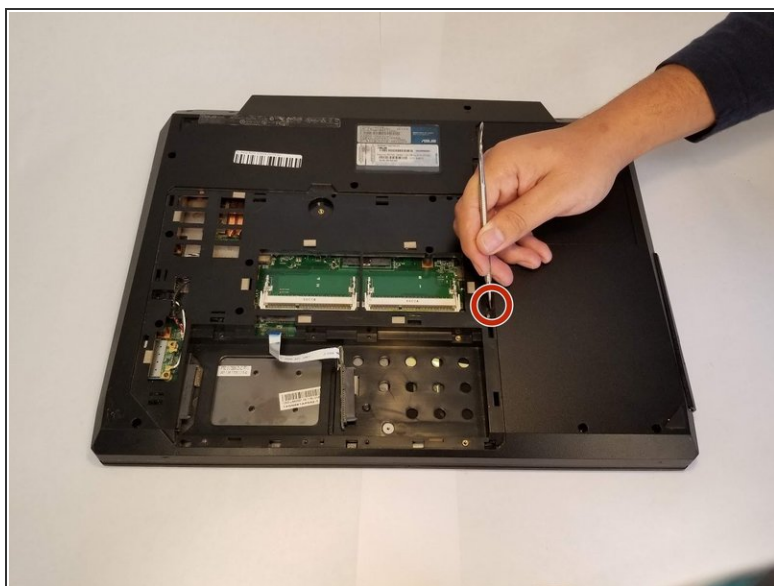

- Inside the opening that the screw was in, use a nylon spudger or any thin tool to push against the inside edge of the disc/optical drive.
- With the disc/optical drive slightly popped out of the socket, pull the rest of it out by hand.

To reassemble your device, follow these instructions in reverse order.