


HP 15-g010dx Button Board Replacement

This guide will instruct you step by step on how replace the button board.

Written By: Christopher

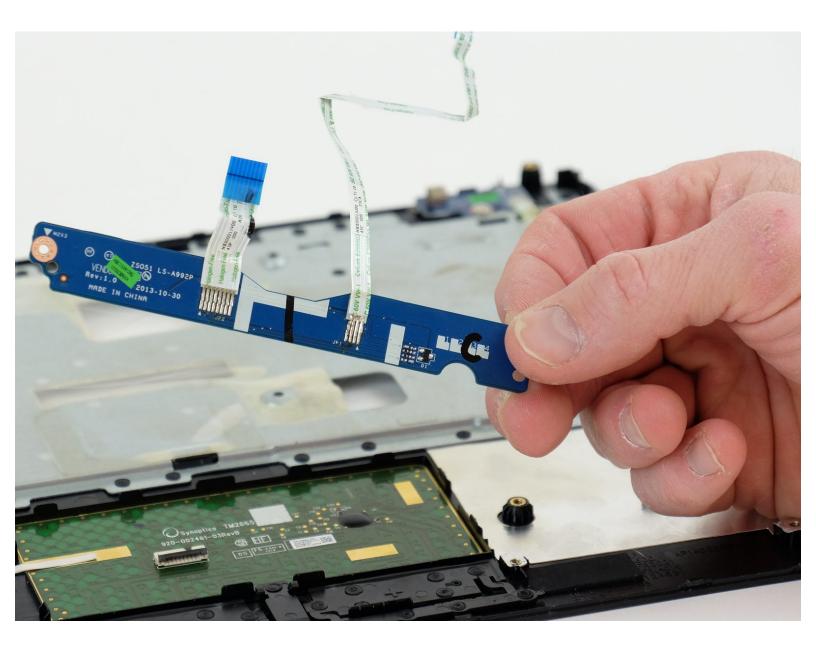

INTRODUCTION

If the button board is not responding, use this button board replacement guide. You will need to follow the prerequisite guides before following this guide.

TOOLS:

- Metal Spudger (1)
- Phillips #00 Screwdriver (1)

Step 1 — Battery



 Slide the latch towards the center of the laptop so the unlock emblem appears.

Step 2



 Place your finger on the left latch and slide it towards the center of the laptop.



• Pull on the battery to remove.

Step 4 — Keyboard



• Remove the two 5 mm screws with the Phillips #00 screwdriver.



 Using either a credit card or flat spudger, wedge it between the palm rest and the keyboard.

Step 6



• Using the tool of your choice, gently pry up on the top of the keyboard.




• Release the top of the keyboard.

Step 8



 Remove the ZIF connector that connects the laptop to the keyboard cable.

Step 9 — Button Board

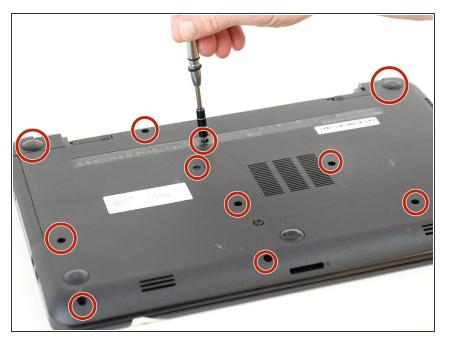

 Using a Phillips #00 screwdriver, remove all the 5 millimeter screws located on the bottom of the laptop.

Step 10



• Using the spudger, remove the two rubber feet that are located near the battery.



 Now remove the two Phillips screws that are located below the rubber feet.

Step 12



• Remove the optical drive by pulling it out by hand.




• Remove the two Phillips screws inside the optical drive housing.

Step 14




• Disconnect the power button ribbon cable by lifting the connector.

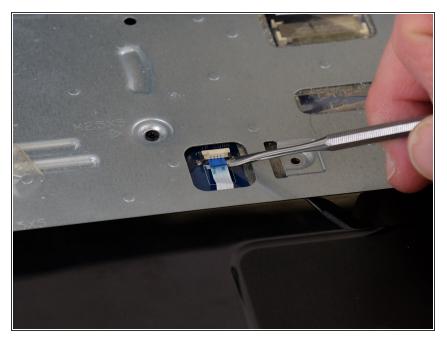

• Now disconnect the touch pad ribbon cable by lifting the connector.

Step 16

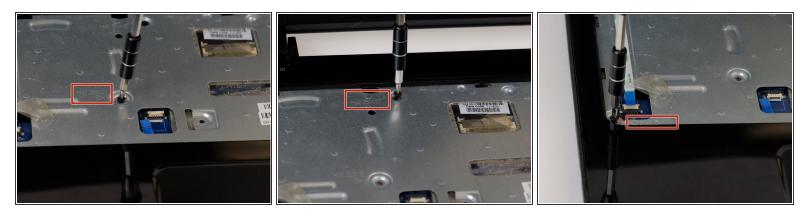

Remove the screws indicated by an arrow stamped into the metal.




• Insert the spudger between the palmrest and the laptop body.

Step 18




• Lift up on palm rest, while working the spudger around the perimeter.

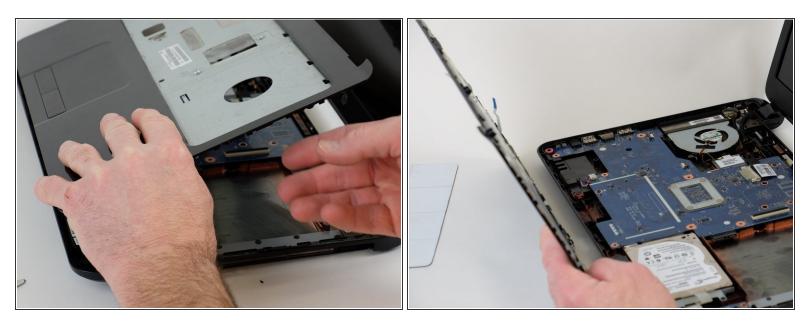


• Remove palm rest and flip it over.


Step 20

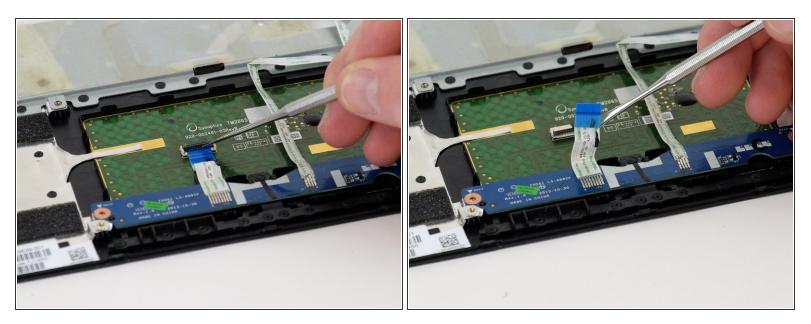

• Release the cable connected to the button board.

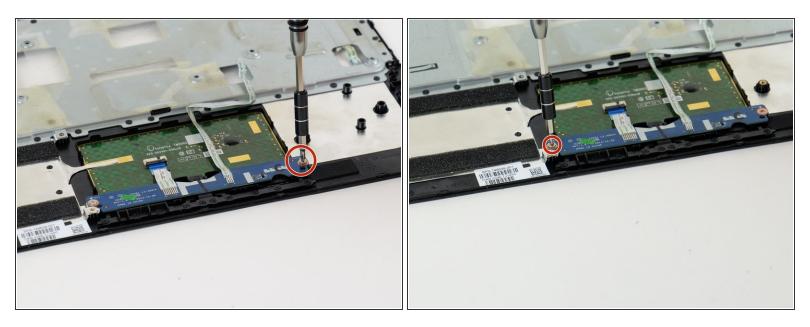

• Remove the two Phillips screws securing the button board.

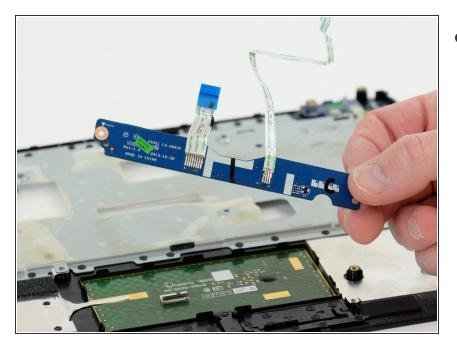

Step 22

• Remove button board.