



# Acer Aspire E5-571-58CG Keyboard Replacement

This guide will show you how to remove and replace your Acer Aspire E5-571-58CG's keyboard.

Written By: Matthew Barboza



---

## INTRODUCTION

If some or all of your keys are not working, you may need to place your laptop's keyboard. This guide will help you through this process.


---

### TOOLS:

- [Spudger](#) (1)
  - [Metal Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [JIS #000 Screwdriver](#) (1)
-



## Step 1 — Battery



 Make sure the laptop is powered off.

- Flip the laptop over and locate the battery release switch.
- Insert the pointed end of the spudger into the battery release switch.
- Push the battery release switch to the right.

## Step 2

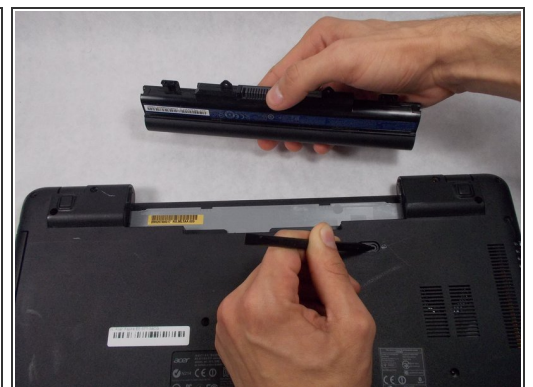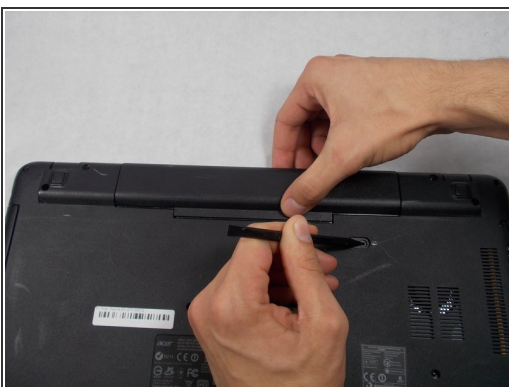


- While the battery release switch is pushed to the right, carefully slide the battery out of its socket.




## Step 3 — Keyboard



 Make sure laptop is upright.


- Pry the keyboard cover off with the plastic opening tool.

## Step 4

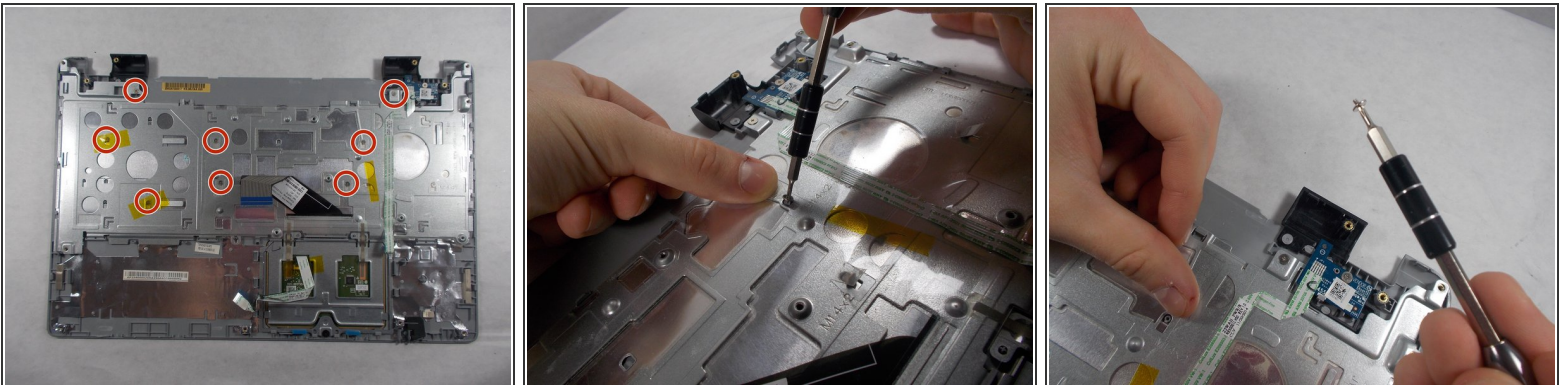


- Flip the keyboard cover upside down.
- Use the JIS #000 screw bit to remove the marked M1.4 x 2 mm screws from the back of the metal panel.

## Step 5

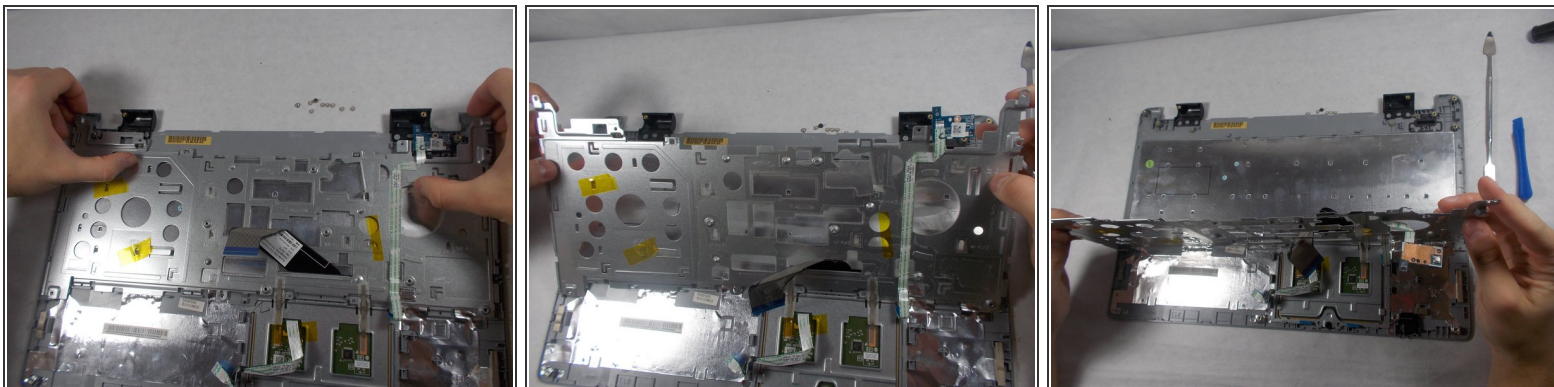

- Push the metal panel forward to unlock it from plastic holders on both sides.
- Lift the metal panel up and peel it back to expose the keyboard component.

## Step 6

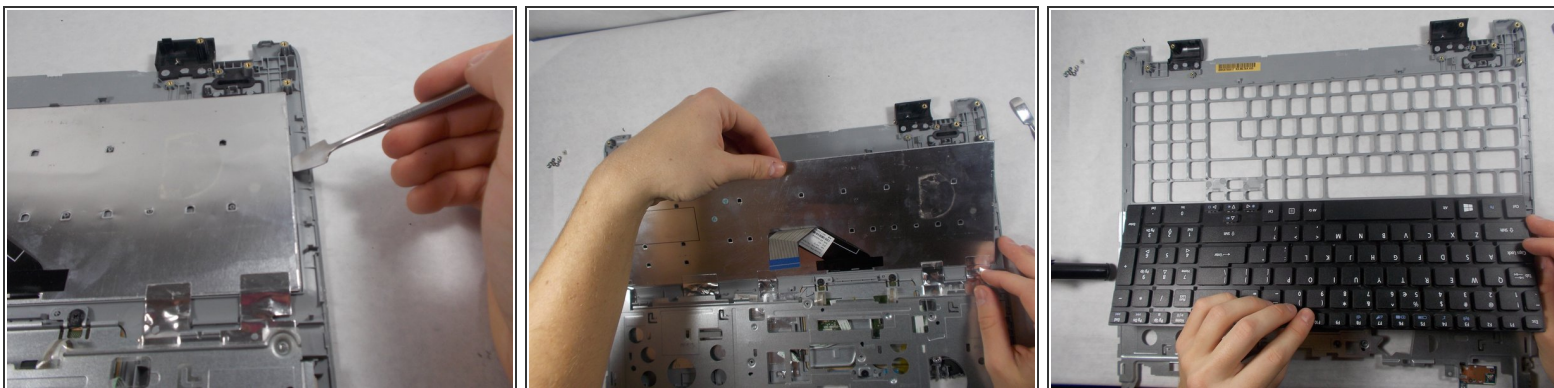

- Use the metal spudger to lift the keyboard component out of the metal panel.

To reassemble your device, follow these instructions in reverse order.