




# D-Link DCS-825L Accent Ring Replacement

This is a guide for replacing the accent ring component of the D-Link DCS-825L.

Written By: April Ulrich

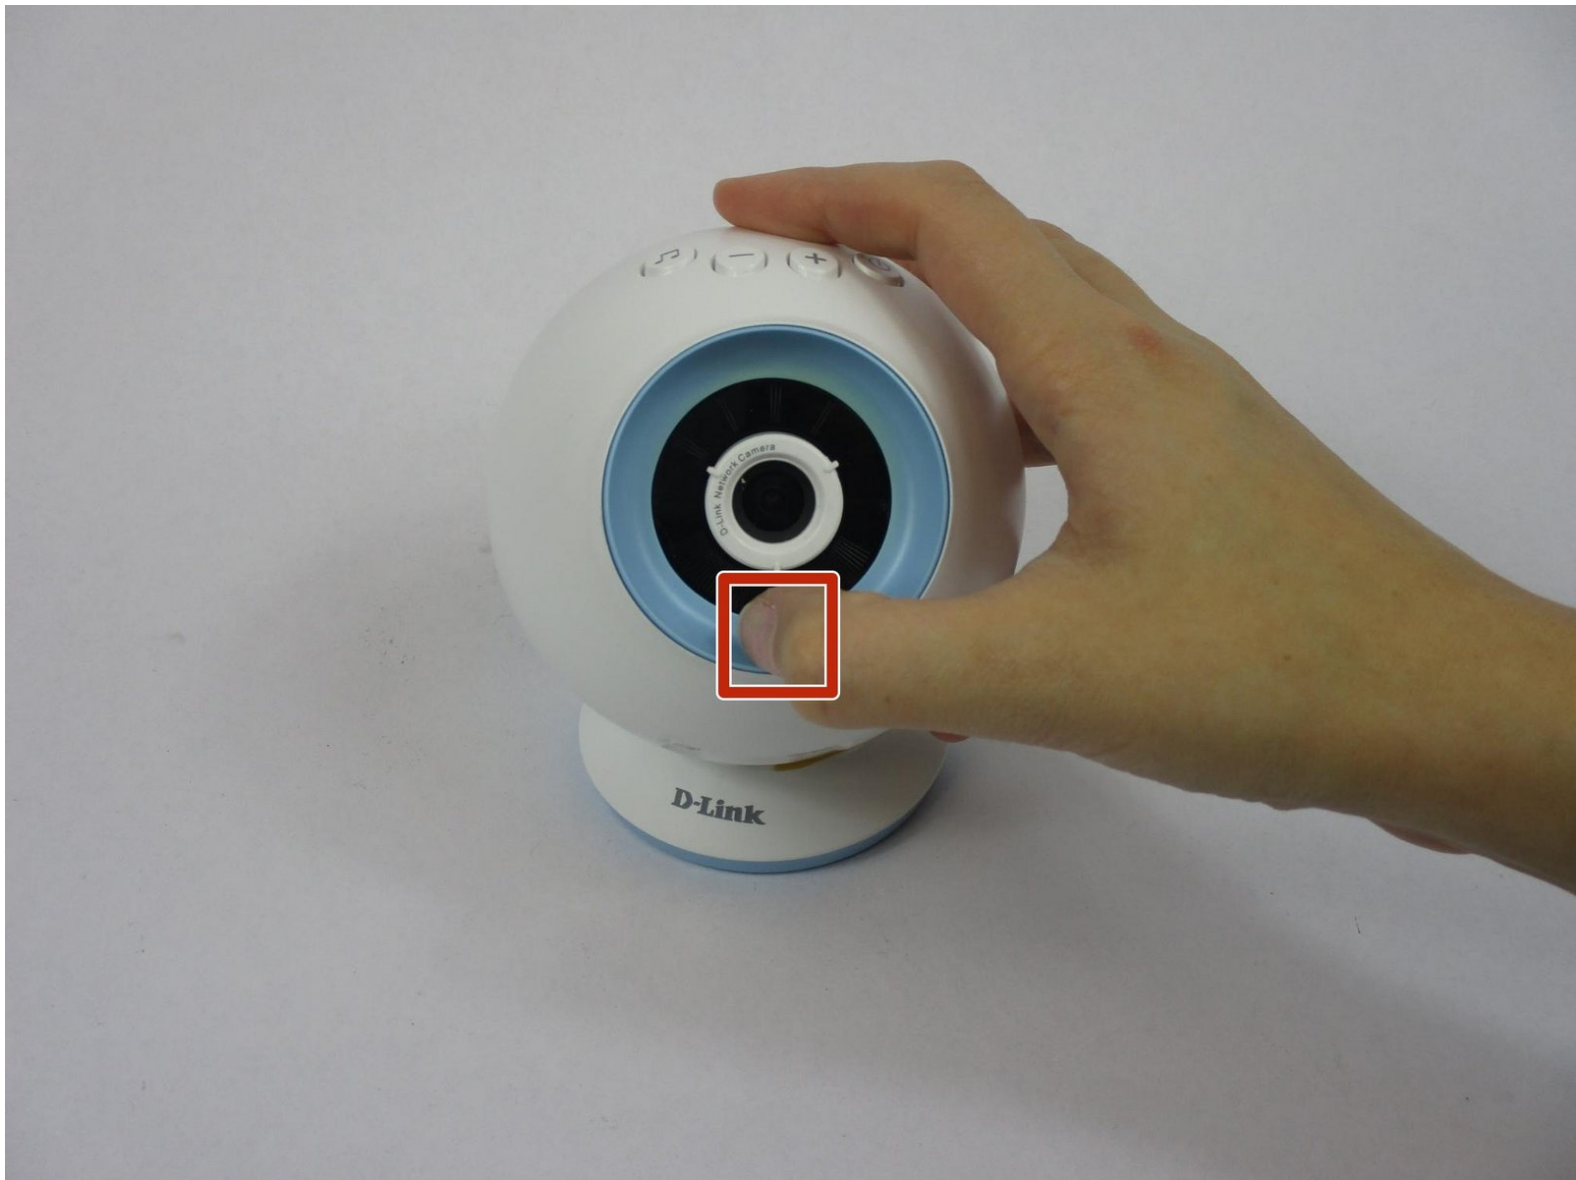

## INTRODUCTION

Has your accent ring become discolored and unusable? This guide will show you the way to replace your accent ring and get a new look for your Wi-Fi Baby Camera.

## Step 1 — Accent Ring



- Grasp the side of the accent ring. There is a notch that your thumb will be able to grab ahold of.

## Step 2



- Twist the accent ring until it pops off. You may need to use both hands if the accent ring is stuck.

### Step 3



- Replace your accent ring with whichever color you choose.

To reassemble your device, follow these instructions in reverse order.