




HP 14-ac151nr Coin Cell Battery Replacement

How to replace the coin cell / watch battery in an HP 14-ac151nr

Written By: Jack Coakley

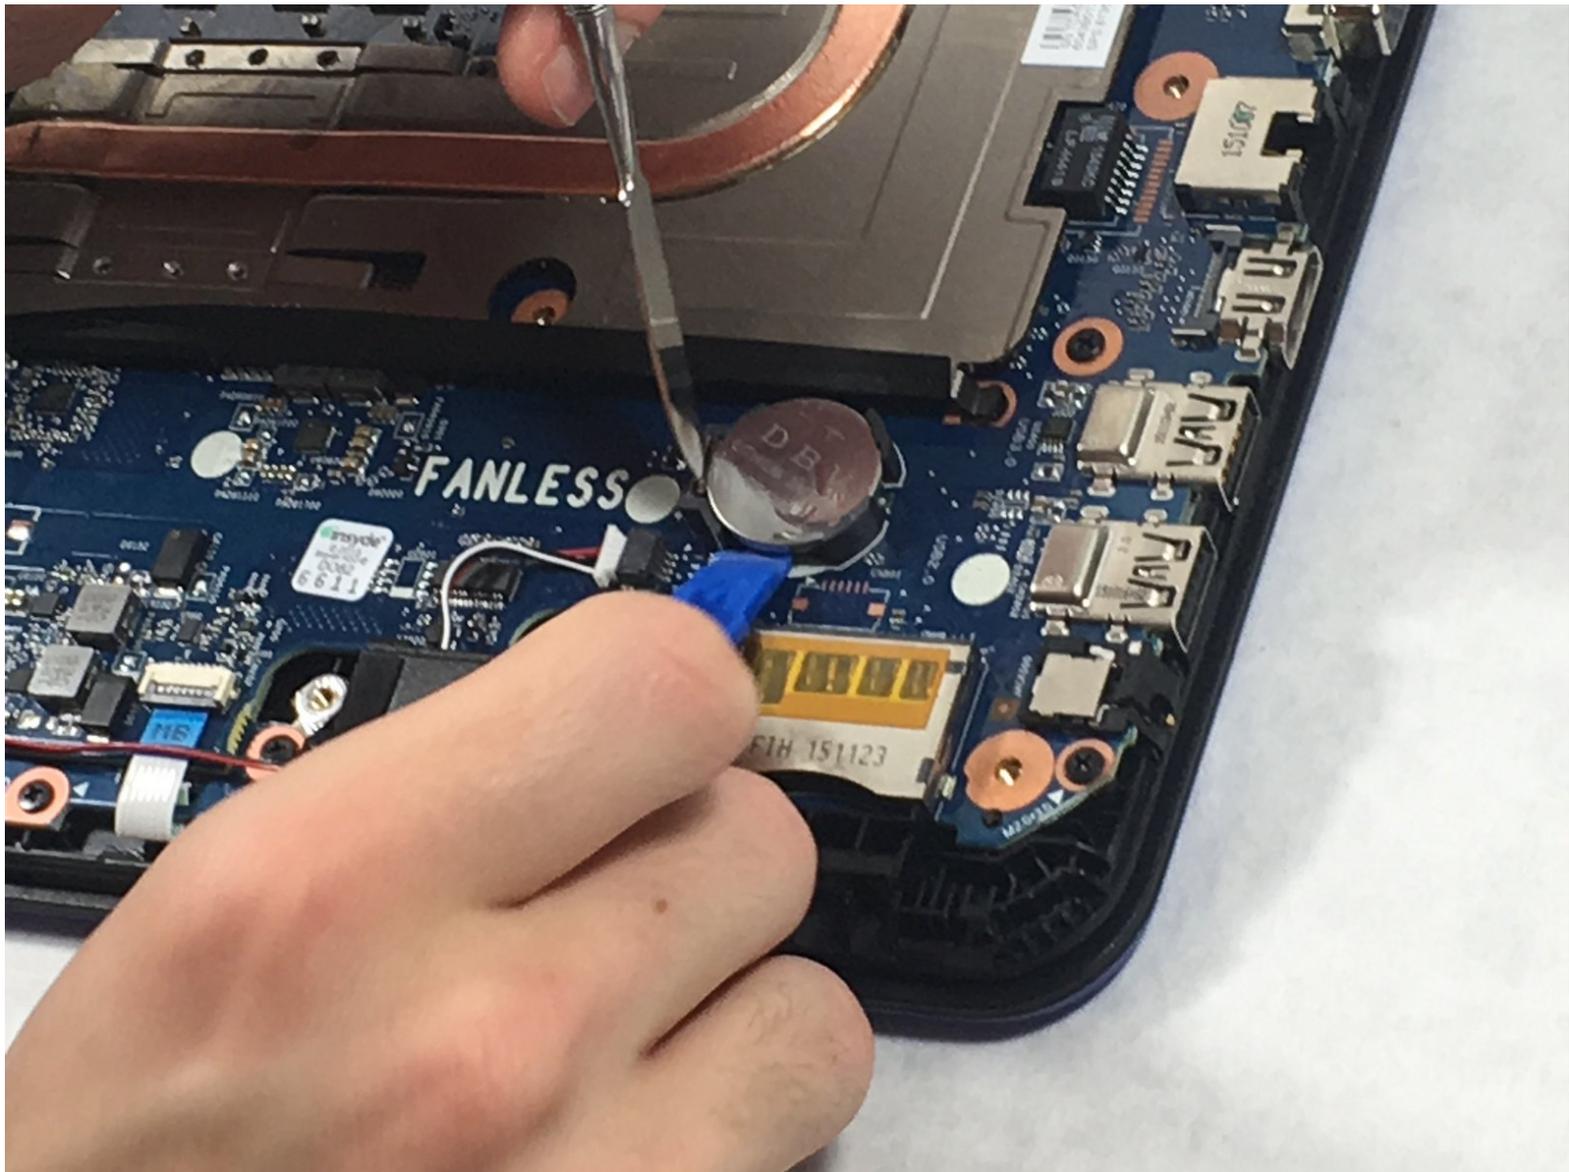


INTRODUCTION

The coin cell battery is essential to the computer's BIOS as well as its time keeping functions. If yours isn't working properly, you may fix it using these steps.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Backplate

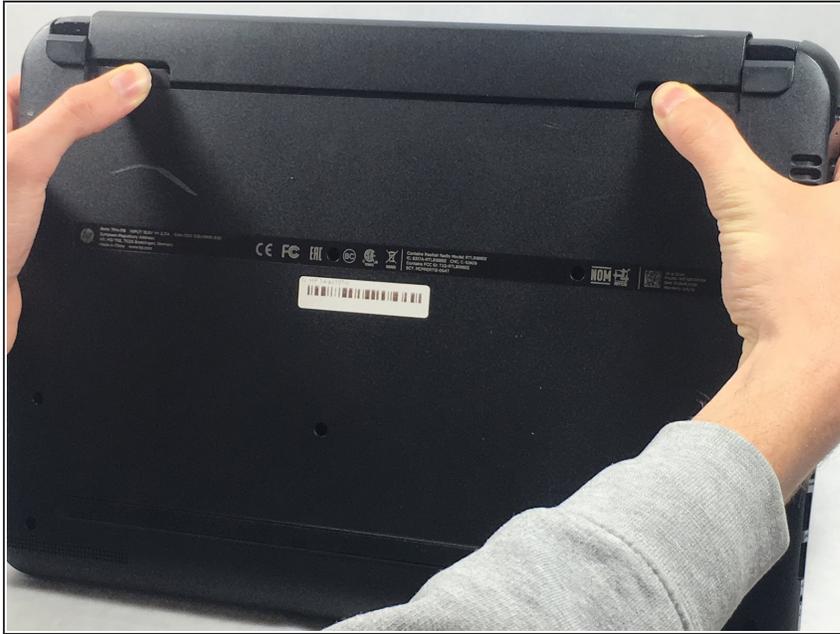

- Remove battery by pushing the two buttons inward.

Step 2

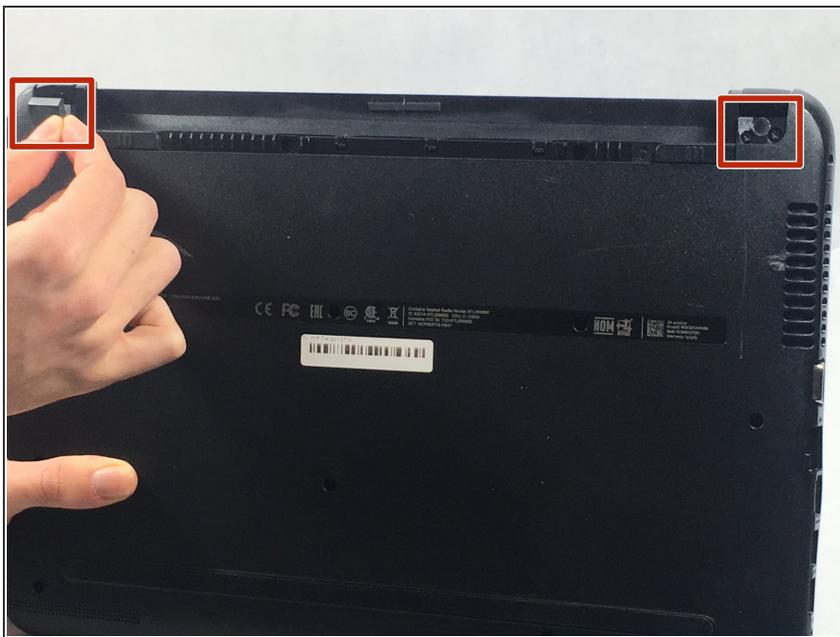


- Remove the two rubber feet next to the battery.

Step 3




- Remove all 14 Phillips head #0 screws.

Step 4

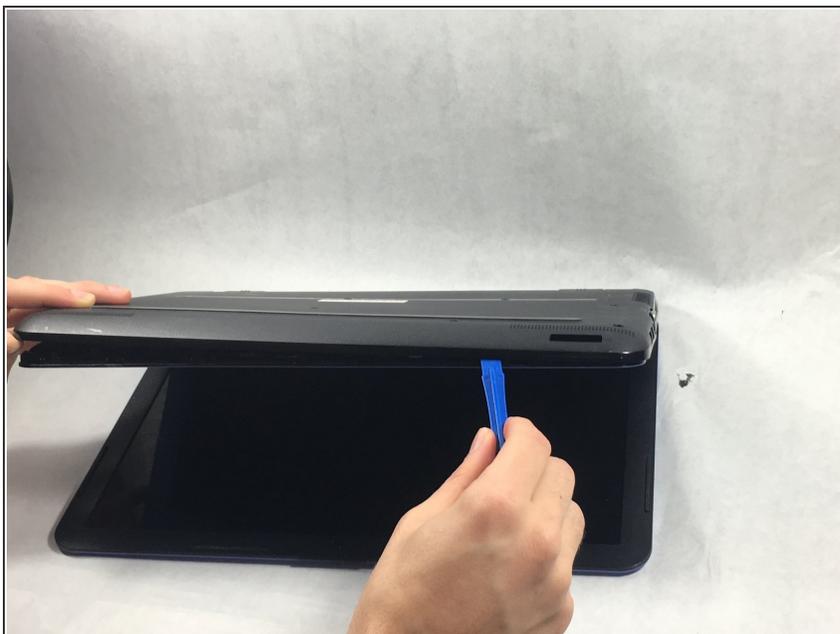



- Use a plastic opener tool to pry off the black backplate.

Step 5 — Coin Cell Battery

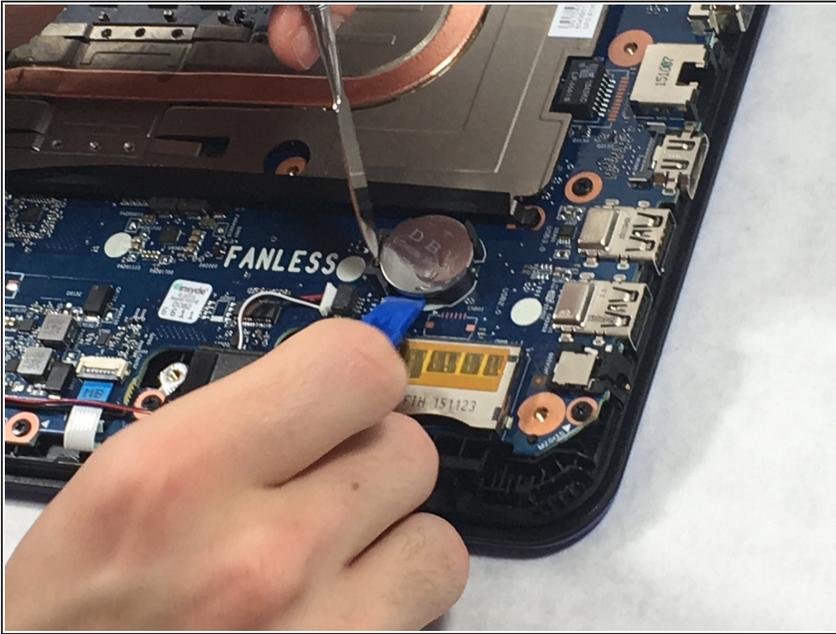

- Use a spudger and a plastic opener to push back the lock holding the battery in place.

Step 6

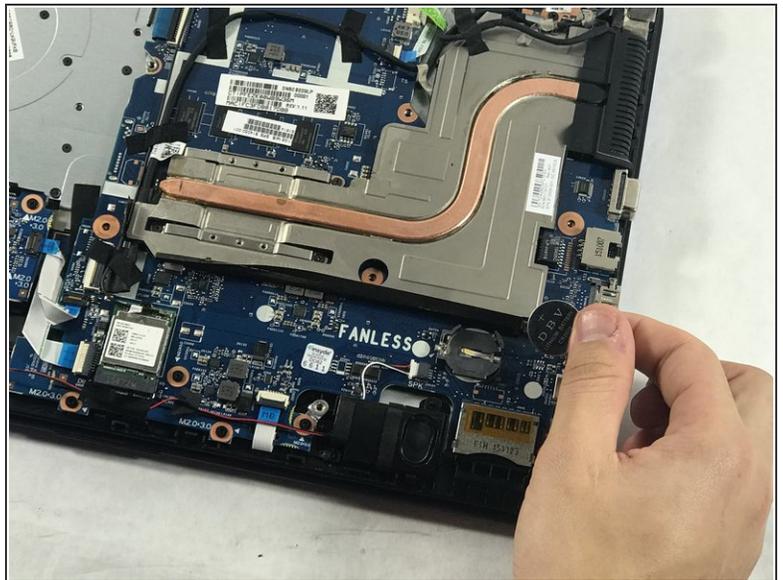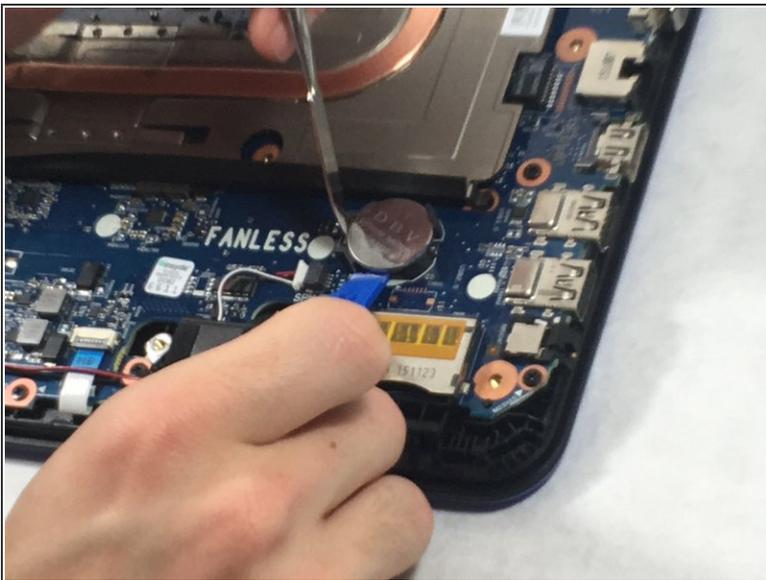

- Remove the battery by pushing back the lock with the wedge while pulling the battery up.

To reassemble your device, follow these instructions in reverse order.