



Acer Aspire 5742 Series Hard Drive Replacement

How to replace a Acer Aspire 5742-6674 hard drive.

Written By: Michael Deckard





TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

 
 
- [1 TB SSD / Upgrade Bundle](#) (1)

Step 1 — Hard Drive




- Place laptop upside down and push battery lock slider to the left to unlock. Lift battery out.

Step 2

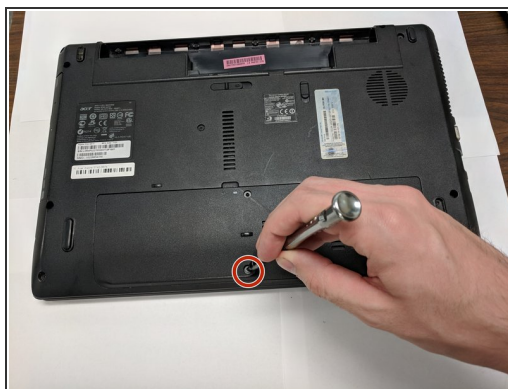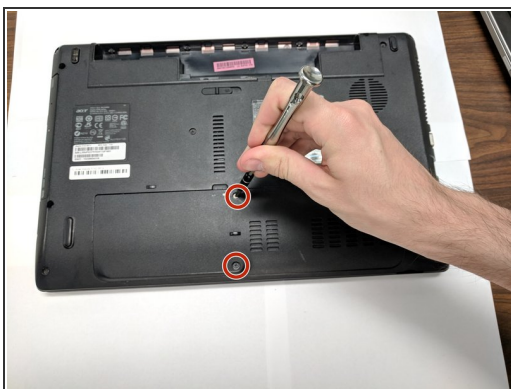

- Remove two screws to take the cover off of the bottom of the laptop.

 Step 3

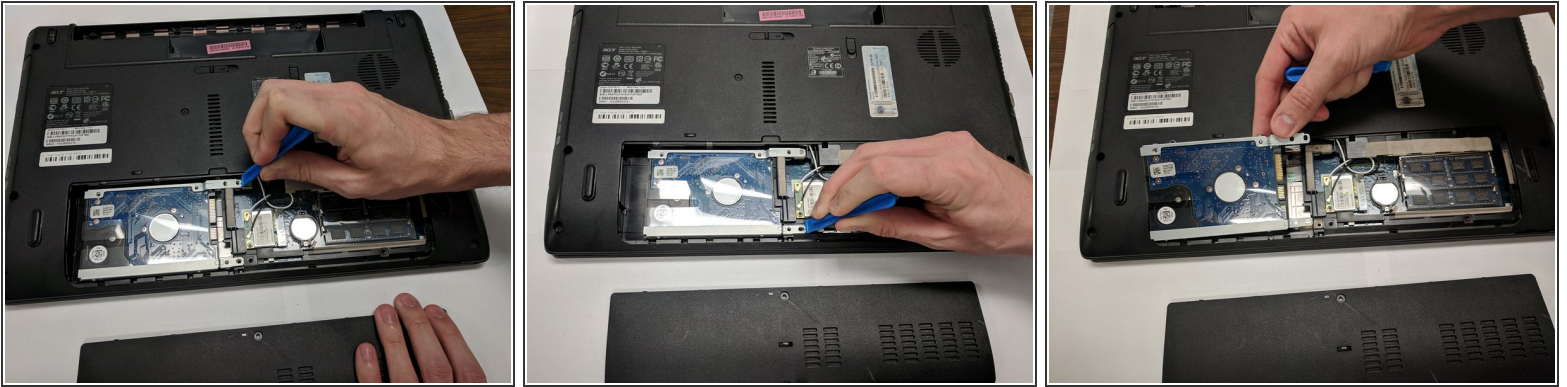

- With a plastic opening tool slide the drive over and remove it.

To reassemble your device, follow these instructions in reverse order.