



Asus U56E-BBL6 Battery Replacement

How to replace a Asus U56E-BBL6 battery.

Written By: Josiah Allard



INTRODUCTION

You are here because of a faulty battery which is not letting the computer to turn on. This guide is going to help you in replacing the battery.

Step 1 — Battery



⚠ Make sure you unplugged the laptop before you begin the replacement process.

- Locate the battery locking tabs on the upper right and left corner.
- Press the tabs in towards each other.

Step 2



- Pull the battery outwards to remove it.

To reassemble your device, follow these instructions in reverse order.