



Dell Latitude E6520 RAM Replacement

This guide demonstrates how to remove the RAM from a Dell Latitude E6520.

Written By: Alec Weiss



INTRODUCTION

RAM (Random Access Memory) determines how quickly your computer performs. Upgrading or adding RAM will improve the performance of your computer.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
-


Step 1 — Battery



- With the laptop closed and the bottom side facing up, slide the two battery latches towards the sides of the laptop.


i When the latches are unlocked, a small logo resembling an open padlock will become visible.

Step 2

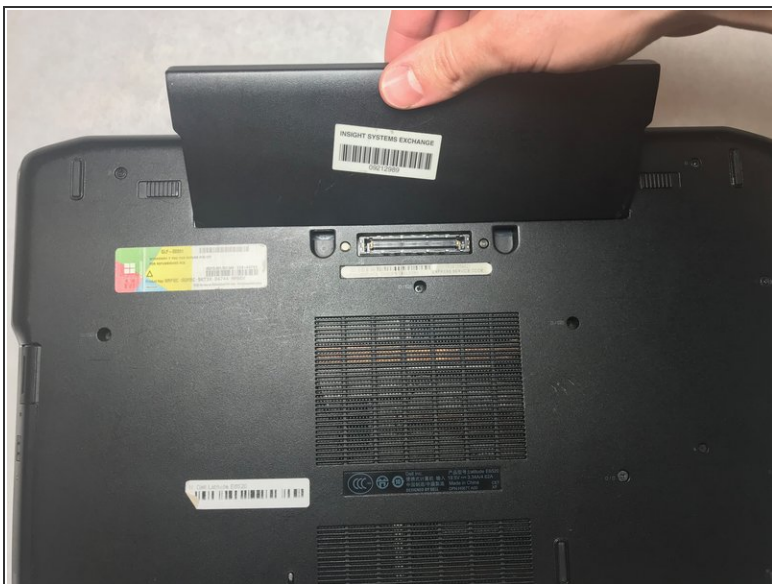

- Grasp the battery from the top and pull upward.

Step 3 — Bottom Cover

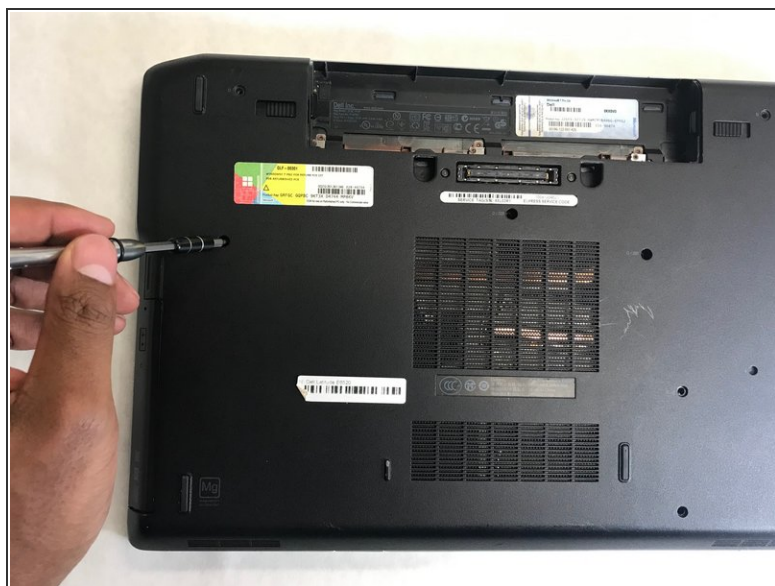


- Remove the ten 8.6 mm JIS #0 screws.

Step 4



- Place fingers underneath cover and pull off the cover.

Step 5 — RAM

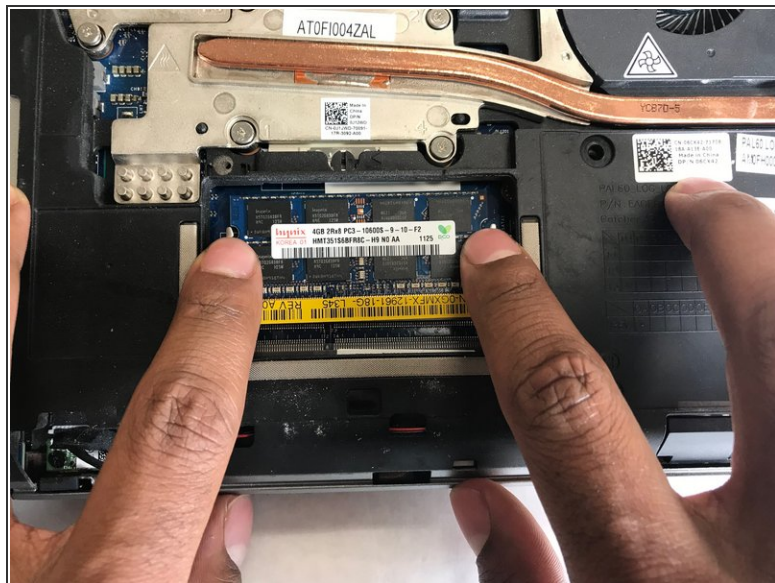

- Push apart the two metal clips that hold the RAM in place.

Step 6



- Pull the card out of the connection port.

To reassemble your device, follow these instructions in reverse order.