



Lenovo Thinkpad T440s Keyboard Replacement

Are some of your keys not working when you...

Written By: Terelle Montalvo



INTRODUCTION

Are some of your keys not working when you type? Consider using this guide to replace the keyboard of your device.


TOOLS:

[Metal Spudger](#) (1)
[Phillips #00 Screwdriver](#) (1)

PARTS:


[Lenovo Keyboard - 04X0101](#) (1)
[Lenovo Keyboard - 01AX310](#) (1)
[Lenovo Keyboard - 04Y0862](#) (1)
[Lenovo Aftermarket Keyboard - 04Y0824](#) (1)

Step 1 — Keyboard

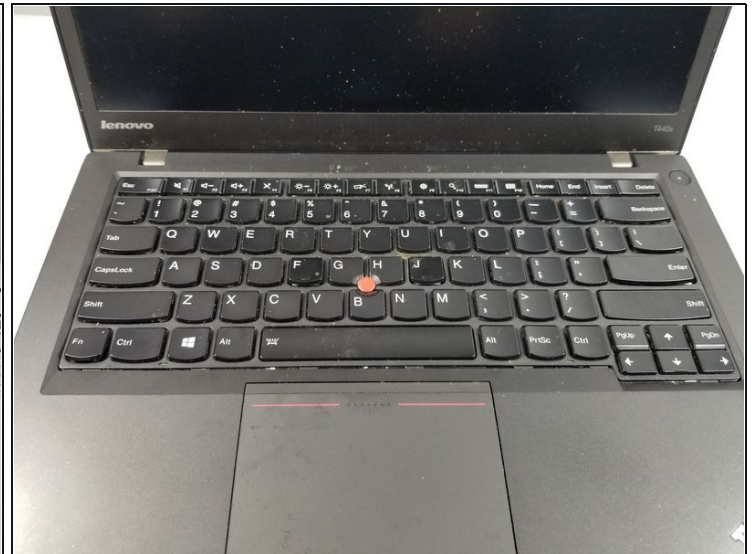


- Start with the laptop open and the keyboard exposed.

Step 2

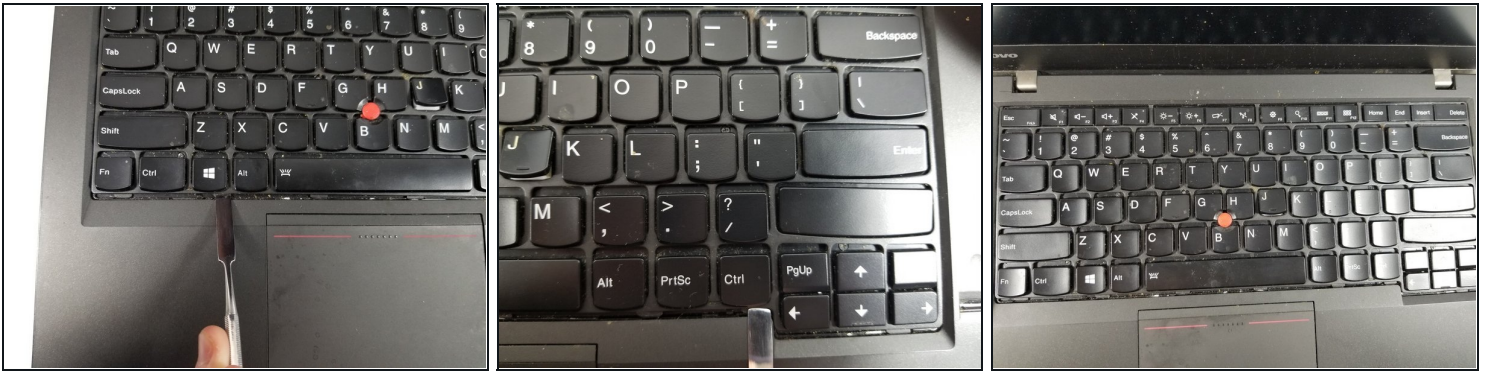

- Use the metal spudger to press the keyboard plate forward towards the display

Step 3

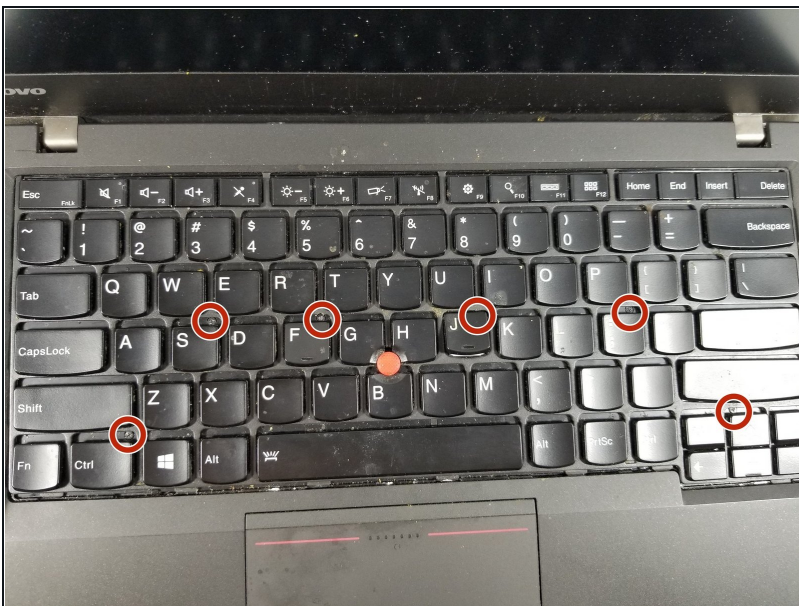


- Use a Phillips #00 screwdrivers to remove the six screws holding in the keyboard.

Step 4



- Use the metal spudger to lift up the keyboard plate.
- Run the metal spudger around the plate, applying light pressure until the keyboard pops out.

Step 5

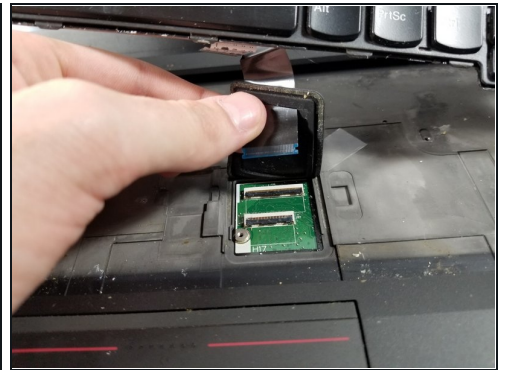

- The keyboard can now be rested forward to expose the ribbon cable attaching it to the motherboard.
- The ribbon cable will come out with a light pull in the opposite direction of its connection.
- The keyboard is now removed and ready to be replaced.

To reassemble your device, follow these instructions in reverse order.