




# Asus ROG G751JT-DH72 CD Drive Replacement

This guide will help you to replace or upgrade the CD drive in your Asus ROG G751JT-DH72.

Written By: Anum Haidari

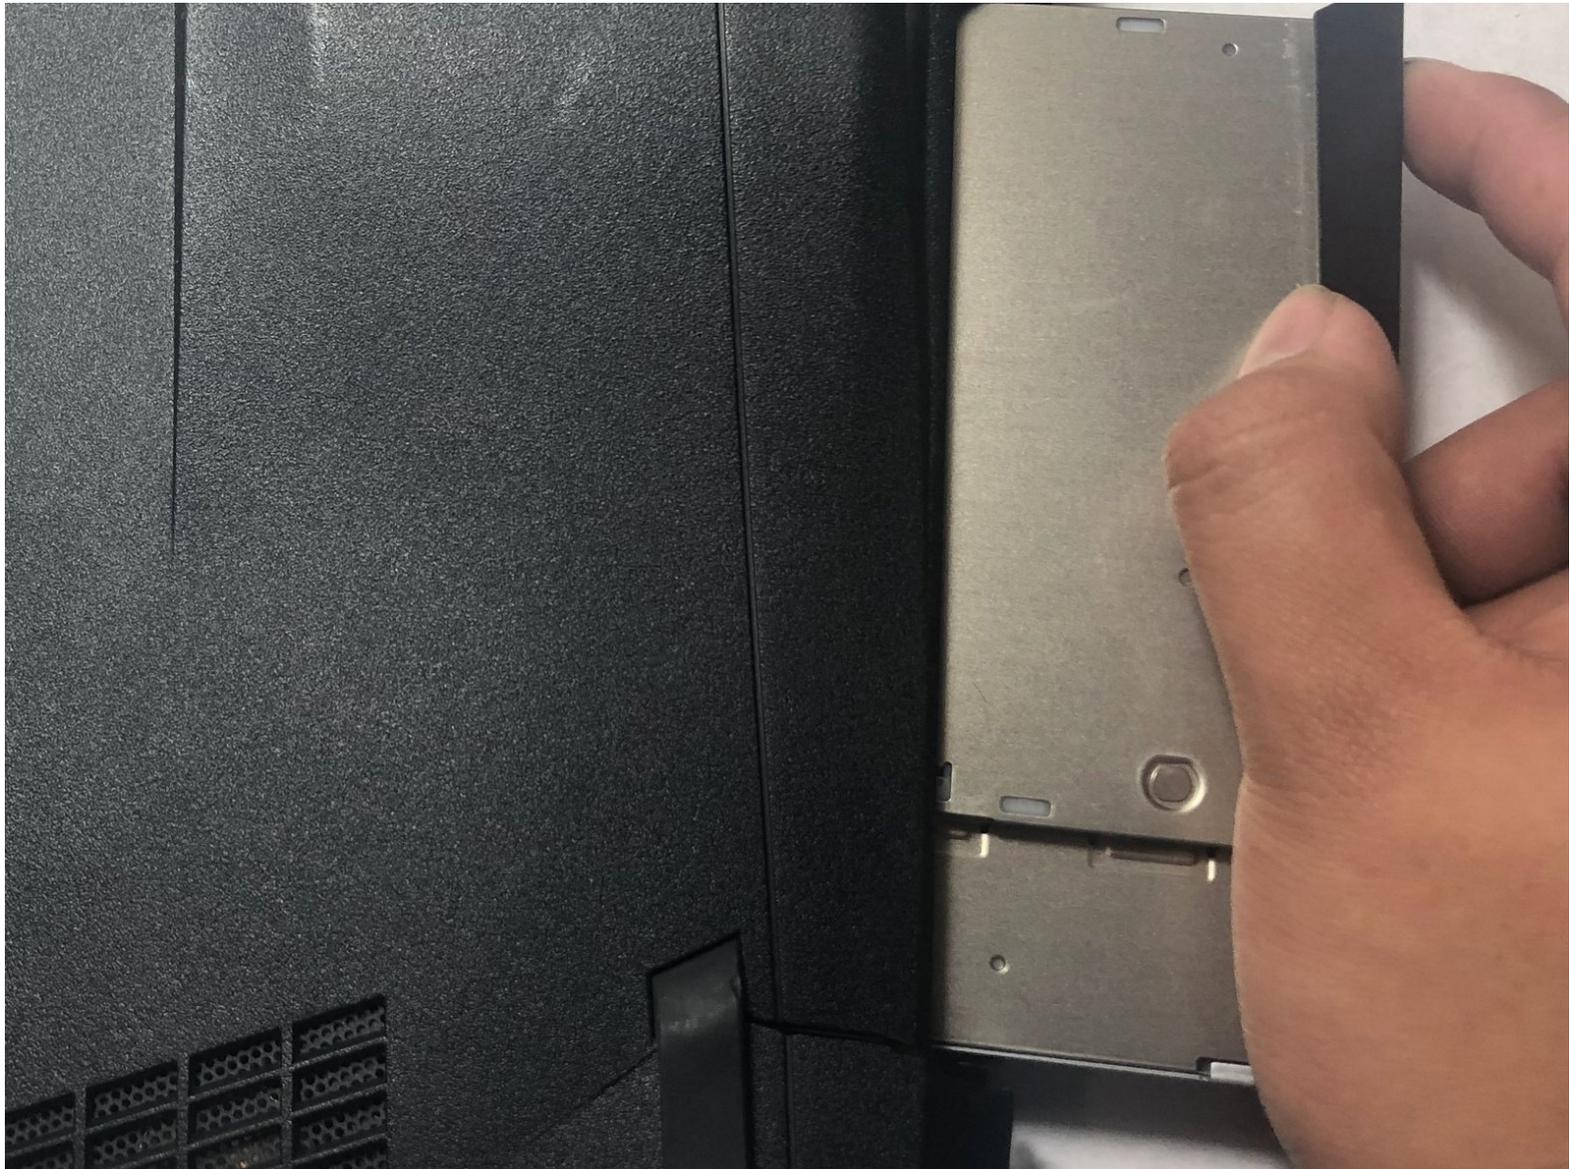

---

## INTRODUCTION

Use this guide to replace the CD drive in your device.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — CD drive



- Lift up the rubber tab located in the upper-right corner of the backing plate.

## Step 2



- Use a Phillips #1 screwdriver to remove the 5.2 mm screw behind the rubber tap.

### Step 3




- Carefully pull the backing plate off. If you have a pry tool, you can pry on the edges carefully.

### Step 4



- Use a Phillips #1 screwdriver to remove the 5 mm screw.

## Step 5

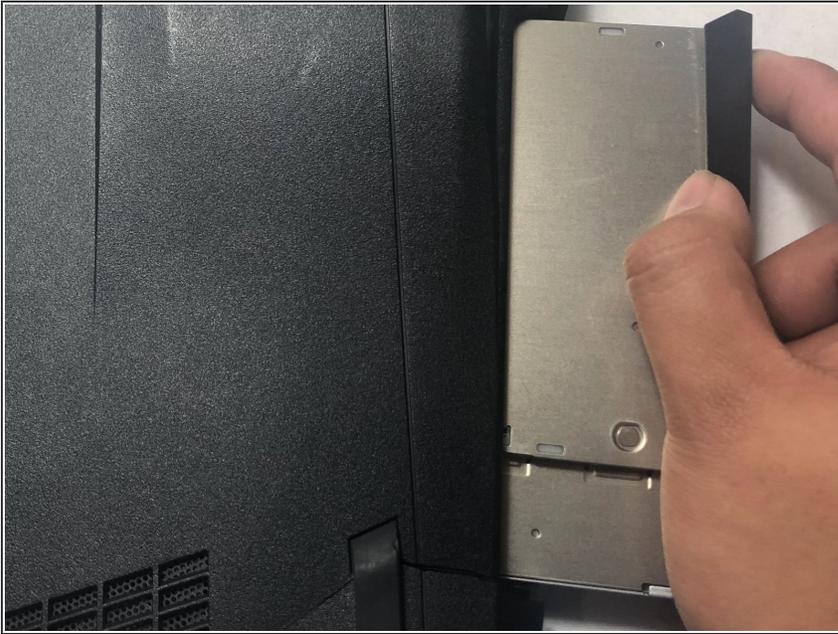

- Pull out the drive and remove it from the device.

To reassemble your device, follow these instructions in reverse order.