



# Asus A53E-ES92 Hard Drive Replacement

This guide will show you how to remove the hard...

Written By: Robyn Lam



# INTRODUCTION

This guide will show you how to remove the hard drive on an Asus A53E-ES92.

---

## TOOLS:

Phillips #0 Screwdriver (1)

---

### Step 1 — Hard Drive



- Turn laptop over to expose the bottom panel

## Step 2




- Use a Phillips #0 screwdriver to remove the two screws circled in picture.

## Step 3



- Place fingers on panel as shown below.
- Apply slight force while gently sliding the panel away from the laptop.
- Remove panel.

## Step 4

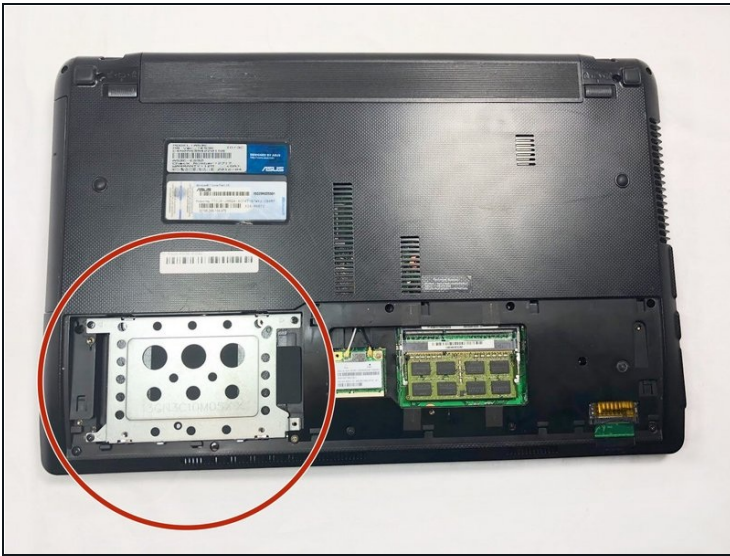

- Locate hard drive, circled in red.


## Step 5



- Remove the four screws with a Phillips #0 screwdriver.



## Step 6

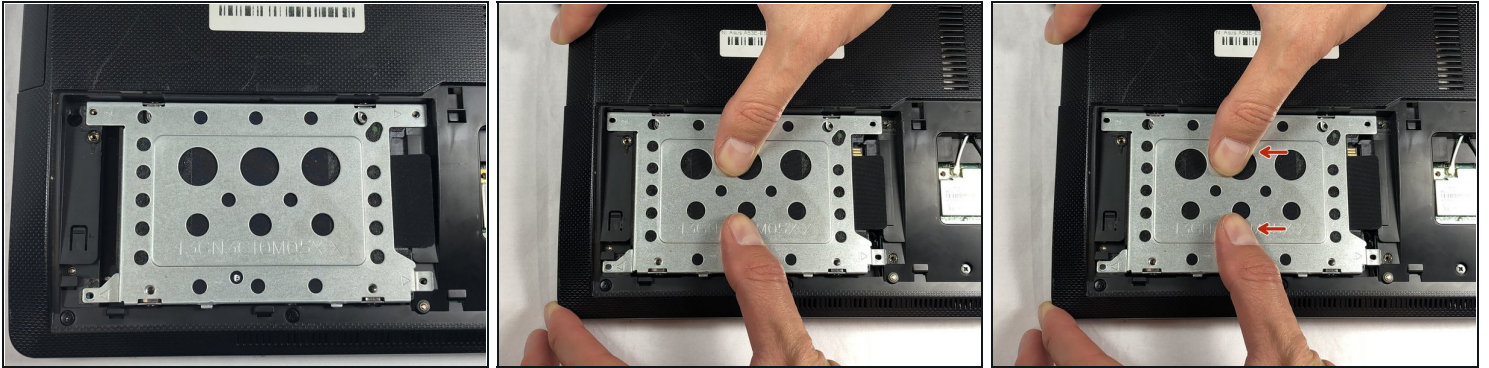

- Apply slight pressure on the hard drive.
- Slide hard drive to the left to unlock it.

## Step 7



- Remove the hard drive from the device.

---

To reassemble your device, follow these instructions in reverse order.