



Toshiba HD-A2 Top Panel Replacement

To view and/or replace components within the DVD player, follow this guide.

Written By: Nouriyah Saleh



INTRODUCTION

Use this guide to replace the top panel of your device.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Panel



- Remove the three 6mm Phillips head screws on the back of the DVD player with a Phillips #1 screwdriver.

Step 2



- Remove the two 3mm Phillips screws on each side of the DVD player using the Phillips #1 screwdriver.

Step 3



- Using your hand, gently lift the black top panel and safely place it off to the side.

To reassemble your device, follow these instructions in reverse order.