




HP ProBook 440 G1 RAM Replacement

How to replace the RAM on an HP ProBook 440 G1.

Written By: Ethan A Courtney

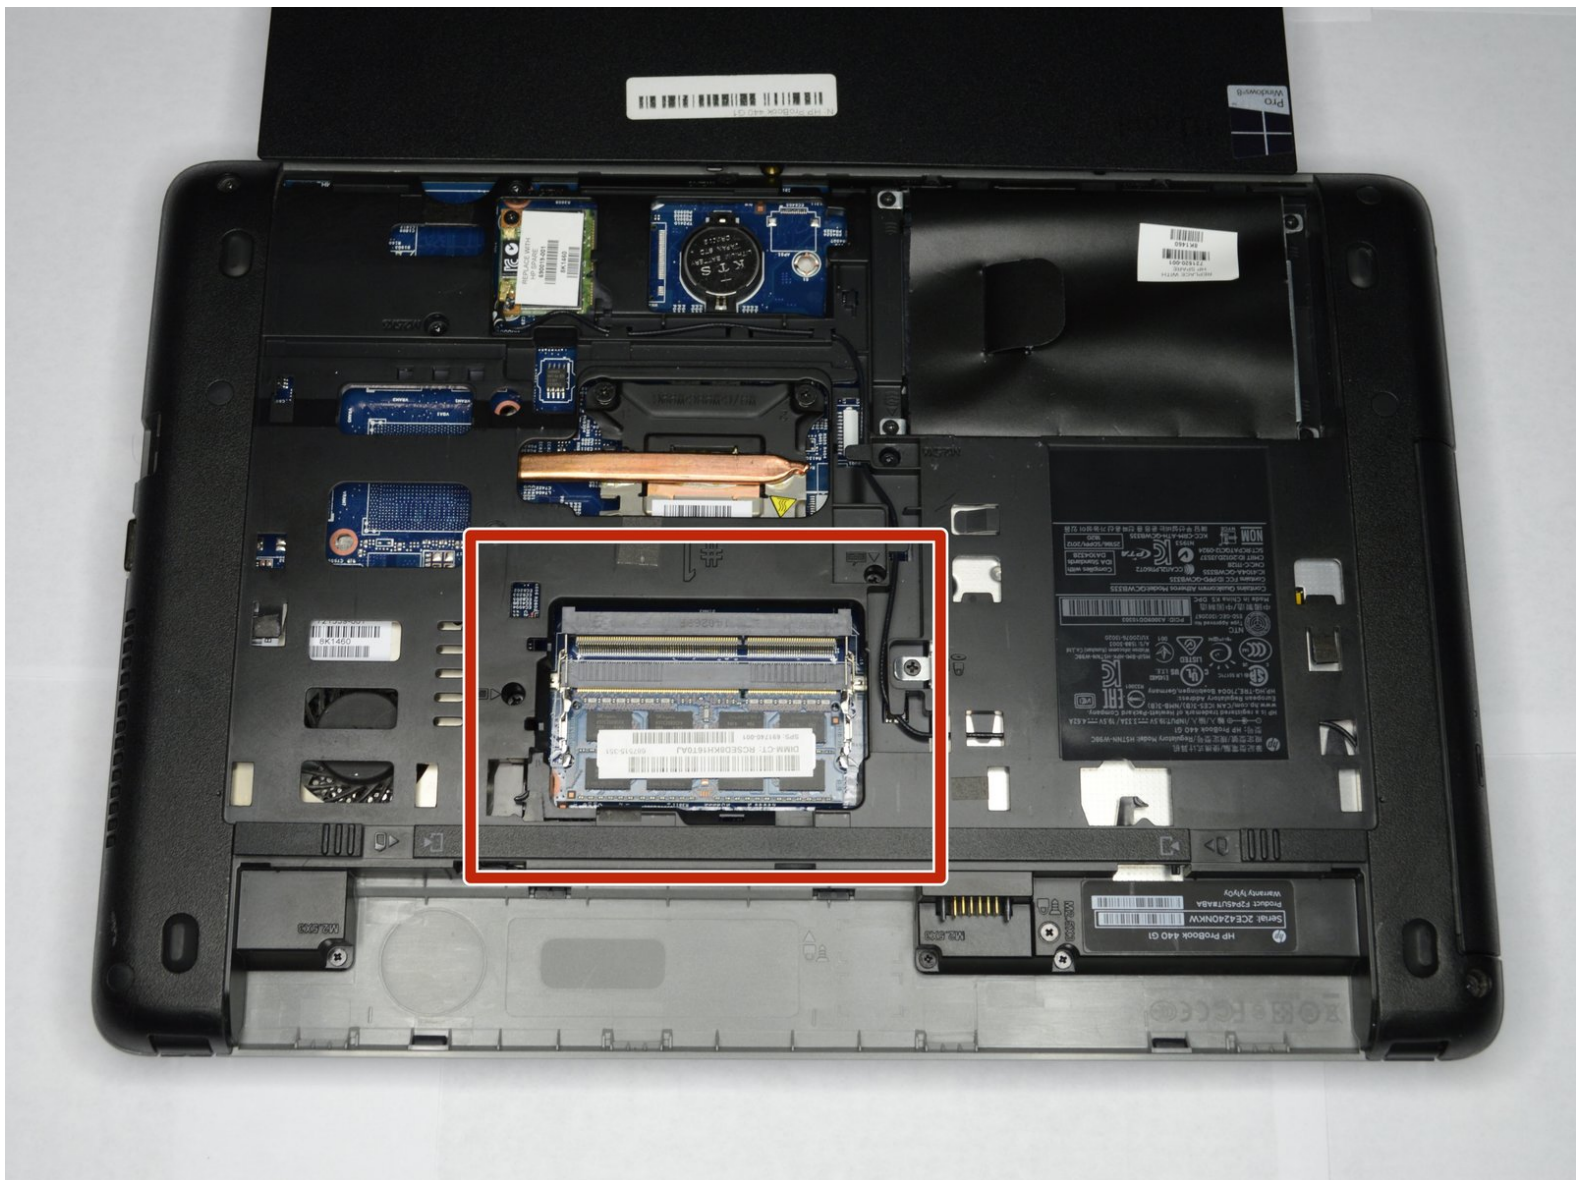

INTRODUCTION

How to replace the RAM on an HP ProBook 440 G1.

Step 1 — Battery



⚠ Make sure the laptop is turned off before you start.

- Push and hold the release tab on the right and left toward the center.

Step 2




- Pull the battery out.

Step 3 — Backplate




- Push and hold the release tabs on the right and left toward the center again.

Step 4

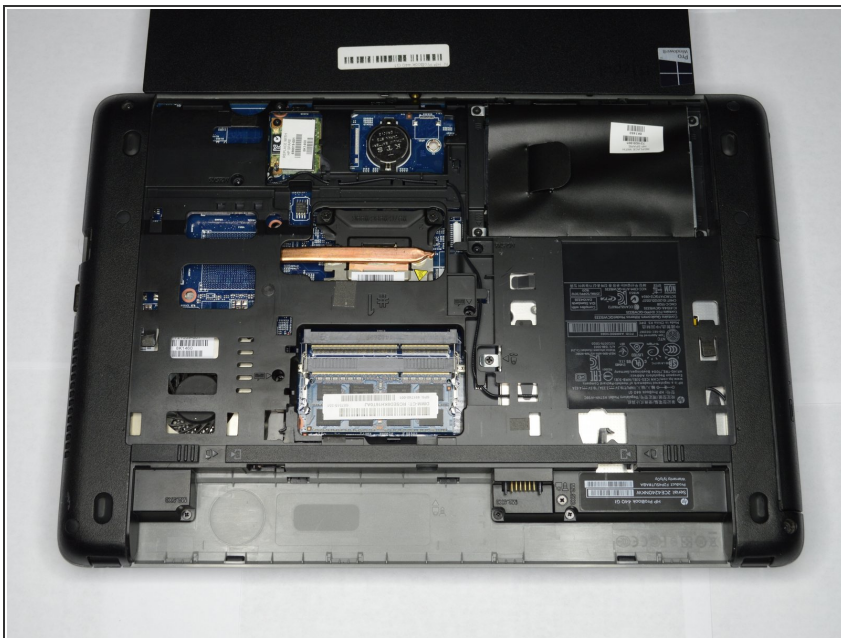



- Slide the backplate off.

Step 5 — RAM

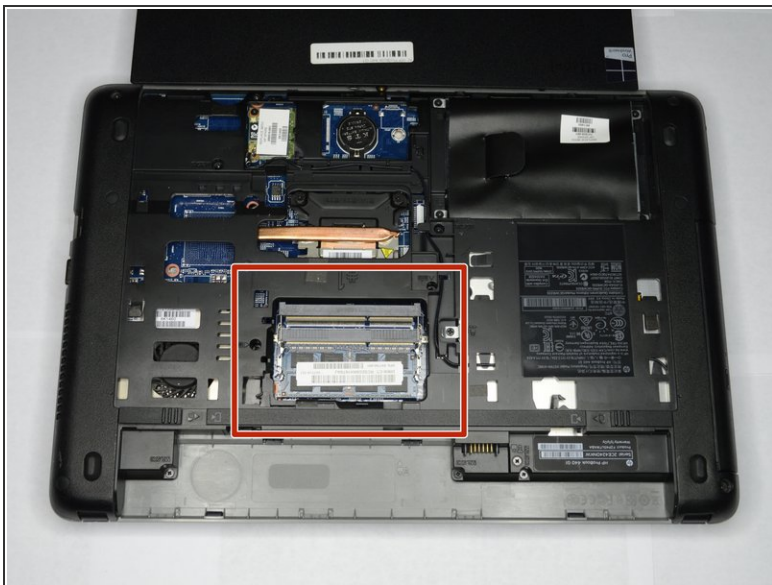


- Locate the RAM, in the middle of the laptop near the battery.

Step 6

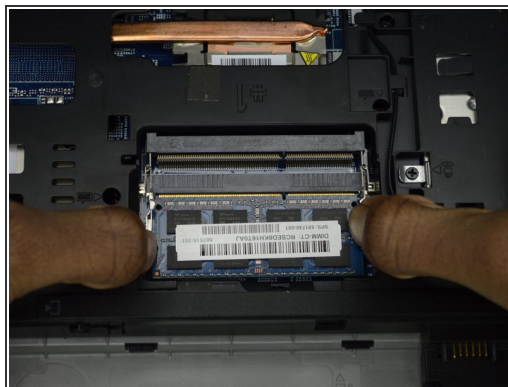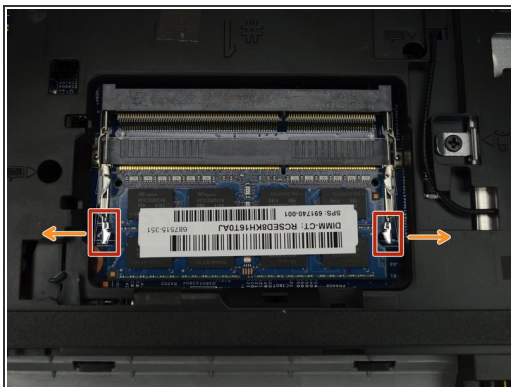

- Push the two metal tabs on either side of the RAM stick out.
- The RAM stick will pop up slightly.

Step 7

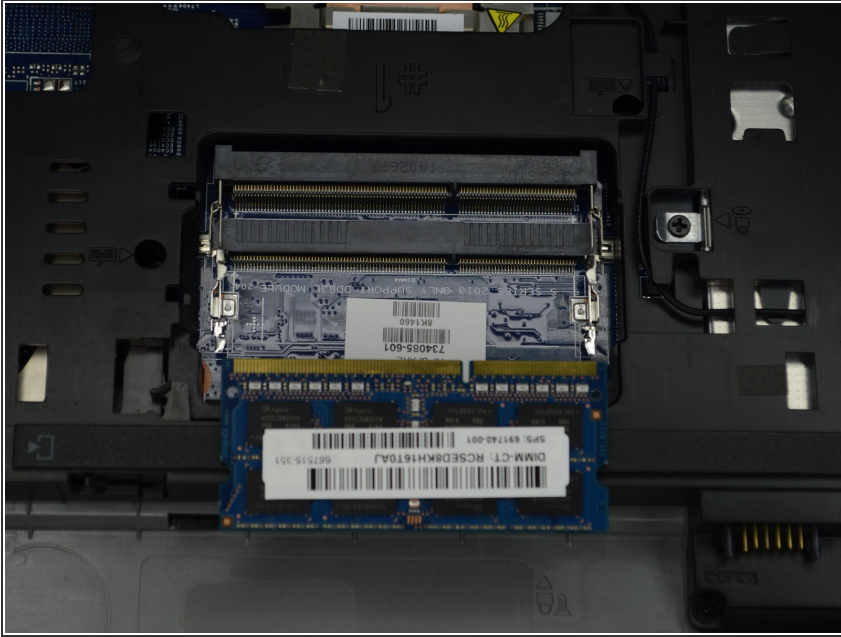

- Remove the RAM stick.

To reassemble your device, follow these instructions in reverse order.