




HP ProBook 440 G1 Optical Drive Replacement

How to replace the optical drive of an HP ProBook 440 G1.

Written By: Ethan A Courtney

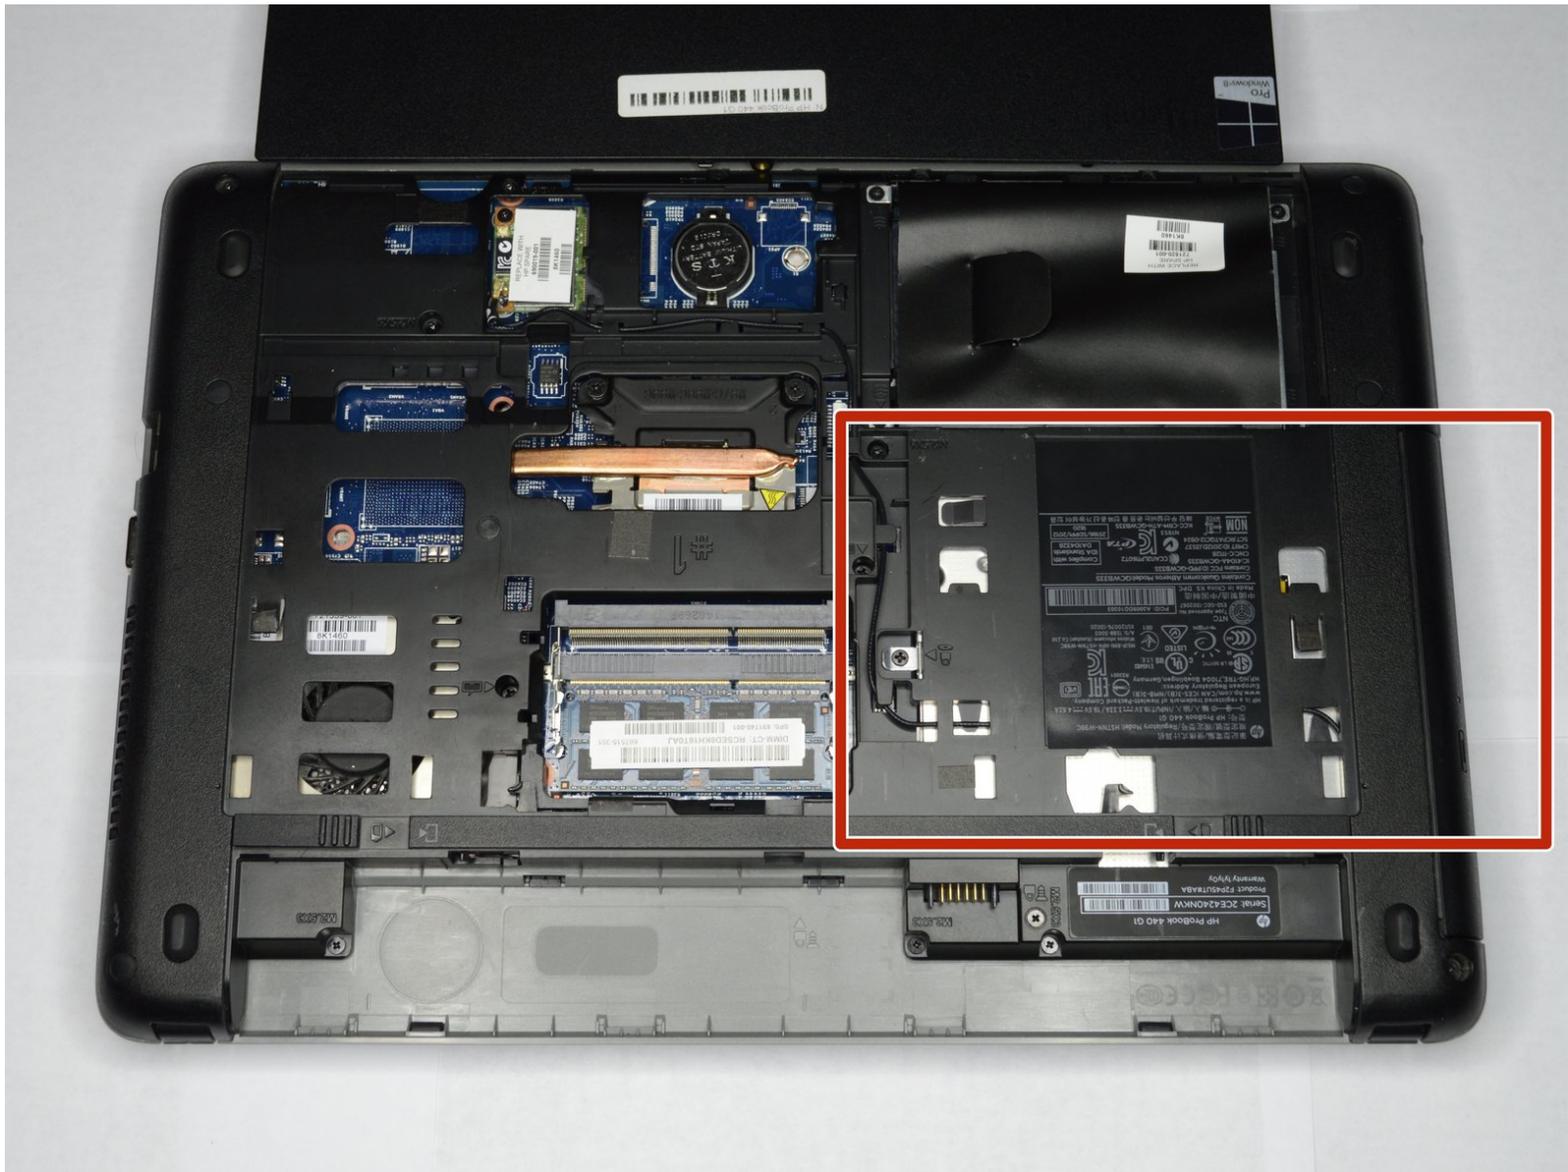

INTRODUCTION


How to replace the optical drive of an HP ProBook 440 G1.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

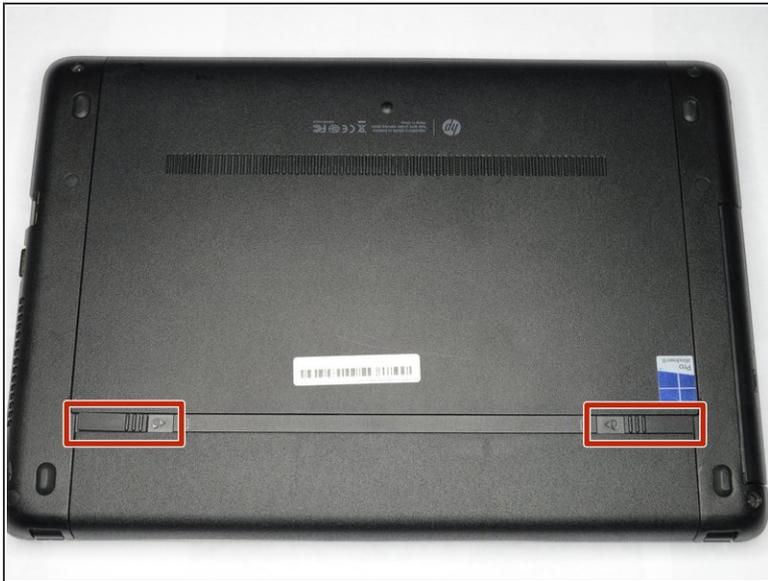

- ⚠ Make sure the laptop is turned off before you start.
- Push and hold the release tab on the right and left toward the center.

Step 2




- Pull the battery out.

Step 3 — Backplate




- Push and hold the release tabs on the right and left toward the center again.

Step 4

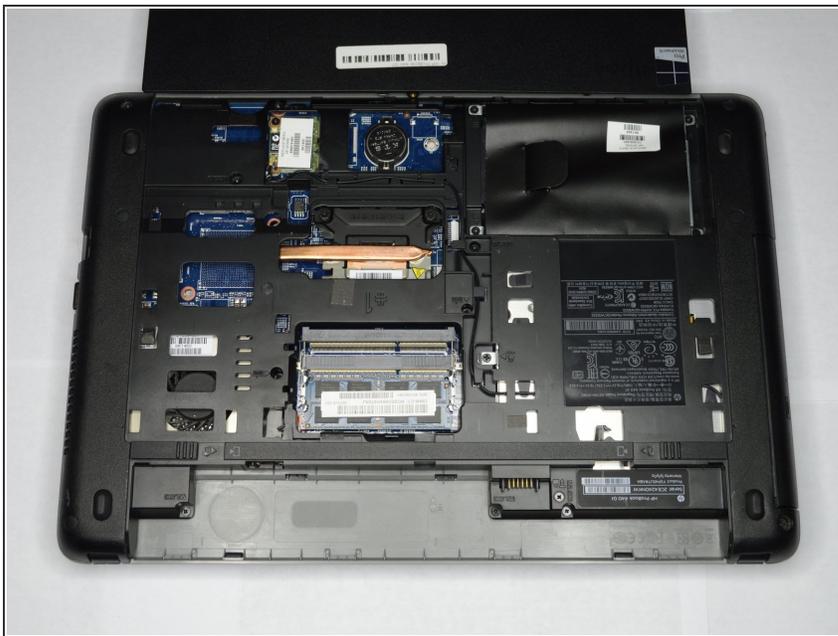

- Slide the backplate off.

Step 5 — Optical Drive

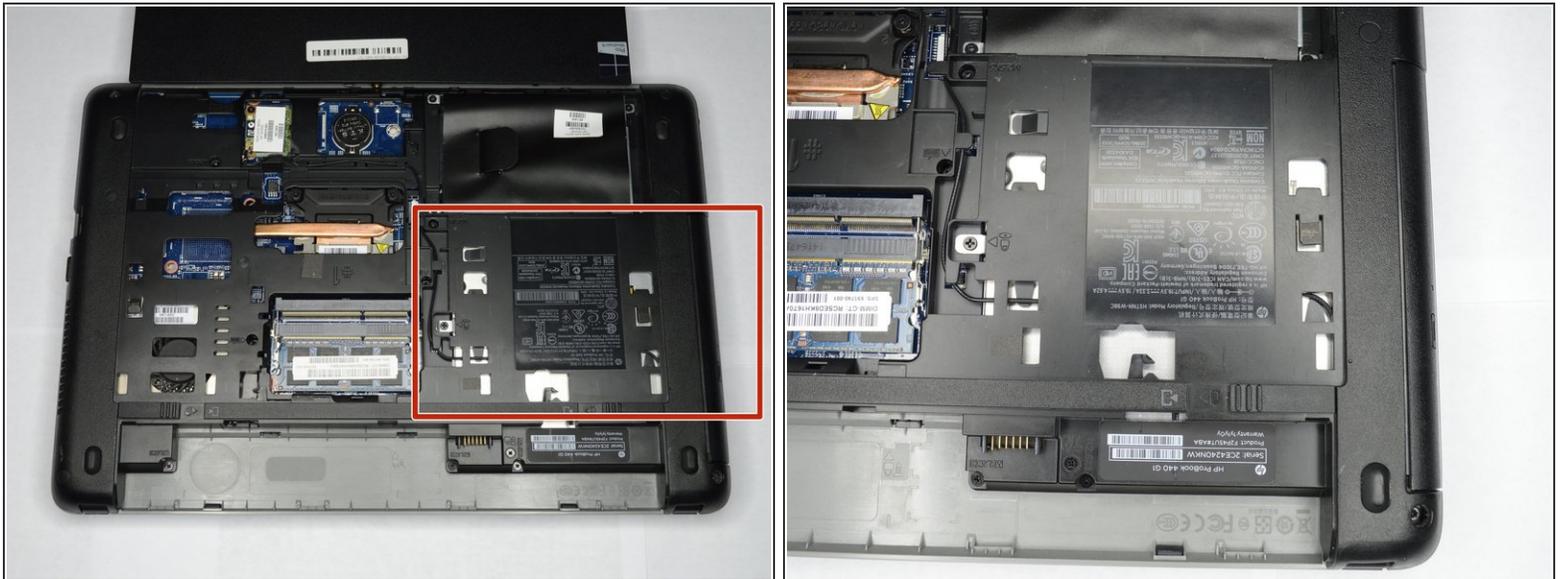

- Locate the optical drive, near the battery on the right side.

Step 6



- Remove the Philips PM2.5x6.0 screw that attaches the optical drive to the computer.

Step 7



- Slowly remove the optical drive, by pulling it straight out of the slot.

To reassemble your device, follow these instructions in reverse order.