


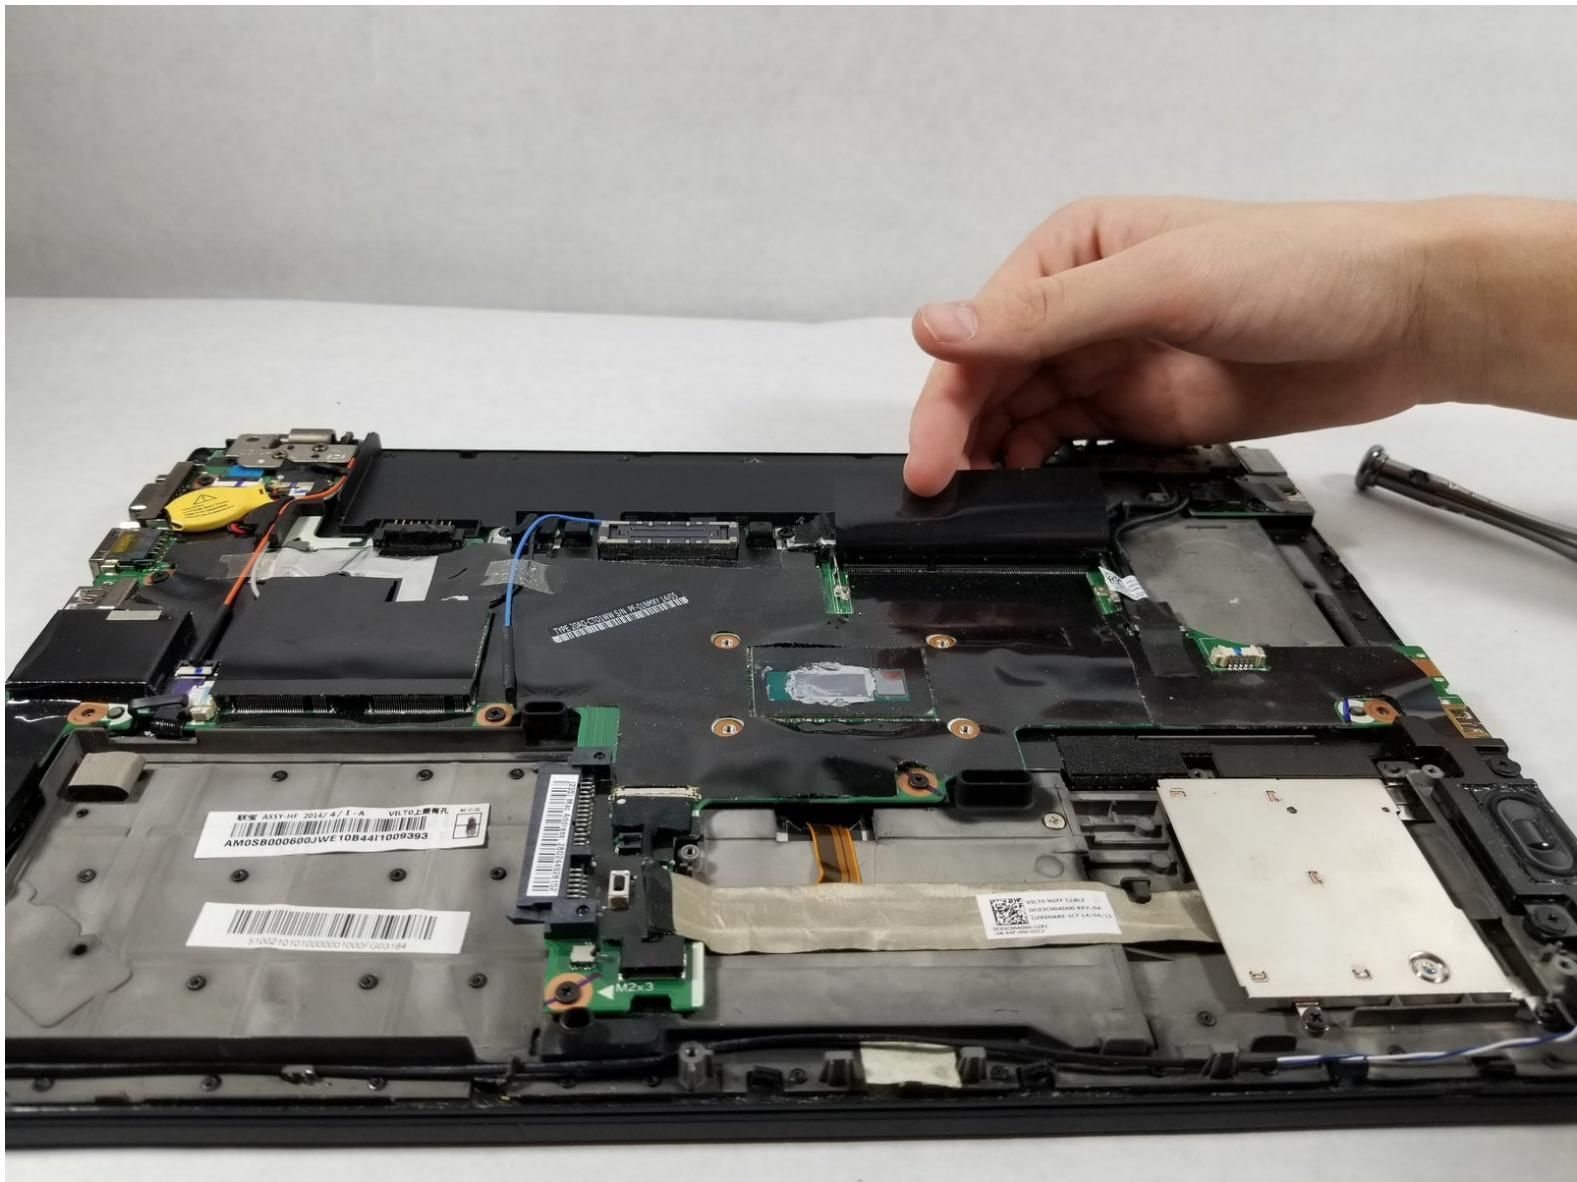

Lenovo Thinkpad T440s RAM Replacement

Is your device experiencing problems with...

Written By: Terelle Montalvo



INTRODUCTION

Is your device experiencing problems with loading and saving while the computer is in use?
Consider using this guide to replace the RAM in your device.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



PARTS:


- [DDR3-1600 / PC3-12800 DDR3 SDRAM SO-DIMM](#) (1)
RAM
Amazon RAM upgrade

Step 1 — Back Panel




- Make sure to power down and turn off your device before proceeding with the repair.
- Flip your laptop over so that the backside is facing you.

Step 2

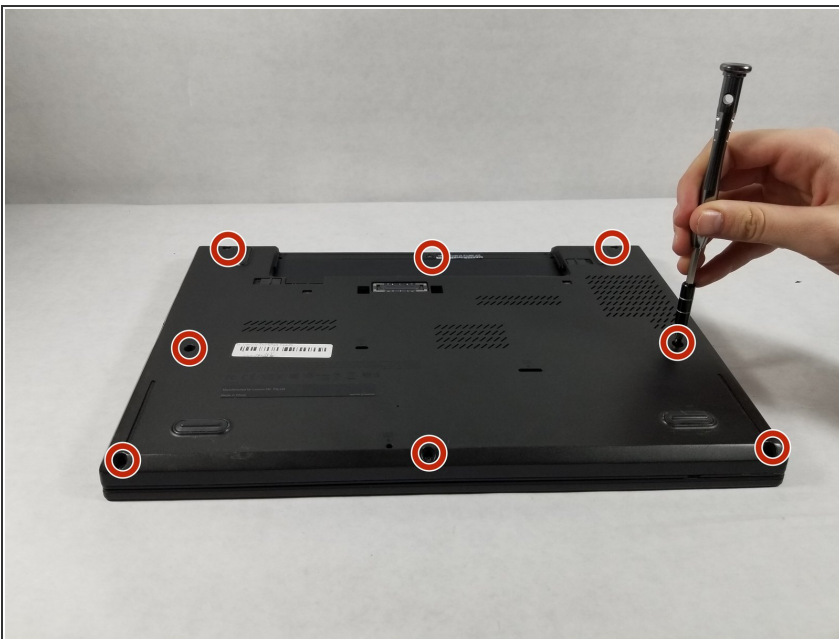


- Using a Phillips #1 screwdriver, remove the eight screws securing the backplate.
- Don't try to force screws which won't come out. They are held in place by a stopper on the reverse side. This will not prevent you from removing the backplate.

Step 3

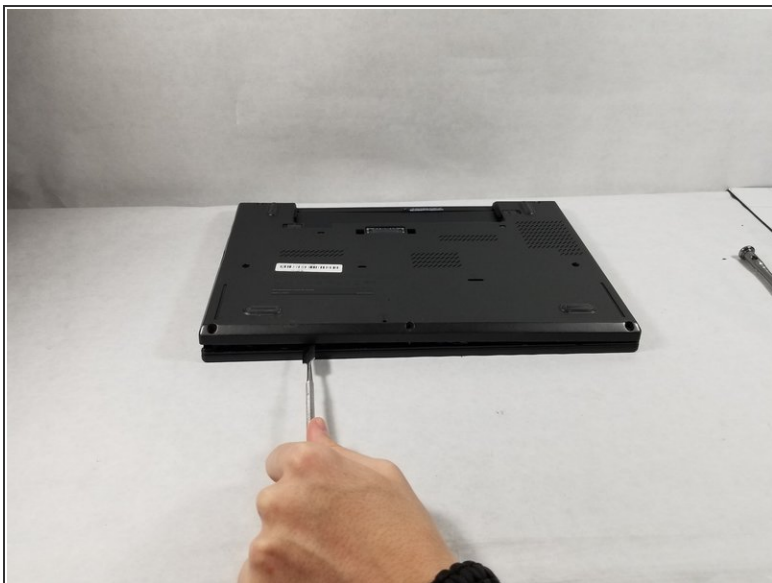


- Using the metal spudger, wedge it in the seam where the backplate meets the front plate and run the tool along the seam to separate the backplate.

Step 4

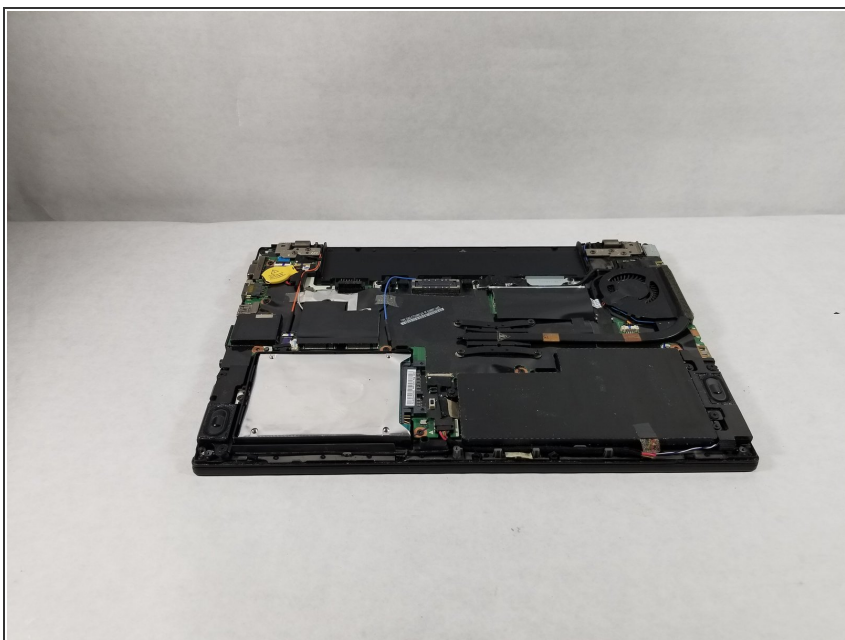

- Remove the back panel from the device.

Step 5 — RAM

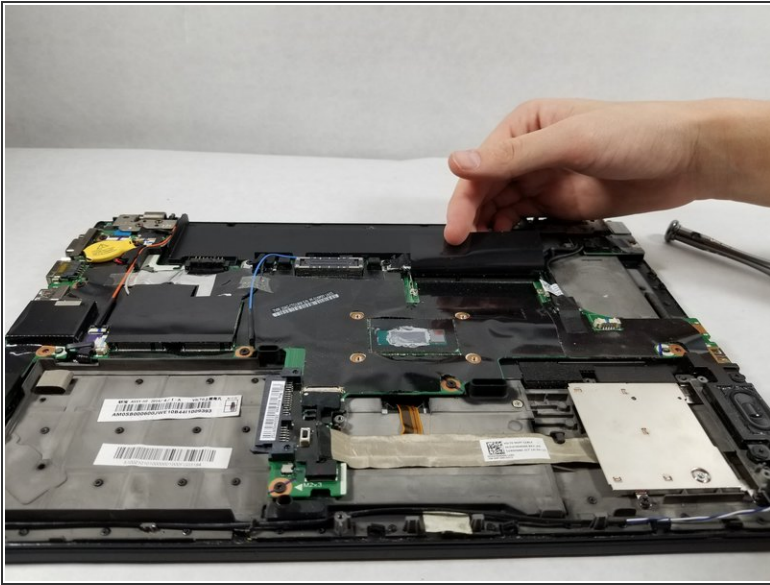

- Right below the battery slot on the right half of the device is where you can access the RAM card Slot.
- Remove the RAM by pulling it straight out of the device.

To reassemble your device, follow these instructions in reverse order.