



Hisense Chromebook C11 Back Panel Replacement

Replacing the back panel on your Chromebook C11...

Written By: Alexander Burrell



INTRODUCTION

Replacing the back panel on your Chromebook C11 is a simple process, and is a great way to make it look like new again. This guide demonstrates how to properly remove and replace the back panel on a Hisense Chromebook C11. For this replacement it requires the iFixit opening tool, if you are not well know to the tool follow this link to learn more about it. ([iOpener Instructions](#))

Follow the steps below to safely and successfully fix it.



TOOLS:

[Phillips #00 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Back Panel



- Remove the front two hub caps.
- When finished, you should be able to remove the back cover.

Step 2

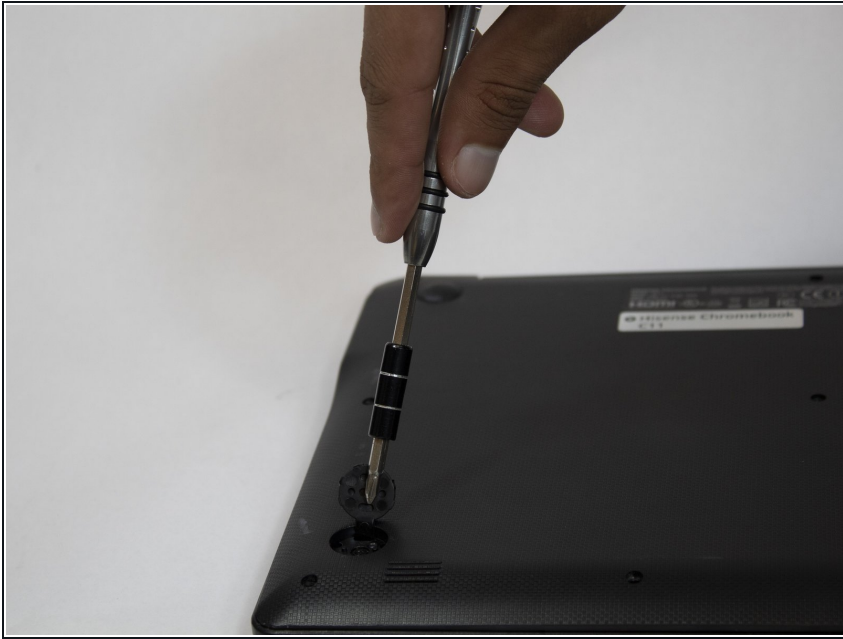

- Unscrew the screws with the Phillips #00 screwdriver.

Step 3



- Pry the perimeter of the case open with the plastic opening tool.
- Remove the back panel.

To reassemble your device, follow these instructions in reverse order.