

Baby Monitor Teardown

Written By: Brady Cabe



INTRODUCTION

This hand-me-down baby monitor has a busted volume/on-off switch. Monitor only operates while pressing down on the volume dial. If you think I have the energy to hold down that dial while trying to sleep, you got another thing coming. Baby crying... gotta go.



TOOLS:

- Flathead Screwdriver (1)
- Phillips #1 Screwdriver (1)

Step 1 — Teardown








- Here is the baby monitor in all its glory.
- Start by turning the device speaker-side down.
- Remove the flathead screw securing the battery cover using a <u>flathead screwdriver</u>.
- Remove the battery cover after fully disengaging the screw.

Step 2






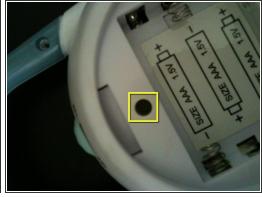

- Remove the batteries from the compartment.
- Remove the five phillips screw holding the casing together using a phillips #1 screwdriver.
 - The fifth screw is hidden beneath the battery cover, toward the center of the monitor and is recessed deep into the casing.



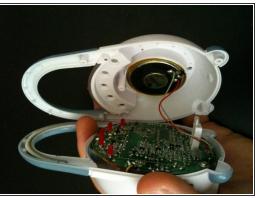




- CAUTION: Do not yank the casing apart!!!
- Gently pry from the bottom and work a finger along the side and until monitor pops in half.
- The speaker cabling is soldered to the main board and the speaker is stuck in the front casing with adhesive.
- Lay the two halves as shown.

Step 4



 Remove the two screws securing the main board.



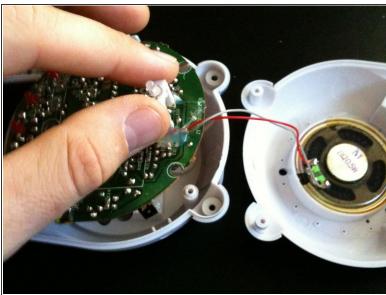

- Pry lightly around the edge of the main board between the board and the casing to help free the board. Fingernails, a <u>spudger</u>, or plastic opening tools can be used for this task.
- DO NOT TRY TO REMOVE THE MAIN BOARD COMPLETELY!!! There are soldered items that need to be dealt with. Follow along closely.
- Gently, and I mean gently, pull up on the LED assembly to loosen the main board from the rear casing.
- Any resistance should indicate that the board needs to be loosened from the casing, around the edges, more before proceeding.



- PROCEED WITH CAUTION!!! The antenna cable and the battery contacts are soldered onto the board.
- Your monitor should look like this, with a small gap between the main board and the rear casing.
- The next step will merely free the volume control dial from the casing and NOT free the main board from the casing.
- To remove the main board from the casing, you MUST desolder the antenna cable and two battery contacts from the board.







- Create about a 30 degree angle between the rear casing and your workspace, lifting the casing by the top end. I used 3 decks of playing cards to prop up the casing from my workspace.
- Lift the main board from the rear casing at the bottom, making sure the volume dial clears the screw retainer post. DO NOT COMPLETELY REMOVE MAIN BOARD!
- Once free, set the main board back down on the casing.
- You are now free to desolder any of the contacts that need repair. In my situation, I will be examining the volume dial and will not need to desolder.
- Good luck!

1