



# ASUS Chromebook C100PA-RBRKT07 Battery Replacement

How to replace the battery for the ASUS Chromebook C100PA-RBRKT07.

Written By: Tiffany Foo



# INTRODUCTION

Details to remove the battery of ASUS Chromebook Flip C100PA-RBRKT07



## TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)
- [JIS #1](#) (1)
- [JIS #00 Screwdriver](#) (1)



## PARTS:

- [ASUS Chromebook C100P Battery](#) (1)

## Step 1 — Battery

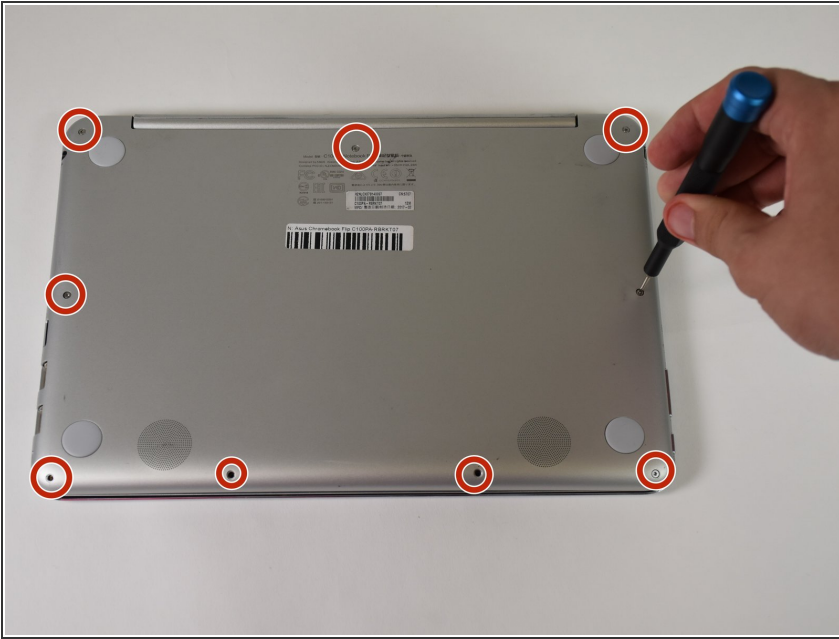

- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

## Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

## Step 3




- Use the T5 screwdriver to remove the 6 3.1 mm screws under the pads.
- ⓘ There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

## Step 4




- Use the iFixit opening tool to pry the backing of the device off.

## Step 5

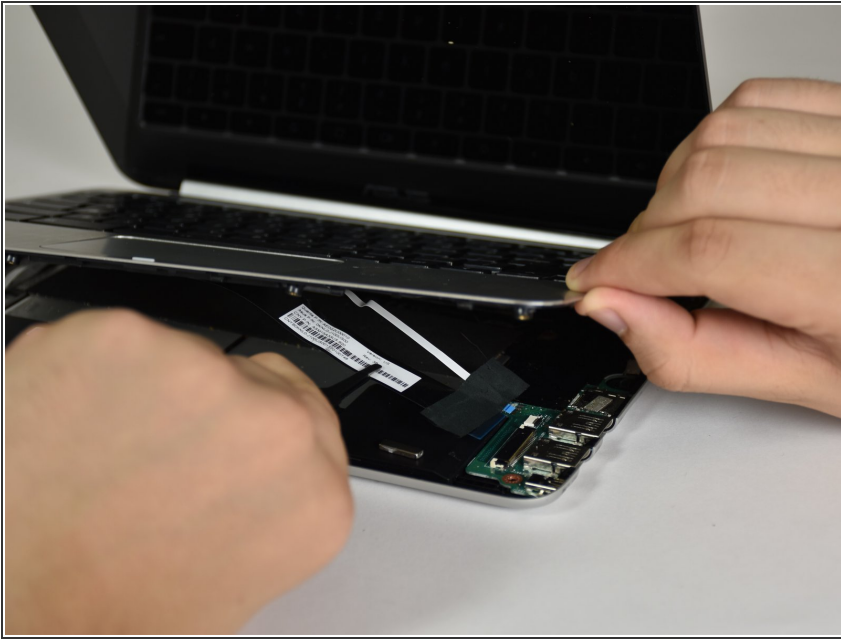

- Use the tweezers to separate the cables from the motherboard.
- ❗ You need to reach inside and peel some tape to disconnect the wire.



## Step 6

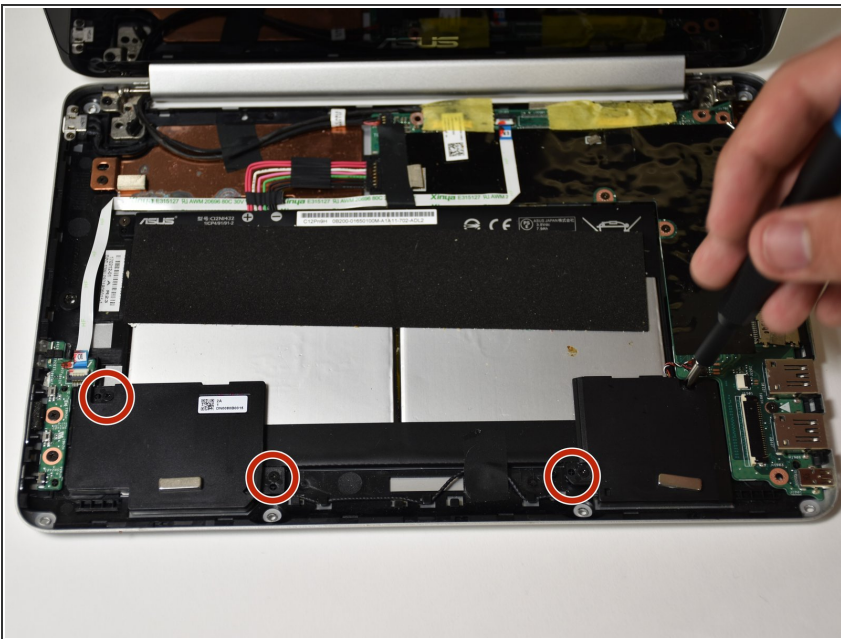

- Use the JIS1 screwdriver to remove the four 2.1 mm screws around the audio cards.




## Step 7

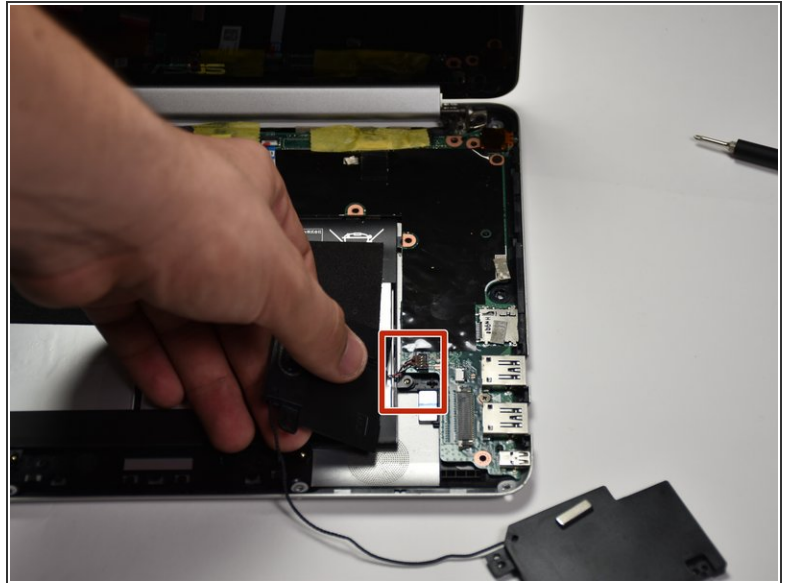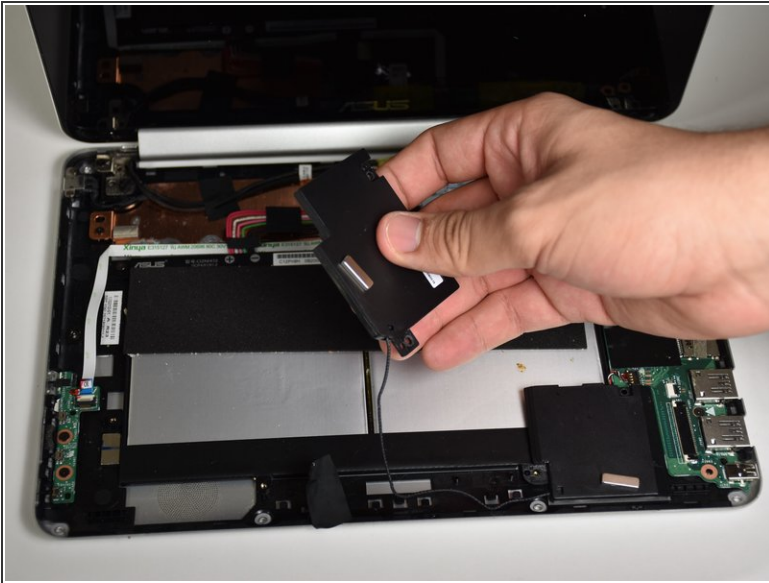

- Gently disconnect the audio cards, exposing the battery.

## Step 8

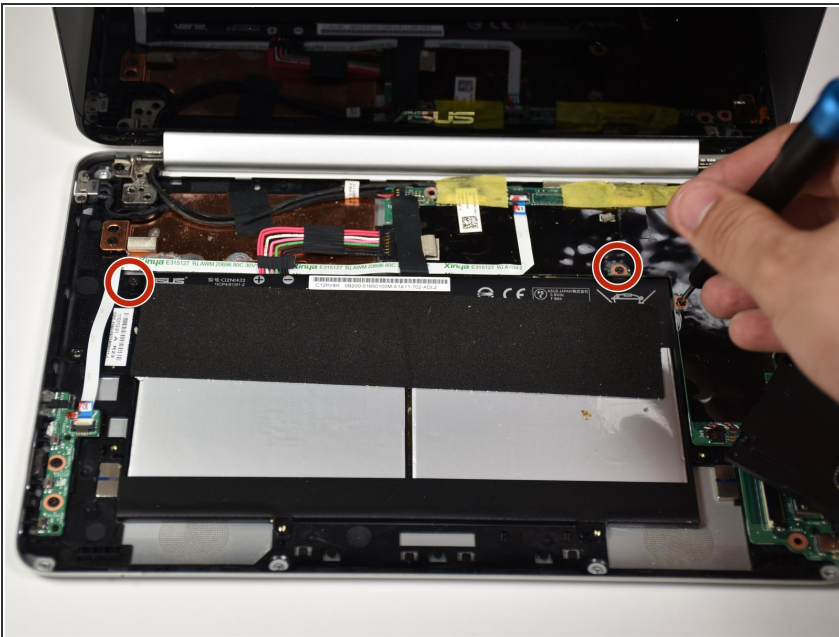

- Use the J00 screwdriver to remove the three 1.7 mm battery screws.

## Step 9



- Grip the battery and remove it from the device.
- Remove the battery cable out of the motherboard by lifting the battery cables.

To reassemble your device, follow these instructions in reverse order.