




HP 15-ay052nr Screen Replacement

How to replace a HP 15-ay052nr screen.

Written By: Alicia Cardell

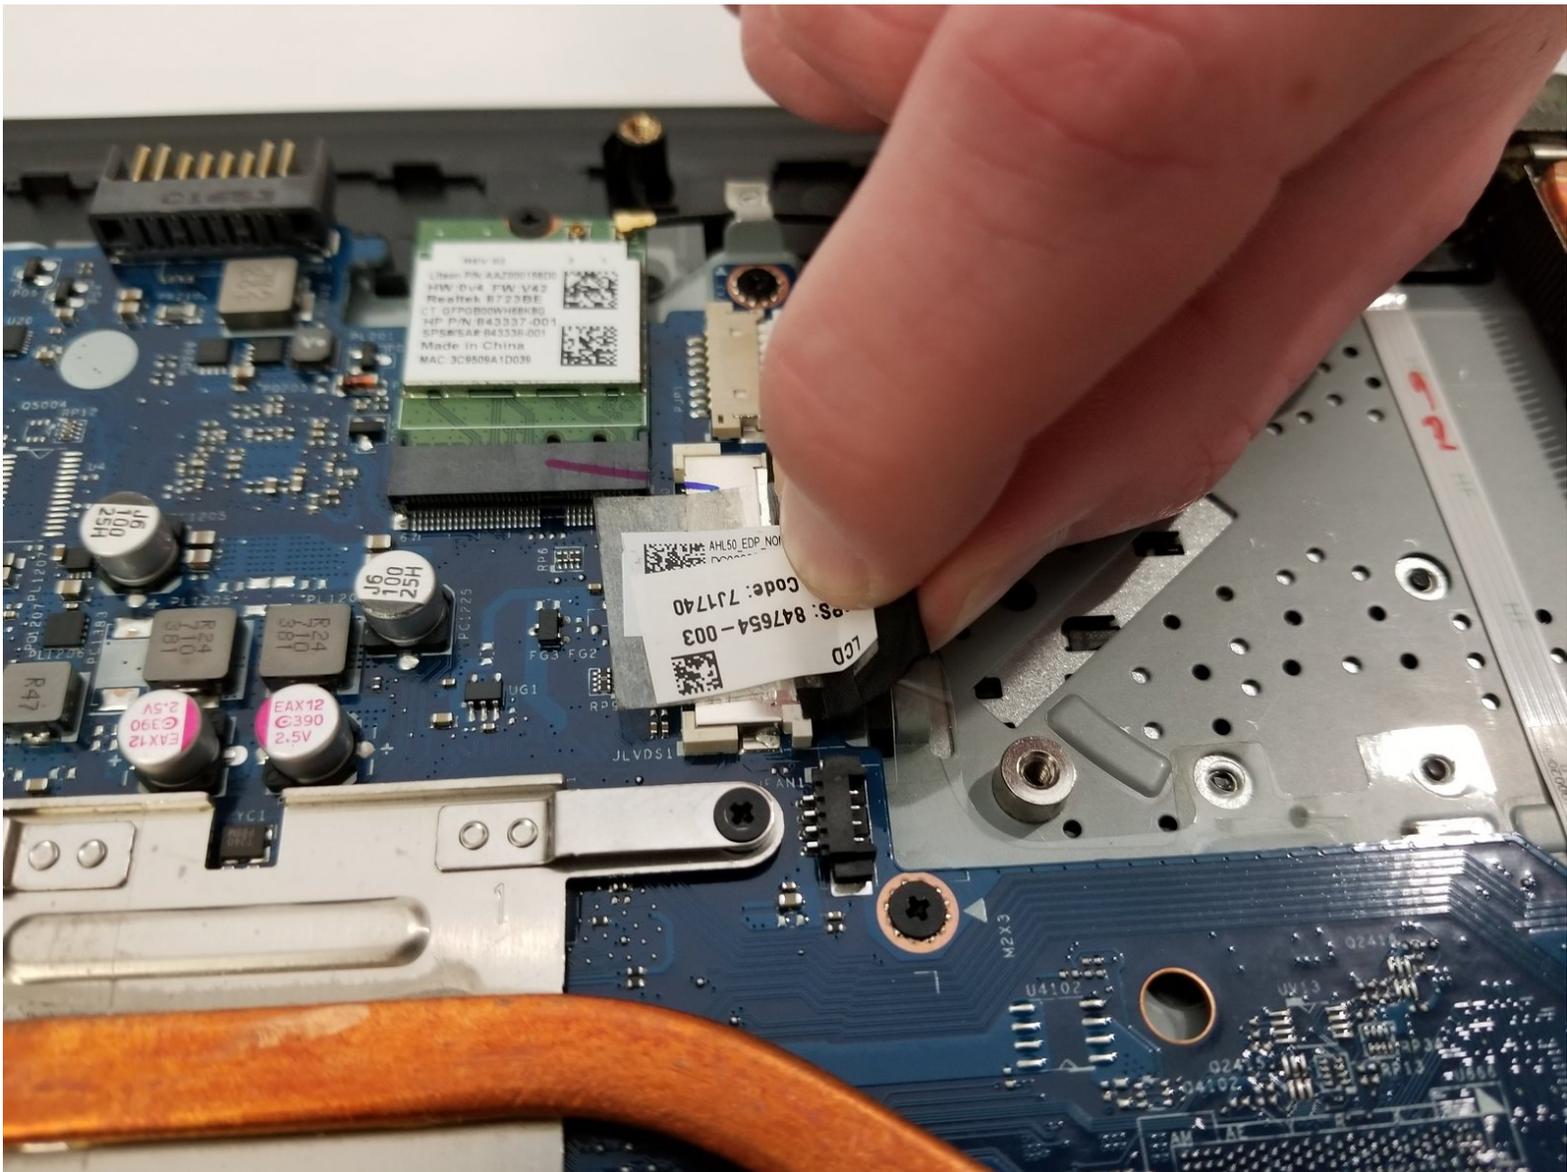

INTRODUCTION

The device's screen will not light up or display a proper image. The screen could be damaged and need replacing. See the [Troubleshooting](#) page for this device before tearing it down.

TOOLS:

- [JIS #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



⚠ To protect the device and yourself, make sure your device is completely powered down before disassembling. Disconnect all external devices before starting any tear down process.

- Turn the device and lay it upside-down on a flat surface so the base of the computer is facing upwards.

Step 2




- Identify the two (2) sliding lock mechanisms on either side of the battery and slide them towards the center.
- i** The sliders are located at the back of the device on the side where the display hinges are.
- i** The slider closest to the optical drive (CD reader) clicks open but the opposite slider has a spring.

Step 3



- Pull the battery slightly up and out to remove.
- ⓘ If the battery doesn't pop out, the sliders weren't pushed in far enough. Push the sliders towards the center until the battery pops out.

Step 4 — Bottom Cover

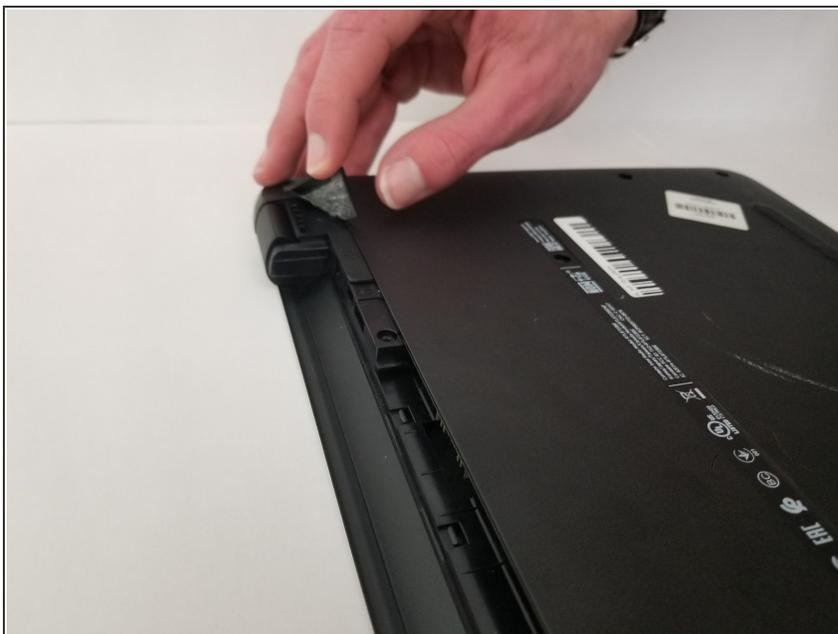

- Remove the rubber feet on the bottom of the device to access all the screws.
- ⓘ There are two rubber feet, one on each side of the battery compartment.

Step 5



- Unscrew the twelve 9 mm JIS #0 screws on the back of the device.
- Gently remove the optical drive (CD reader) to more easily separate the base.

Step 6



- Unclip the keyboard surface from the base using an iFixit opening tool around the entire border.

Step 7




- Separate the base of the computer from the component assembly.
- ⓘ The optical drive can be placed in the base where it corresponds to prevent misplacing it.

Step 8 — Fan




- Remove the two 6.5 mm JIS #0 screws holding the cooling fan to the base.
- ⓘ The base is the side by the heatsink, which is made of copper.

Step 9

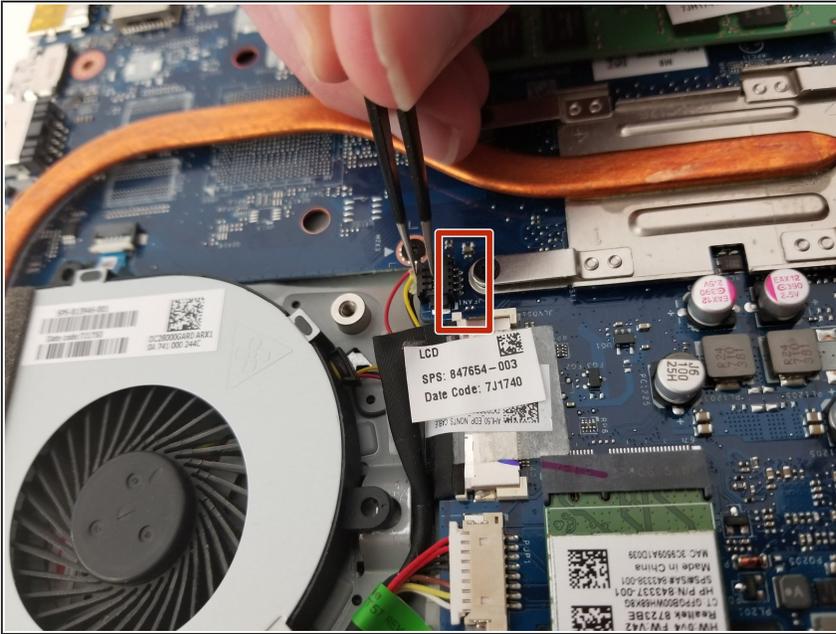

- Unplug the fan cable from the motherboard.
- ⓘ The fan can now be removed.

Step 10 — Screen

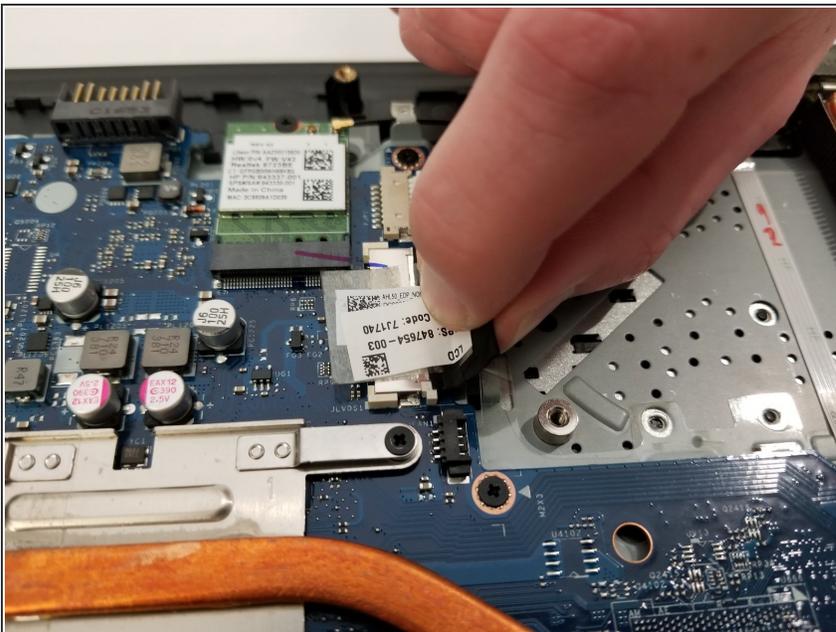


- Disconnect the display cable.

Step 11




- Unplug the wire attached to the wireless adapter.

Step 12

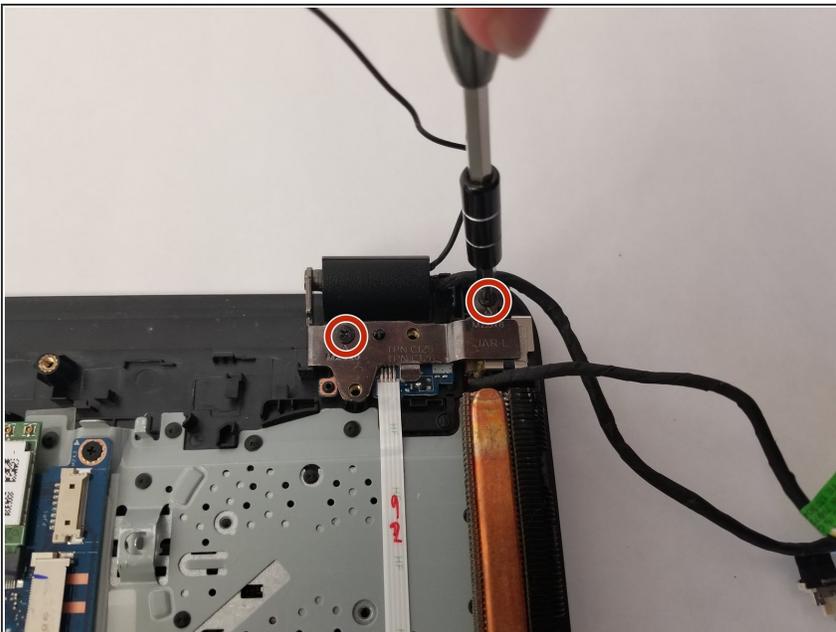

- Remove the two 6.5-mm screws from the fan side of the computer.

Step 13

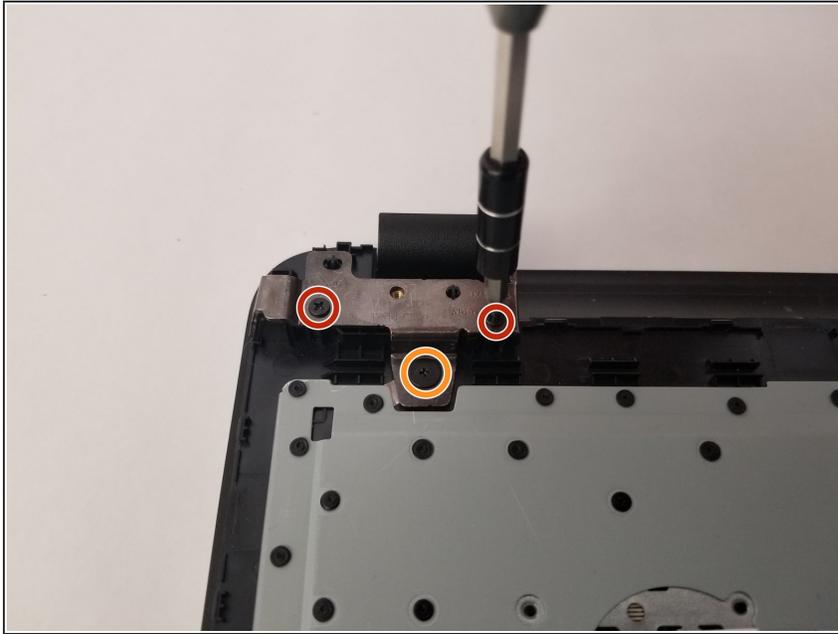

- Remove the two 3mm JIS #0 screws.
- Remove the one broad head 2mm JIS #0 screw.

Step 14




- Lay the display with its back on a flat surface.

Step 15




- Pry open the screen cover using an iFixit opening tool around the entire screen.

Step 16

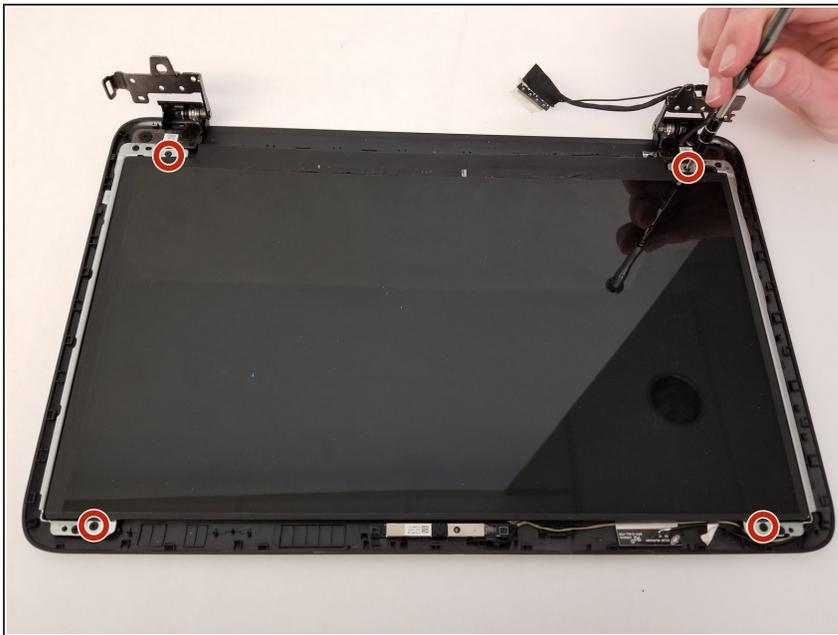

- Remove the four 3-mm JIS #0 screws.

Step 17

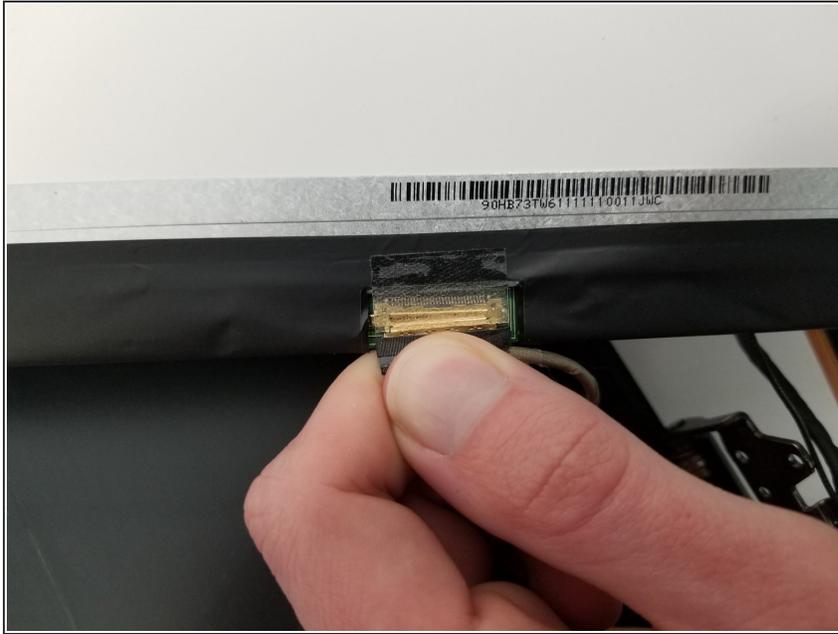

- Unplug the cable connected to the screen located on the bottom.
- The screen should come off and can be replaced.

To reassemble your device, follow these instructions in reverse order.