



# Wireless Bluetooth Water Dancing Speakers (SBT626) from Sharper Image Teardown

Teardown and Repairability of Sharper Image Wireless Bluetooth Water Dancing Speakers

Written By: Kyle Trambley





## TOOLS:

 
 
- [Pro Tech Toolkit](#) (1)
-

## Step 1 — Wireless Bluetooth Water Dancing Speakers (SBT626) from Sharper Image Teardown




- Teardown of Water Dancing Speaker

## Step 2

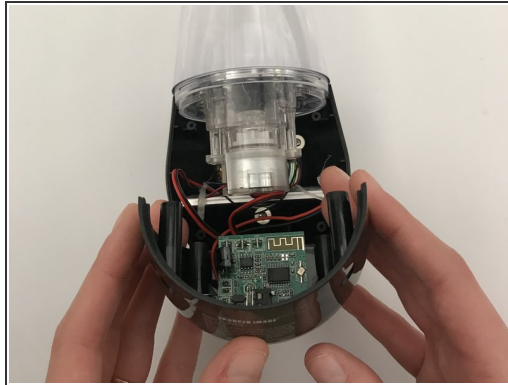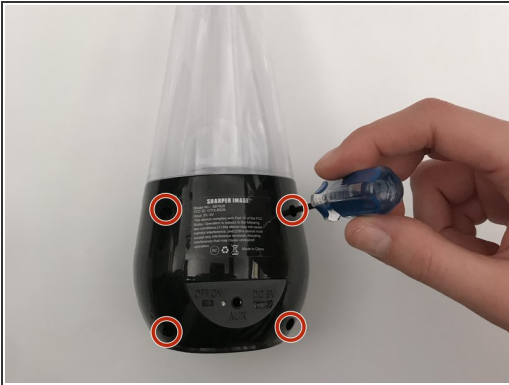


- Remove 4 screws from rear of speaker
- Peel back the rear half of the shell
- Remove the Water/Pump Chamber

### Step 3

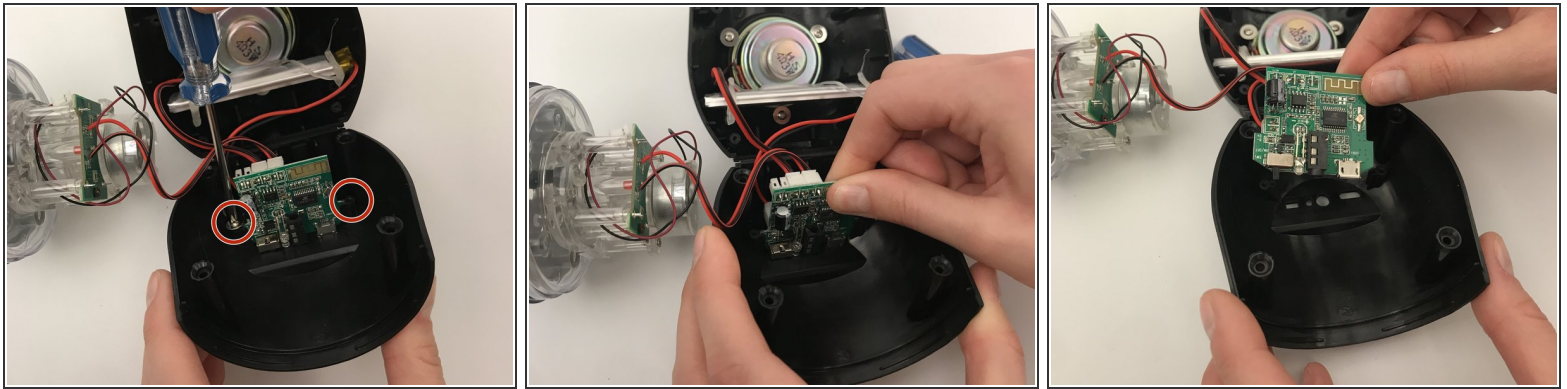 



- Remove 2 screws that hold the logic circuit in place
- Carefully pull the logic board up, out of the plastic slot

### Step 4

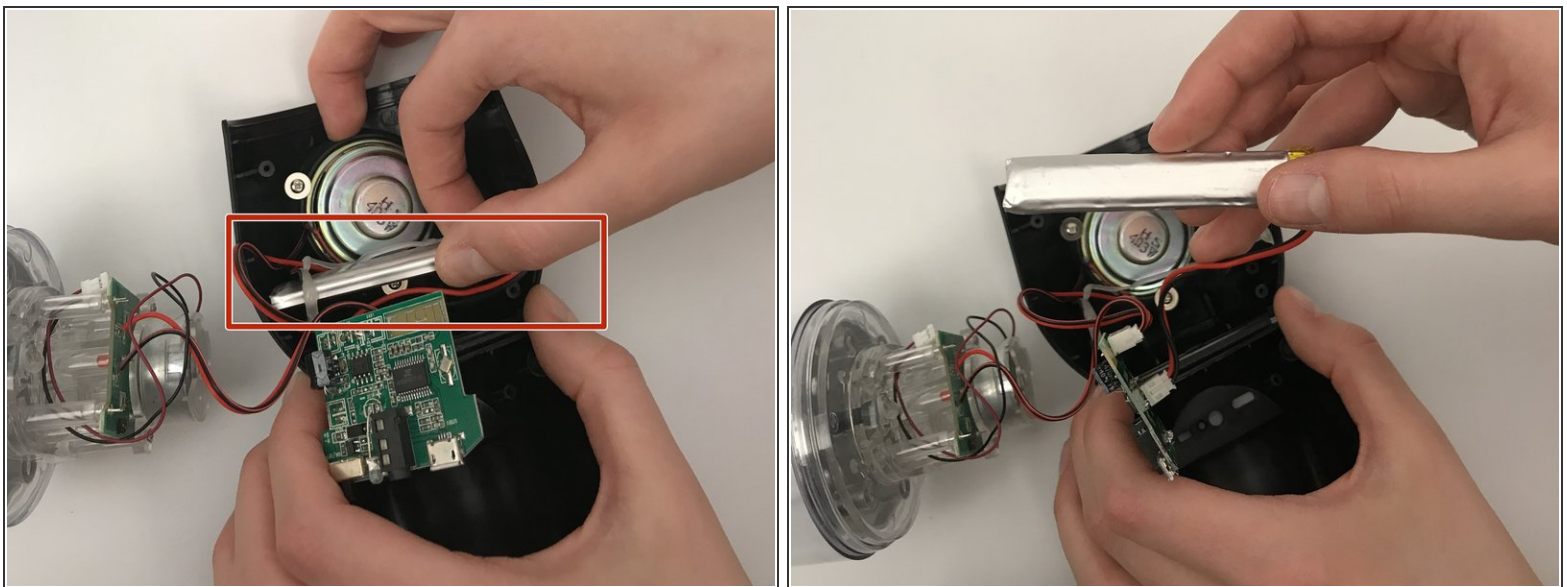 



- Carefully pull the Lithium Ion Battery out of the plastic slot
- ❗ If glue is holding battery in place, slowly peel the glue off the battery.

## Step 5

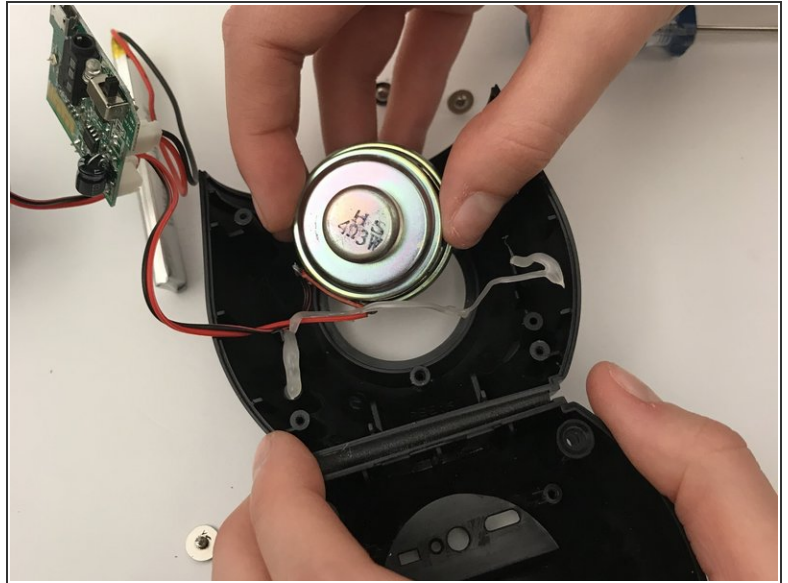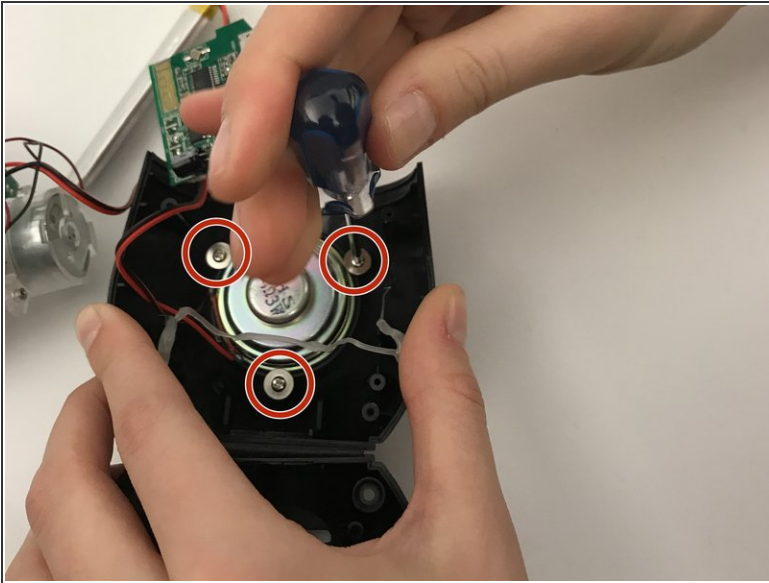  



- Remove the 3 screws holding the speaker
- Remove the speaker from the plastic shell

## Step 6

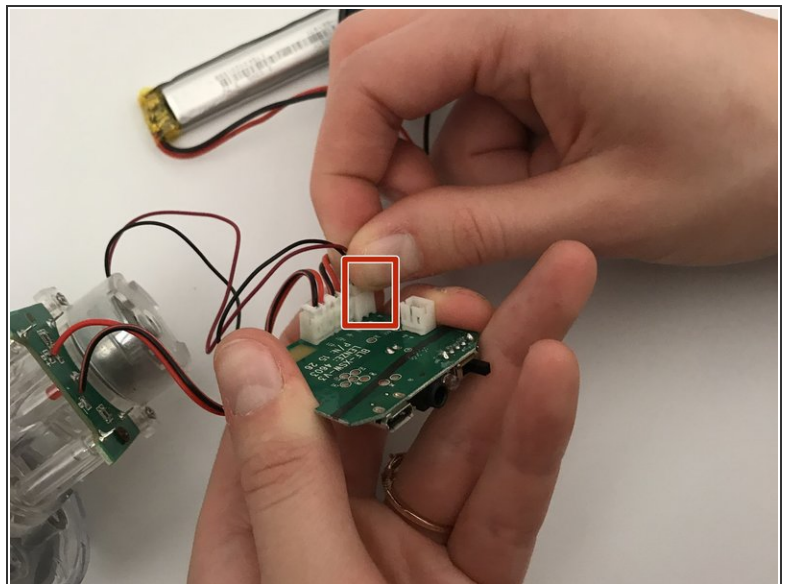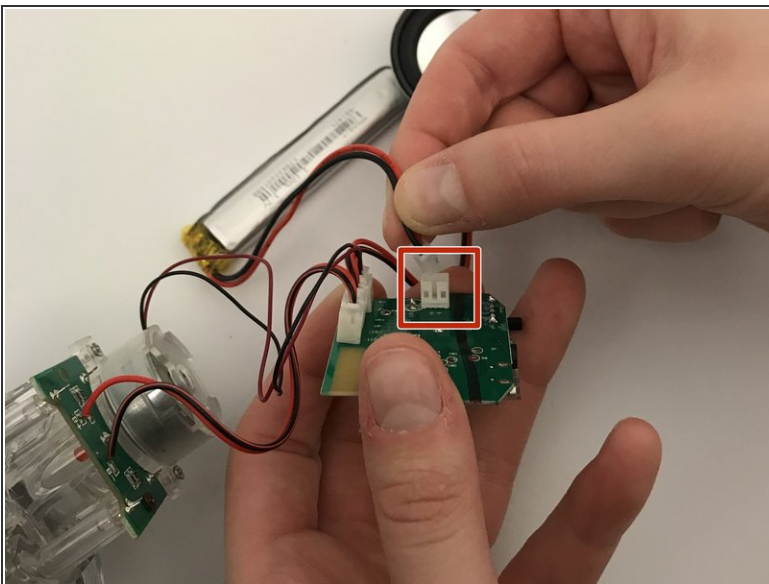  




- Disconnect the battery connector from the logic board
- Disconnect the motor connector from the logic board

## Step 7

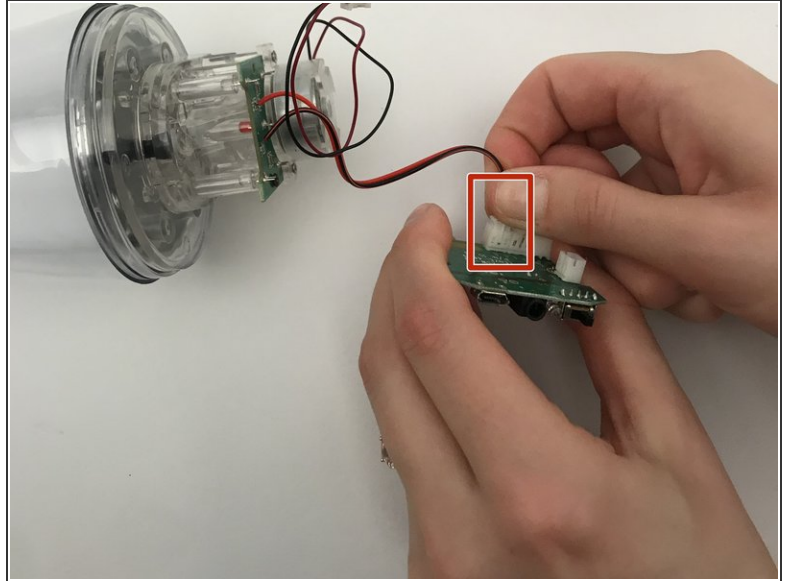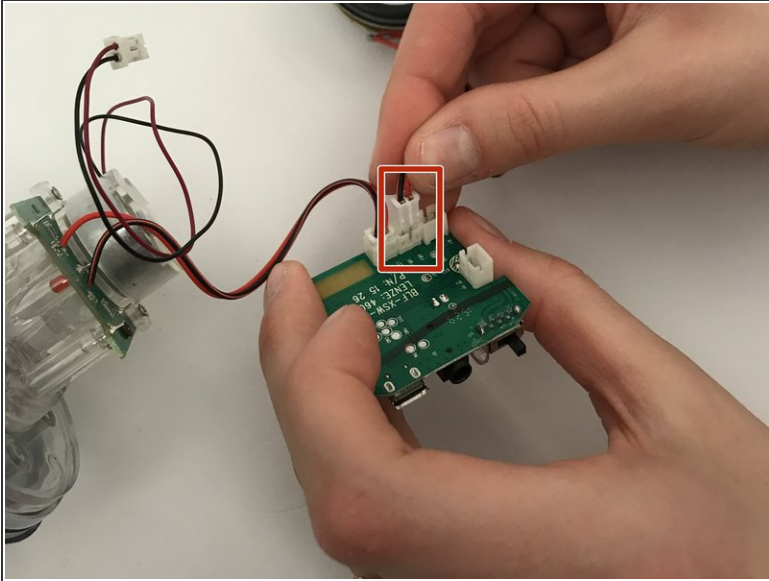  

- Disconnect the speaker connector from the logic board
- Disconnect the LED connector from the logic board

## Step 8

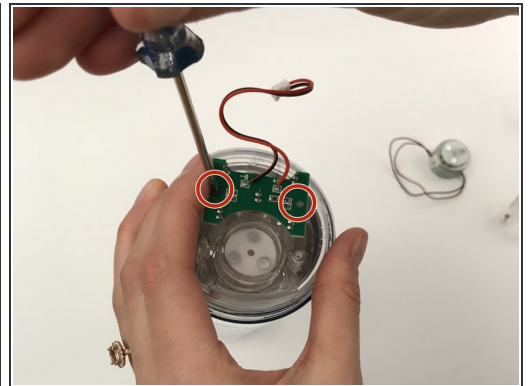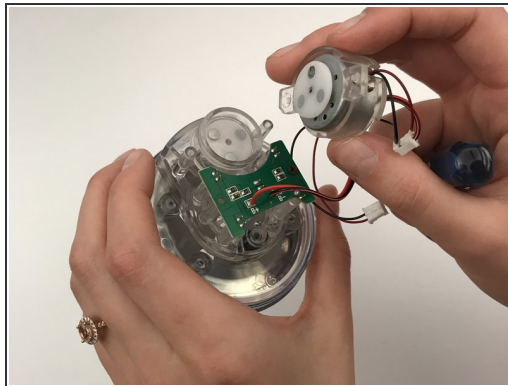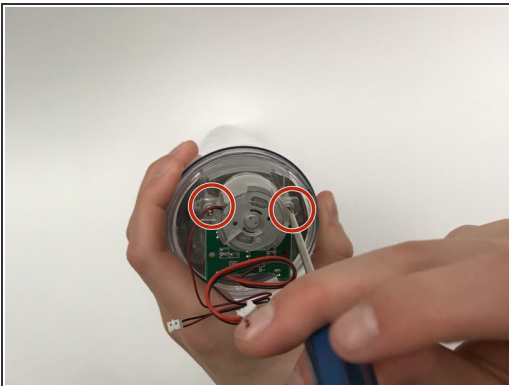   

- Remove the 2 screws holding the motor mount on the water/pump chamber
- Remove the motor mount from the water/pump chamber
- Remove the 2 screws holding the LED board on the water/pump.
- Remove the LED board from the water/pump

## Step 9



- Teardown Finished
- For Reassembly: Follow Guide in Reverse