




# Samsung Chromebook Series 3 Front Camera Replacement

How to replace the front camera assembly on a Samsung Chromebook Series 3 (XE303C12-A01US).

Written By: Tyler Schultz

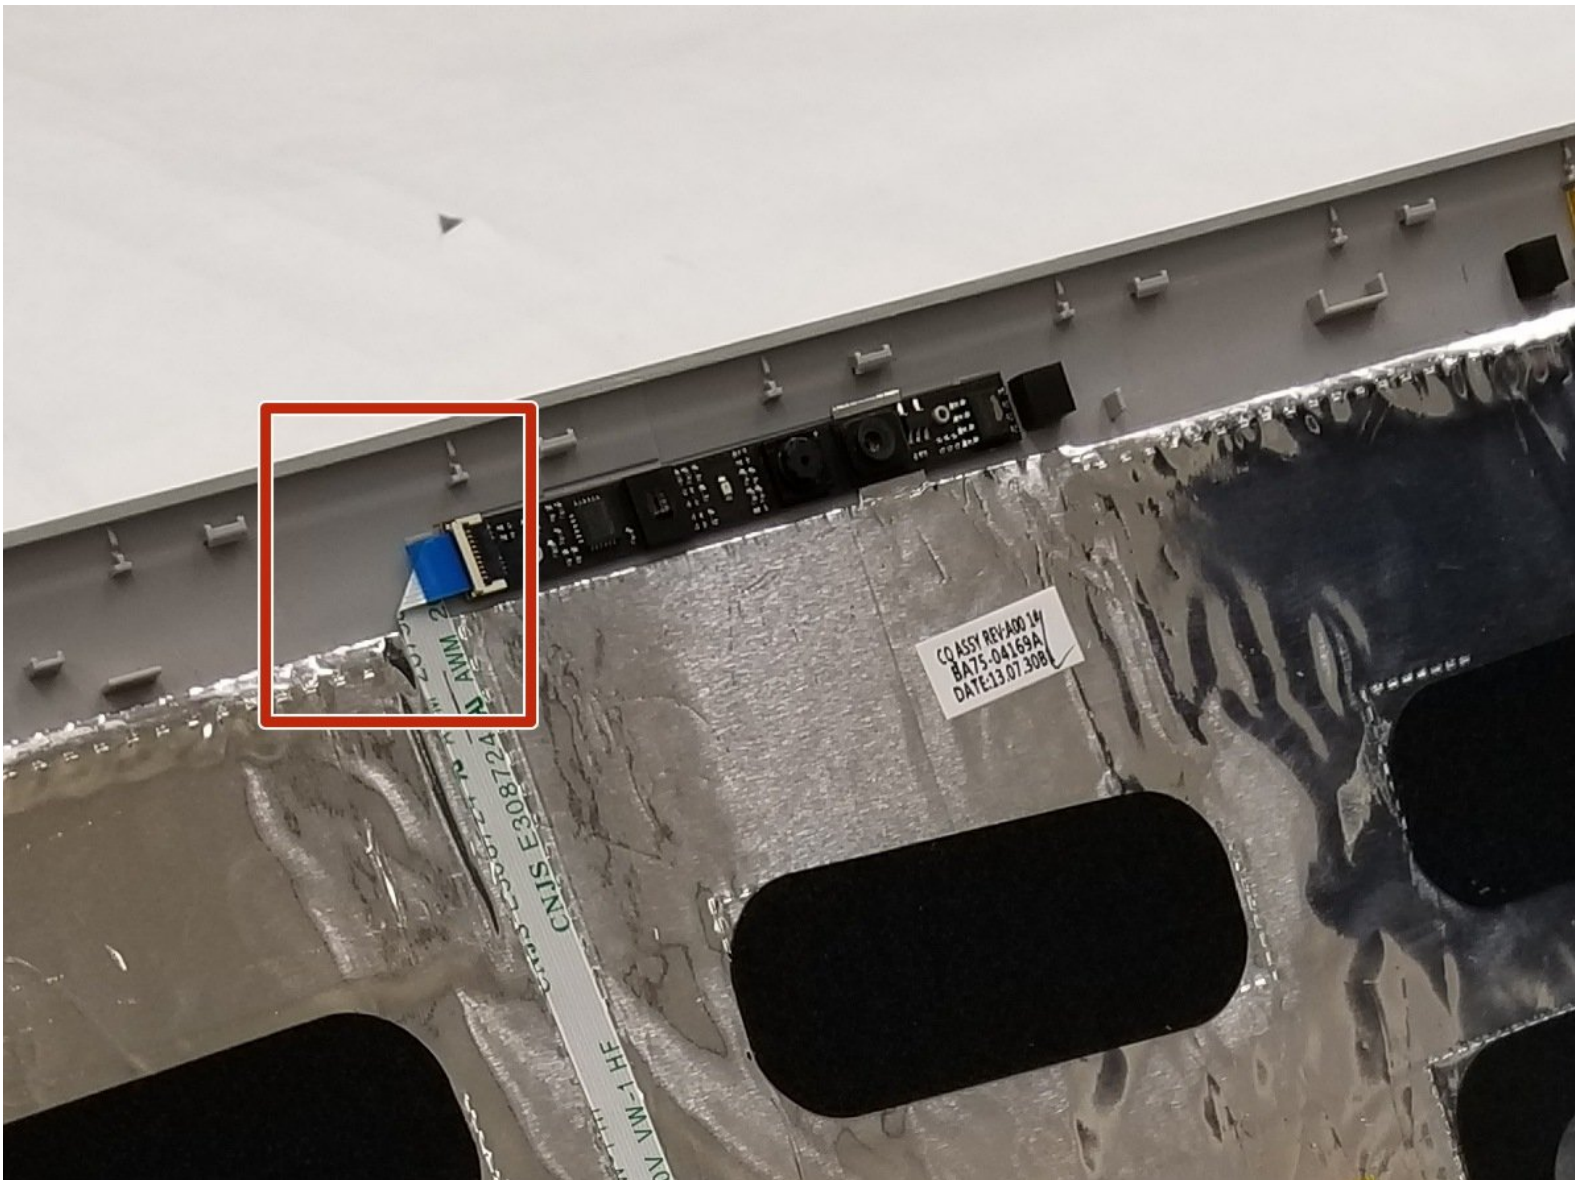

This document was generated on 2020-11-28 07:23:56 AM (MST).

---

## INTRODUCTION




This guide will demonstrate how to remove and replace the front camera assembly on your Samsung Chromebook Series 3.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Screen

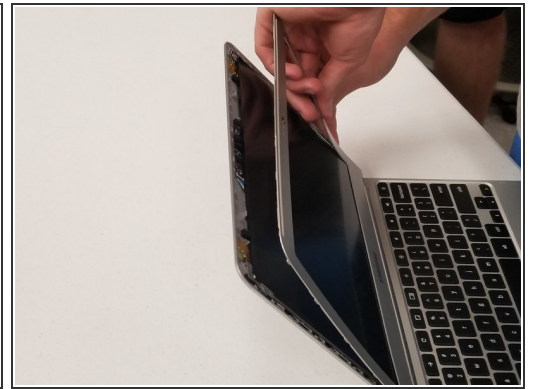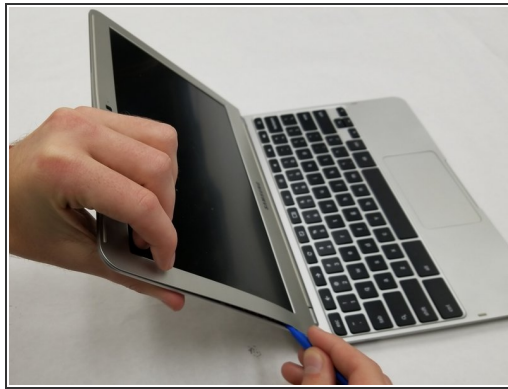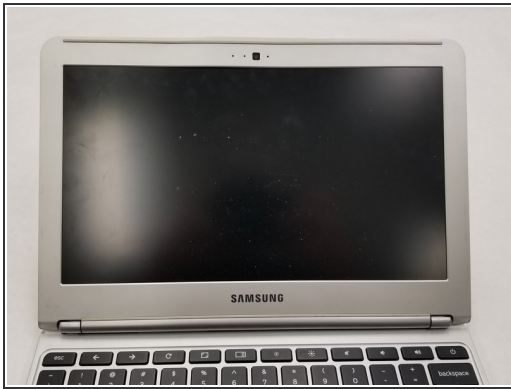

- Use the iFixit opening tool to get under the front cover and pop it out of place

## Step 2

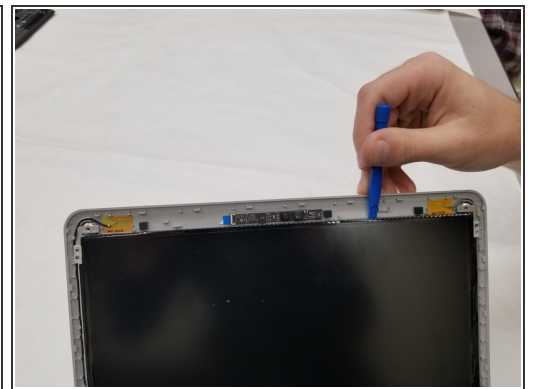

- Remove the four 2.9 mm screws with the Phillips #00 Screwdriver bit.
- Using the iFixit opening tool, try to lift up the screen (it is held down by some adhesive).

## Step 3




- Lift the lever to release the cable and pull the cable out.

## Step 4




- You can now remove the screen.

## Step 5 — Front Camera

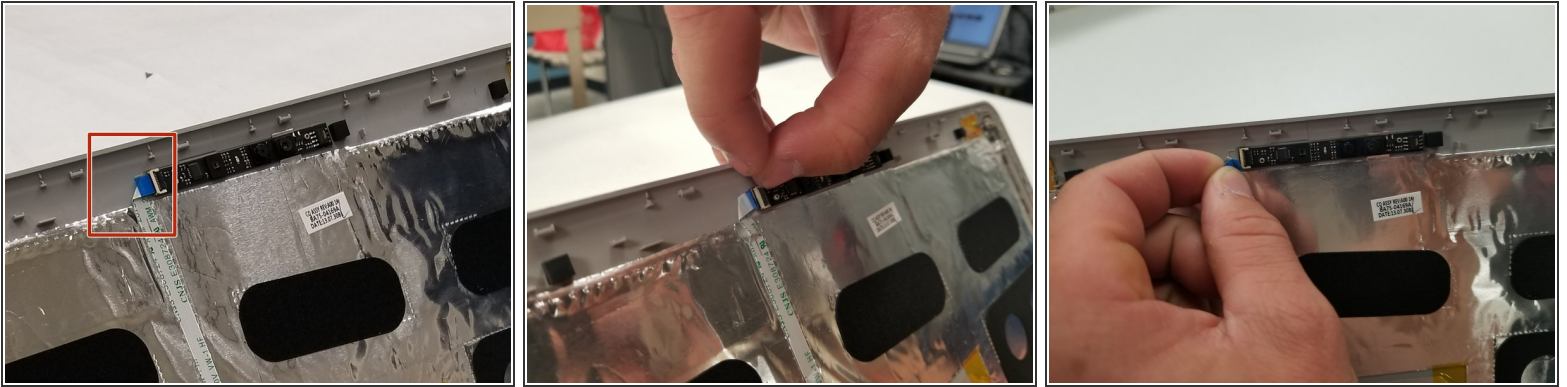

- Disconnect the ribbon cable connected to the front camera assembly.
- You will need to flip up the little black lever to release the cable.

## Step 6

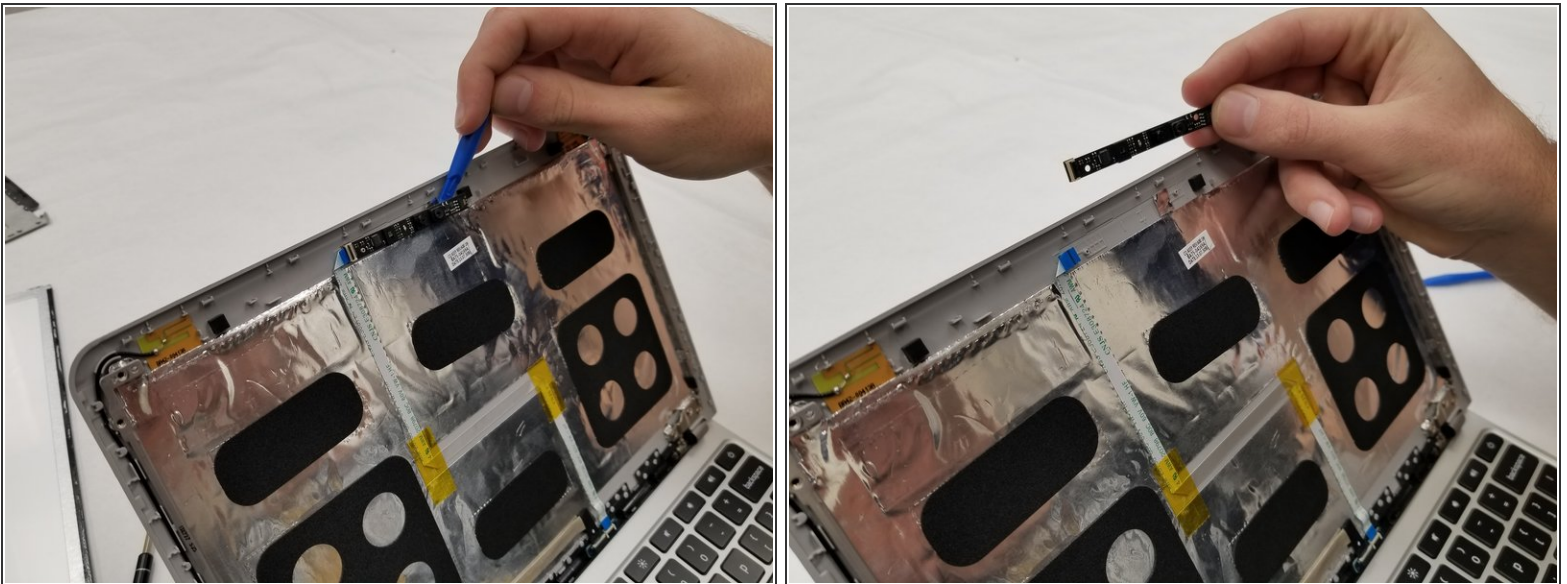

- Use an iFixit opening tool to pry the front camera assembly from the adhesive holding it in place.

To reassemble your device, follow these instructions in reverse order.