




Nikon Coolpix B700 Back Frame Assembly Replacement

Removal of the back frame assembly of the Nikon Coolpix B700.

Written By: Carlos Salgado

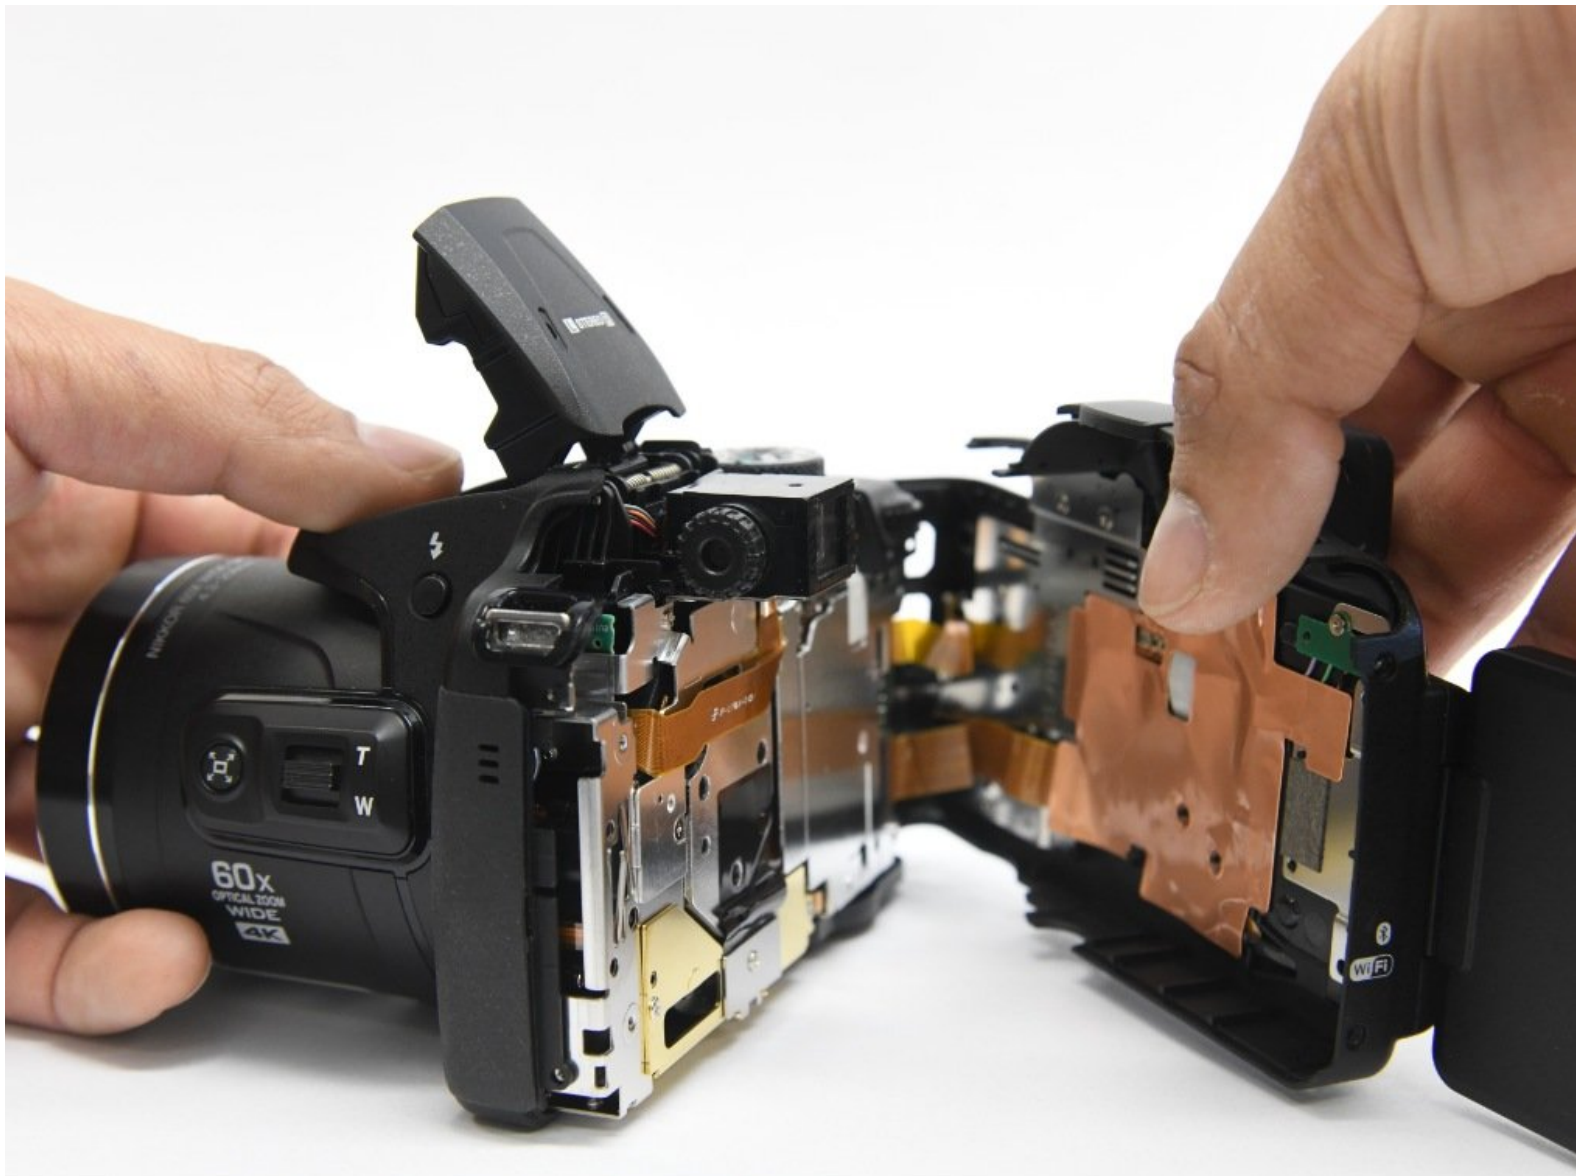

INTRODUCTION

This guide shows how to remove the back frame assembly of the Nikon Coolpix B700 digital camera. This provides access to the internals of the device.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Frame Assembly



- Use the Phillips screwdriver to remove the two 5.5 mm screws on the left side of the camera.

Step 2



- Use the Phillips screwdriver to remove seven 5.5 mm screws from the bottom of the camera.

Step 3



- Use the Phillips screwdriver to remove the two 5.5mm screws on the right side of the camera.
- Open the HDMI flap to remove a 5.5mm screw.
- ☑ Don't forget to replace the hidden screw under the HDMI flap during reassembly.

Step 4




- Use the Phillips screwdriver to remove the two 5.5mm screws under the LCD panel.

Step 5





- Open the flash assembly and insert the spudger into the slot under the flash unit and twist.
- While twisting, pry apart the shell to split the camera in half.

Step 6

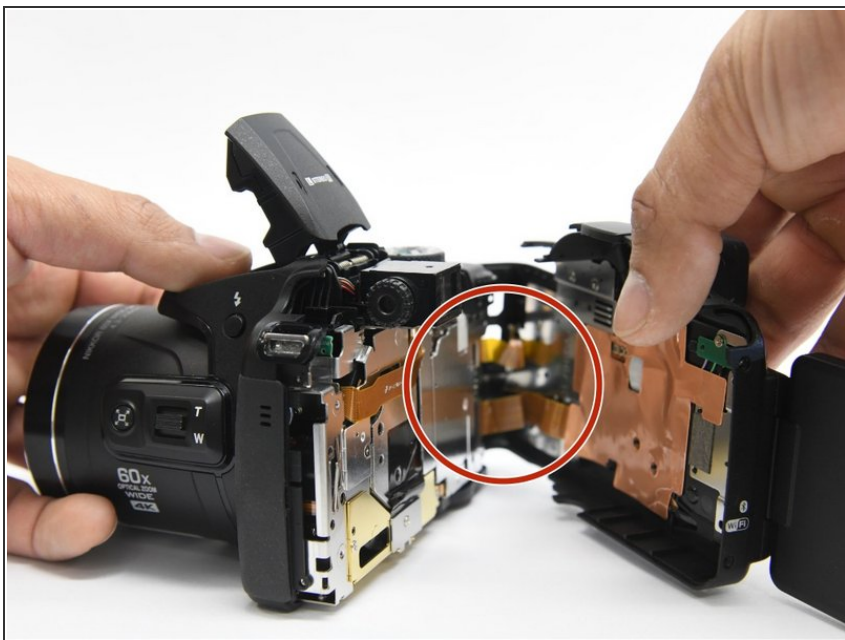

⚠ Be careful not to damage the ribbons that connect the halves together.

Step 7

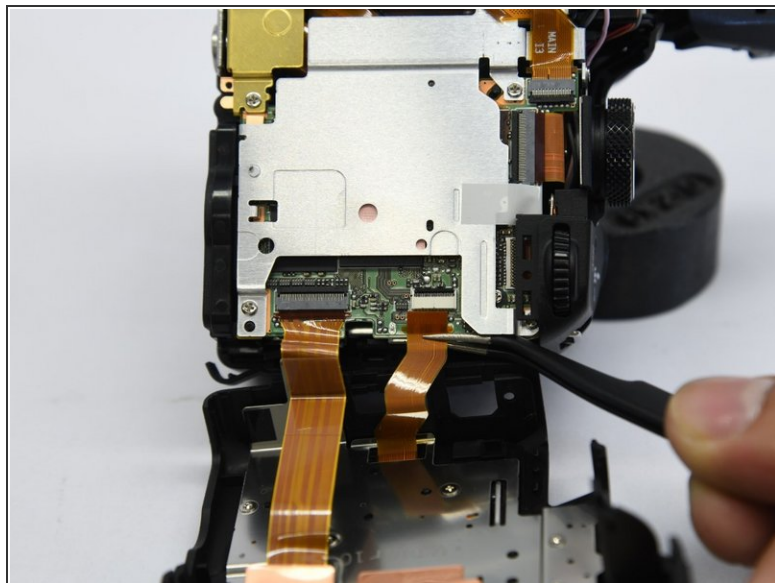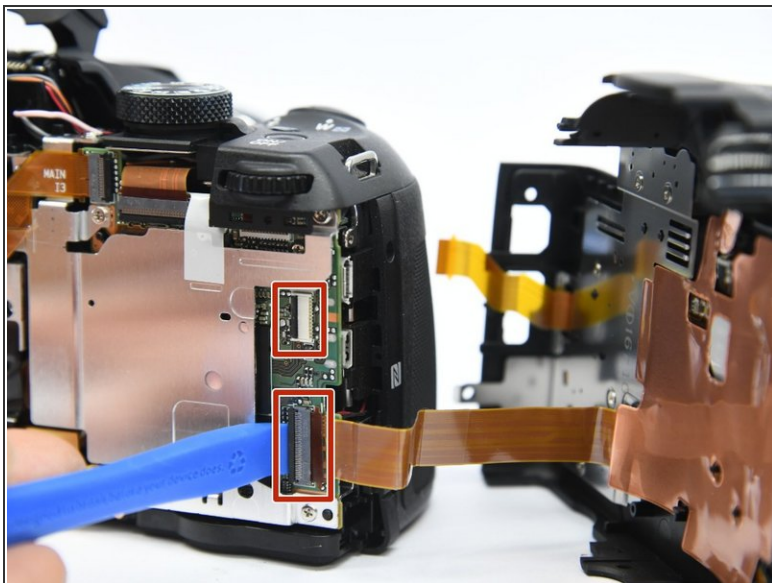

- Place the pry tool under the black latch. Lift gently until the latch flips up.
- Gently pull the ribbon away from the latch.

⚠ Be gentle when taking ribbons out and apart because they are fragile.