




Lenovo Tab 4 8 MicroSD Card Reader Replacement

Written By: Ivan Chavez

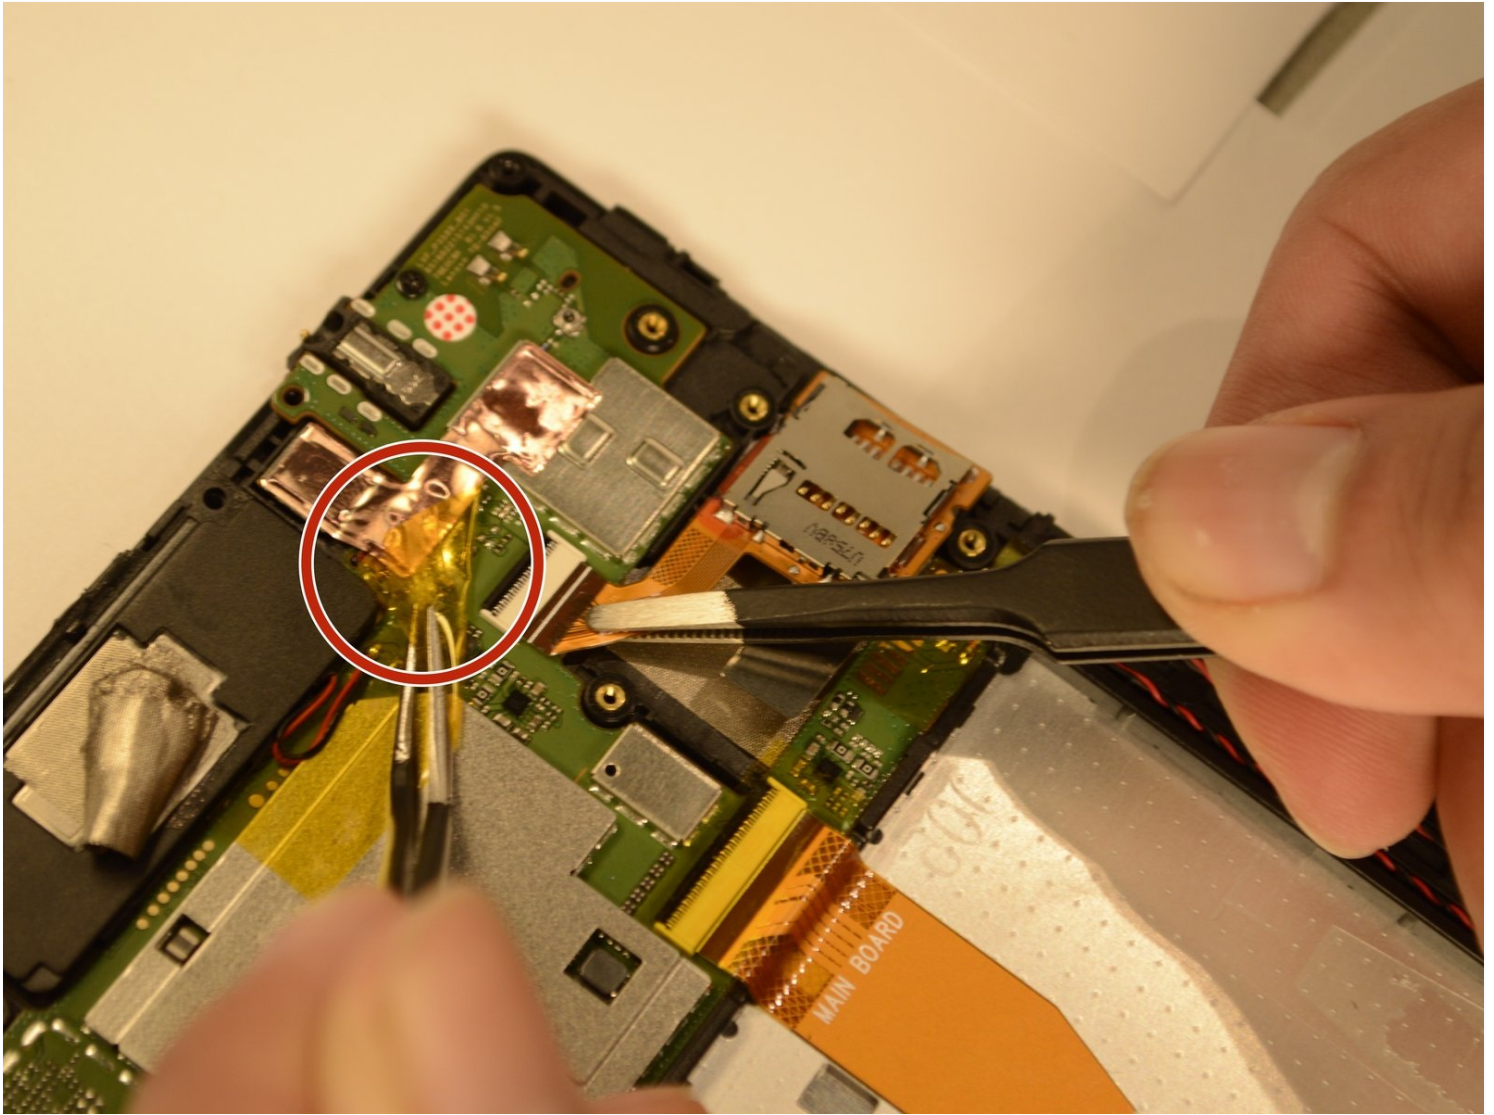

TOOLS:

Phillips #000 Screwdriver (1)

Spudger (1)

iFixit Opening Picks (Set of 6) (1)

Tweezers (1)

Step 1 — Battery



- Start at the microSD slot.
- Use the opening pick to slide underneath the back cover of the tablet.
- Slide the opening pick around the tablet until the back cover is off.

Step 2




- Remove the 8 screws with a Phillips #000 screwdriver [bit].
 - There is a screw under the blue "s" sticker.
- Remove tape holding plate down.
- Use precision [tweezers](#) or your fingers to remove plate.

Step 3



- Remove yellow tape.
- Use a spudger or plastic opening tool to remove the battery's ribbon cable from the motherboard.


Step 4

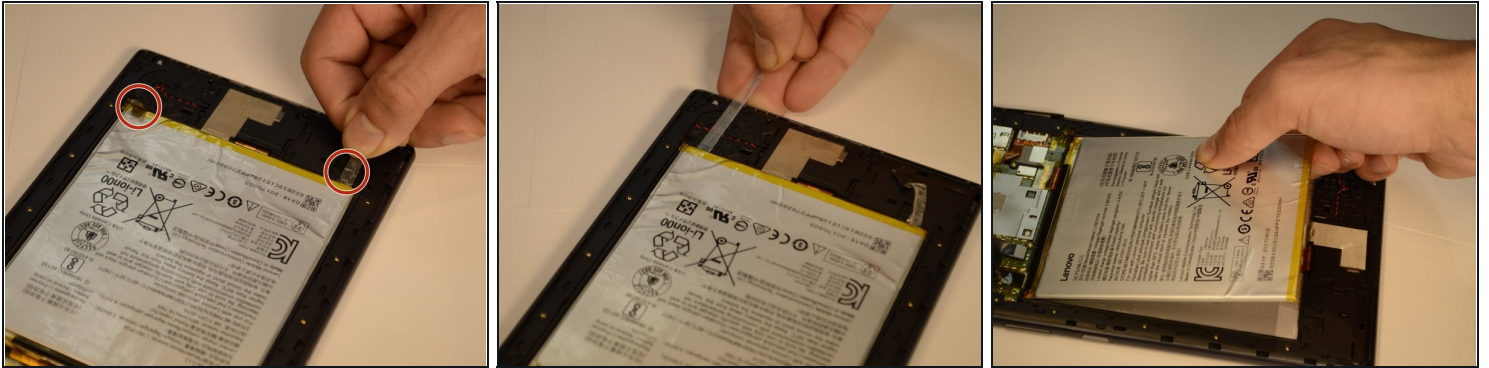

- Gently pull on the two stretch release adhesive strips. Do not pull up, pull away from battery.
- Once the tabs are off, lift the battery up from the frame.



⚠ Do not bend or puncture the battery.

Step 5 — MicroSD Card Reader

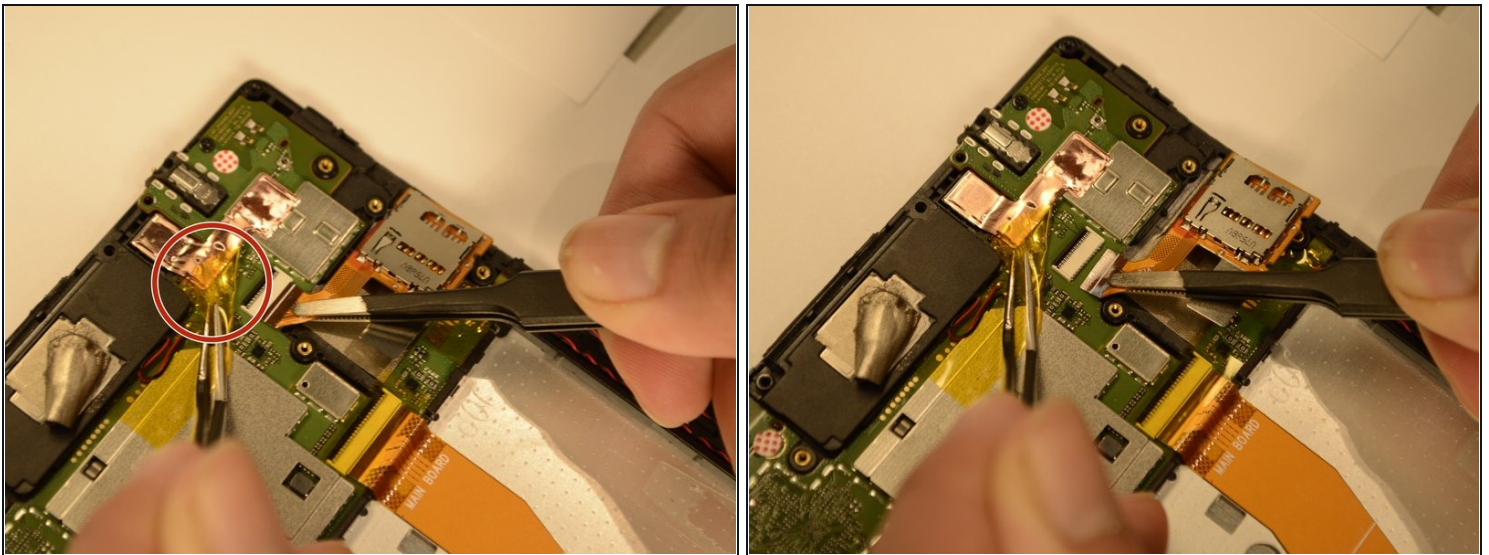

- There is a yellow tape holding the microSD card reader connector. Use [tweezers](#) to hold down the tape.
- Gently lift the tab on the microSD card reader's ZIF connector, and gently pull the ribbon cable free.

Step 6

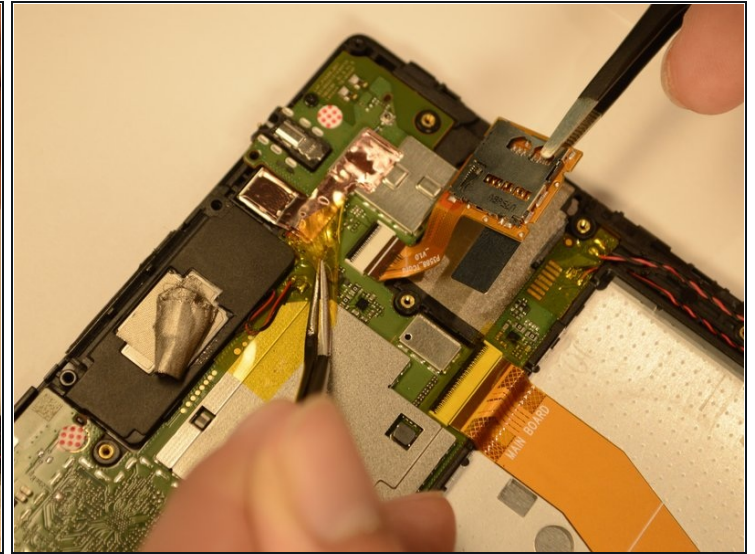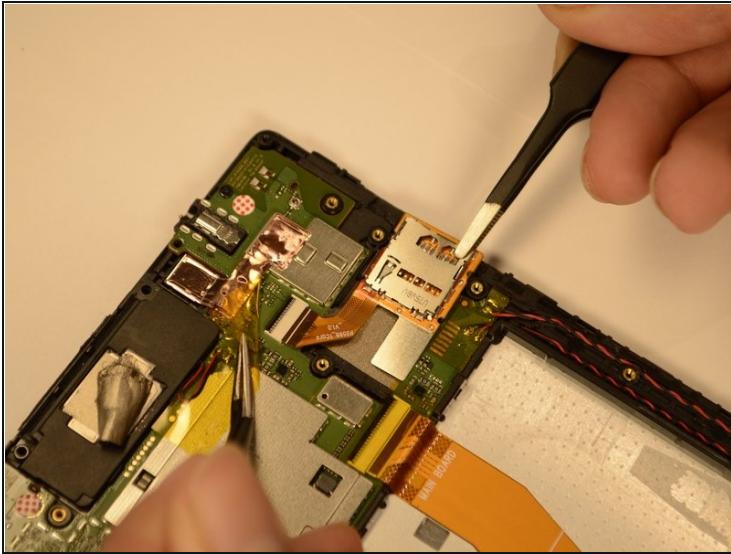

- Lift the microSD card reader with tweezers or your fingers.

To reassemble your device, follow these instructions in reverse order.