




# Asus Eee PC 1215N RAM Replacement

Get Access to the RAM compartment and RAM Module Removal/Installation

Written By: Gaetan

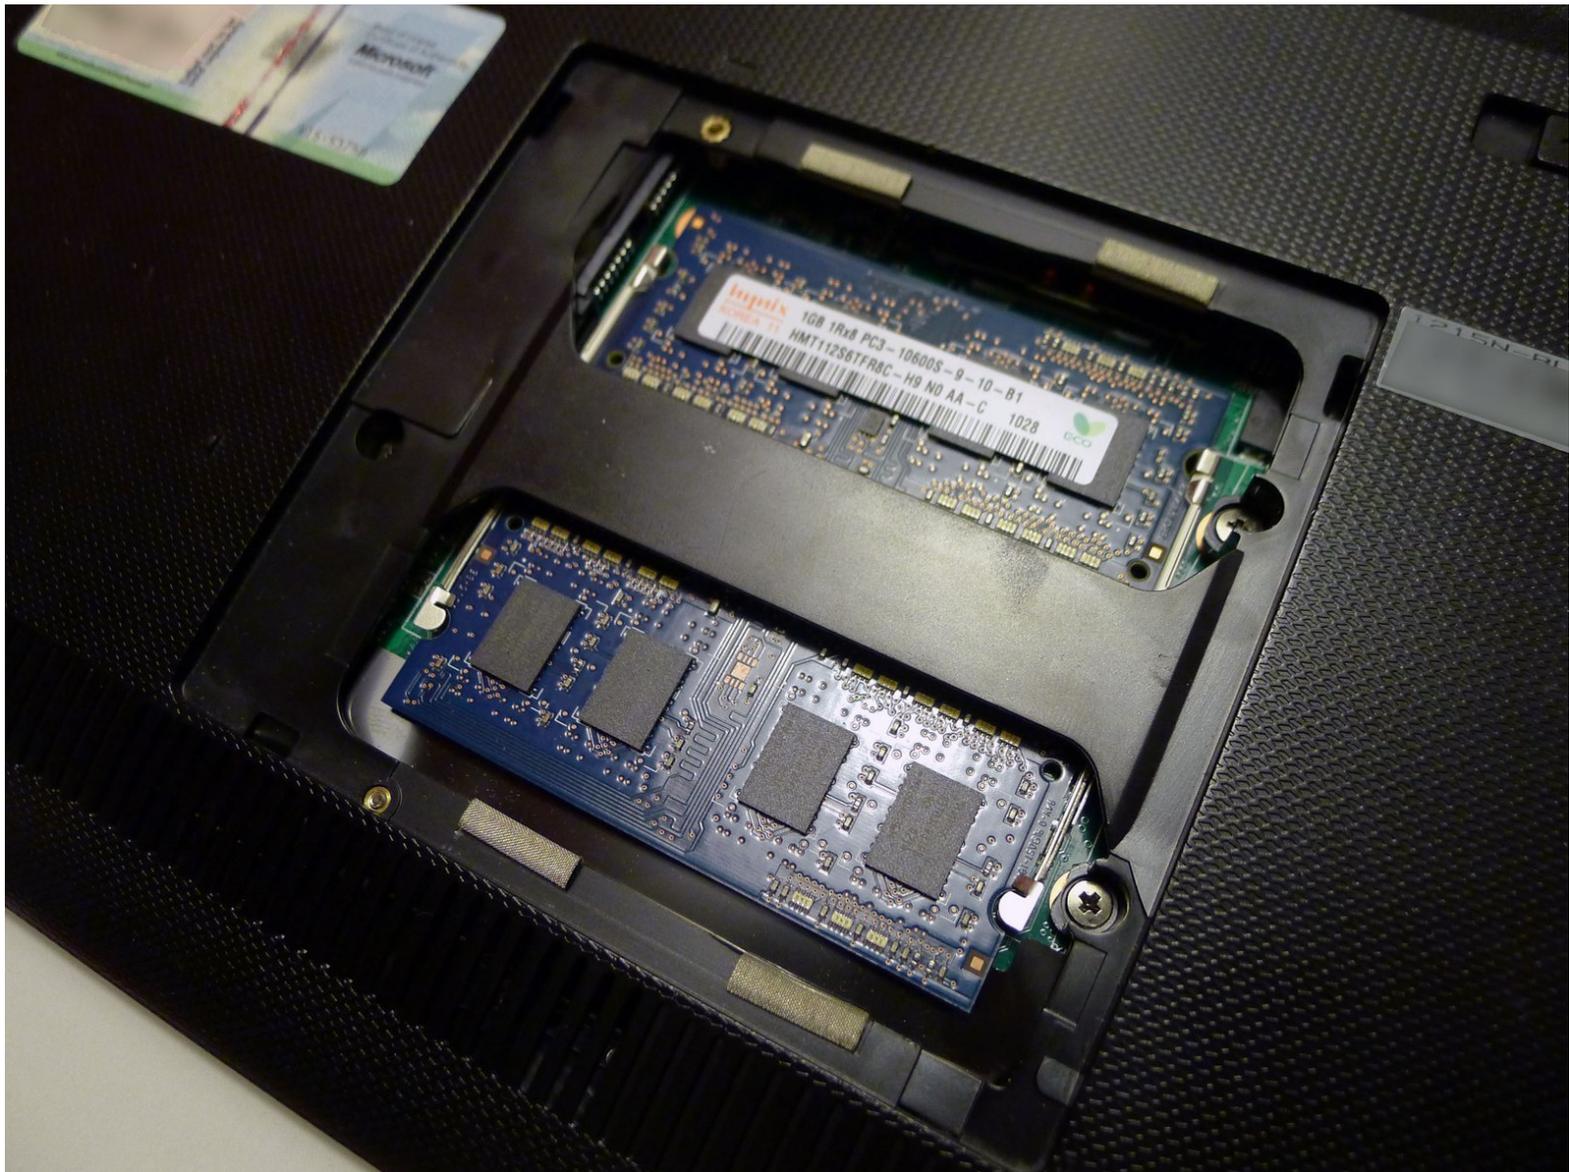

 **TOOLS:**


- [Anti-Static Wrist Strap](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery




- Turn the power off and turn the netbook upside down.
- Slide both battery catches together to release the battery.
- Slide the battery out.

## Step 2 — RAM

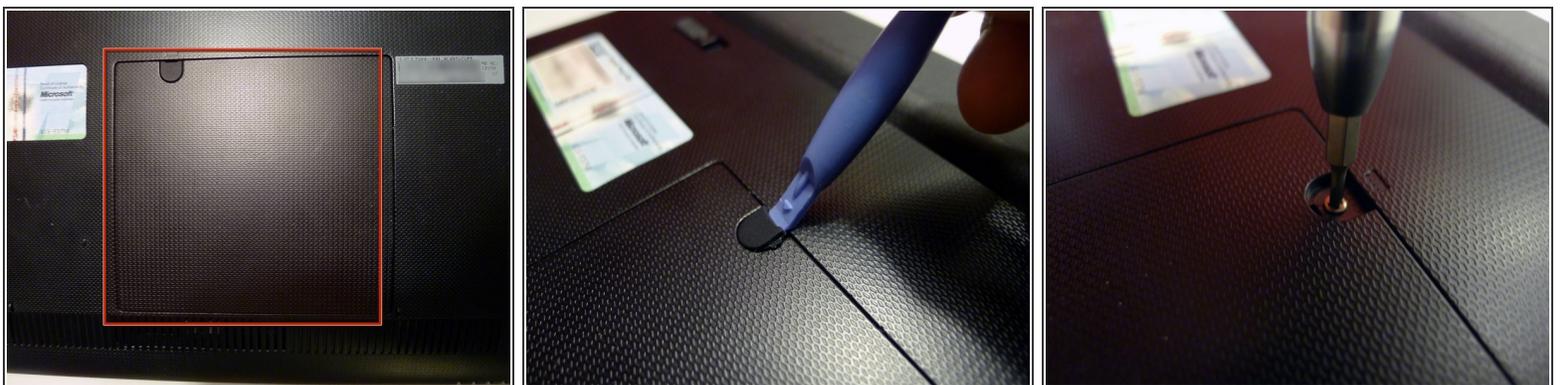


- Locate the memory compartment.
  - Using a Plastic Opening Tools, remove the screw rubber cover.
  - Remove the screw.

### Step 3

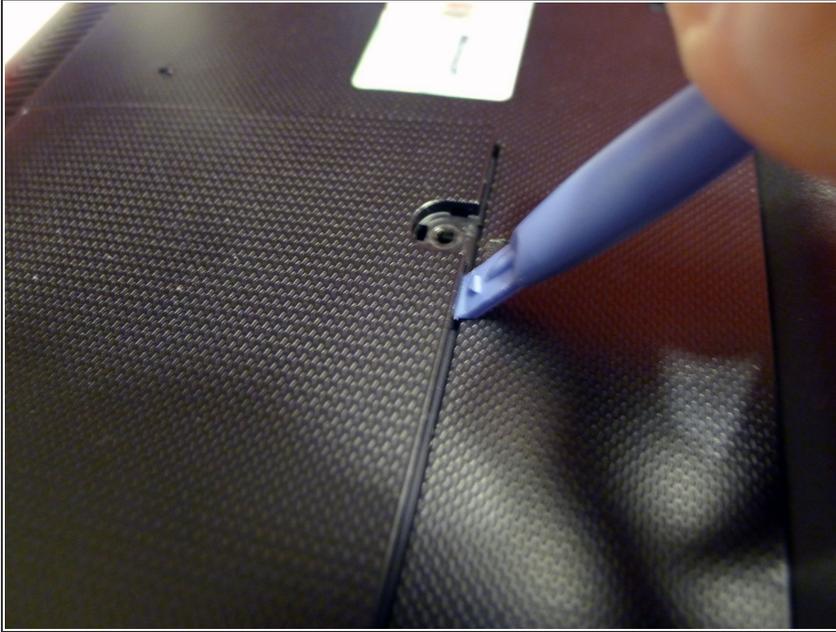

- Use a Plastic Opening Tools near the screw hole to release the cover.
- Remove the cover

### Step 4

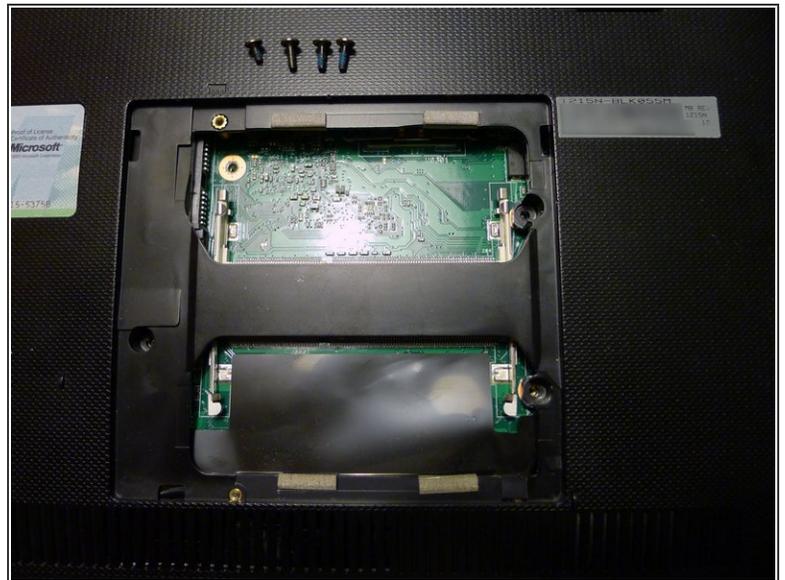

- Using a [Spudger](#), push both right and left metal clip to release one of the RAM module.
- Slide out the RAM module.
- Do the same with the second RAM module if necessary.

To reassemble your device, follow these instructions in reverse order.