


# Toshiba Qosmio X775-3DV80 Motherboard Replacement

This guide shows how to replace the motherboard in your Toshiba Qosmio X775-3DV80.

Written By: Jesse Adam Ory

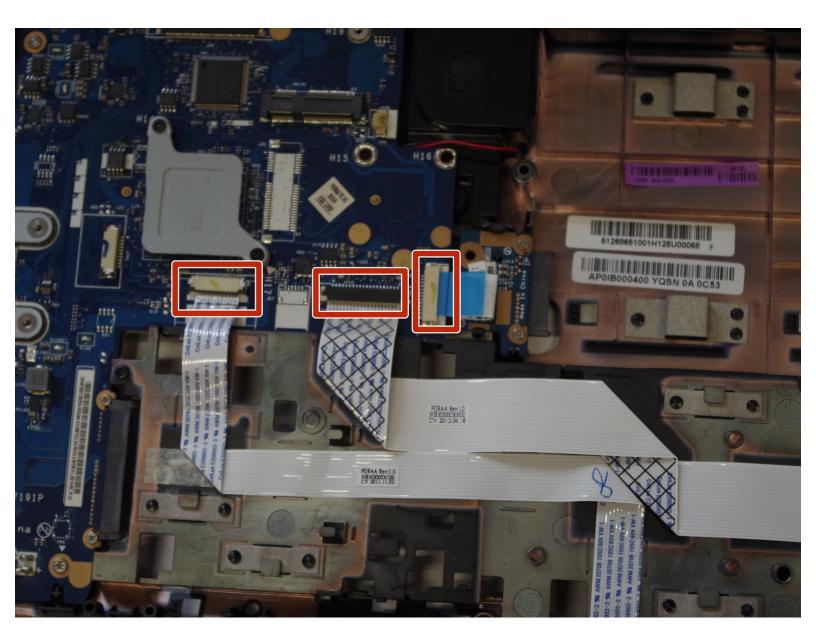

## **TOOLS:**

s

- Spudger (1)
- Tweezers (1)
- Phillips #00 Screwdriver (1)
- iFixit Opening Tool (1)

#### Step 1 — Battery



• Turn your laptop over so the underside is facing up.

#### Step 2



- Identify the two sliding locks on either side of the battery.
- Simultaneously slide both locks outward to release the battery.



• Pull the battery straight out of its slot to remove it.

#### Step 4 — Optical Drive




 Locate the optical drive retaining screw on the underside of the laptop.



 Using a Phillips #00 screwdriver, remove the optical drive retaining screw.

#### Step 6

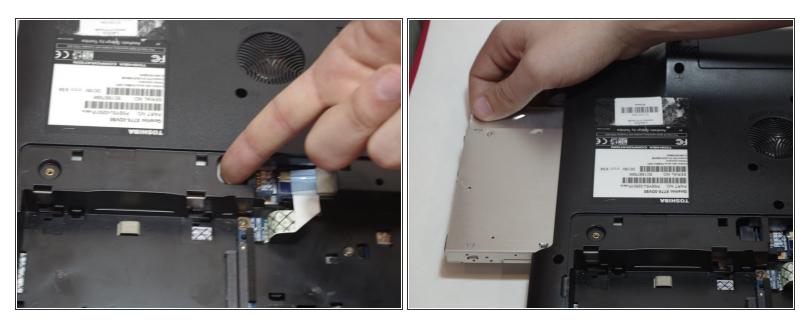

- Using your finger or a spudger, push the optical drive out of its compartment so you can grab it.
- Pull the optical drive out of its slot in the side of the laptop.

#### Step 7 — RAM



- Loosen the single screw on the service panel by twisting counterclockwise with a Phillips #00 screwdriver.
- (i) It is a captive screw that will remain attached to the service panel.

#### Step 8




• Using a spudger or plastic opening tool, pry off the service panel.




- Using your fingers, pull the retaining clips away from the RAM sticks.
- Pull the RAM sticks out of the slots.

#### Step 10 — Keyboard

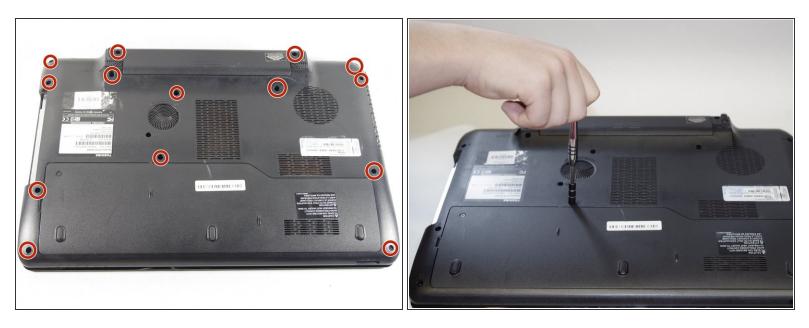

 Using a Phillips #00 screwdriver, remove all the remaining fourteen screws from the bottom case of the laptop.

(i) The service panel should already be removed.

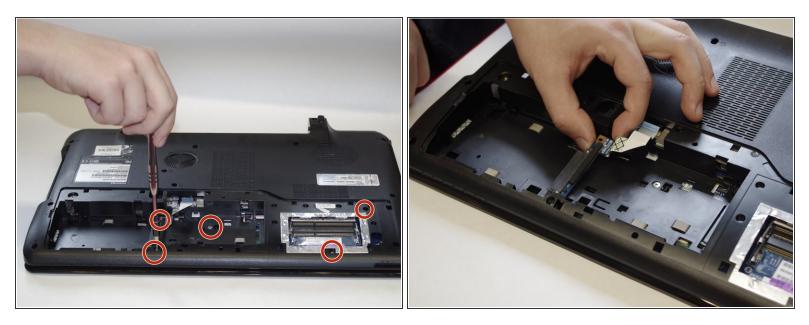

- Using a Phillips #00 screwdriver, remove the five screws under the service panel.
- Remove the retaining clip.

## Step 12




- Using a spudger, pry the keyboard from the top panel of the laptop.
- (i) Make sure to pry it off all around.




- Disconnect the two ribbon cables connecting the keyboard to the laptop.
- Unplug the connector on the bottom of the laptop.

#### Step 14 — Fan

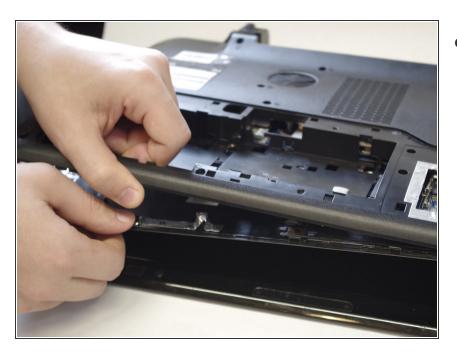


 Separate the two halves of the base of the laptop.

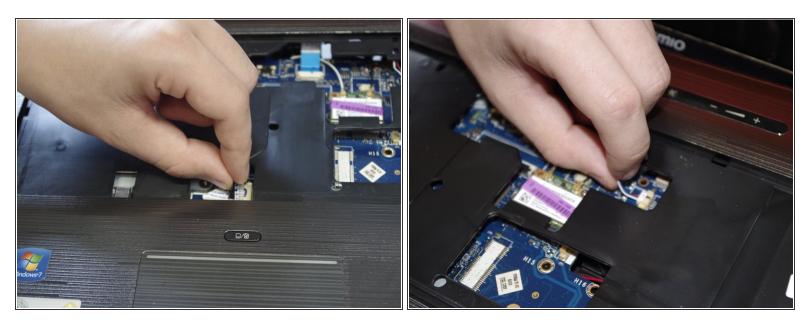


• Disconnect the two cables.

## Step 16

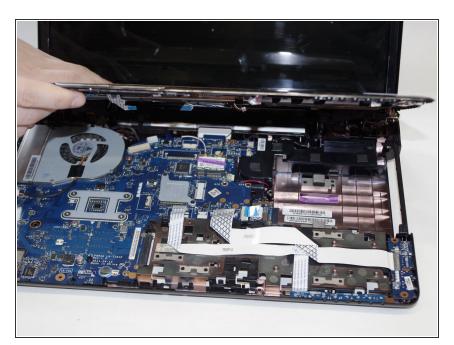


• Remove the palmrest assembly.

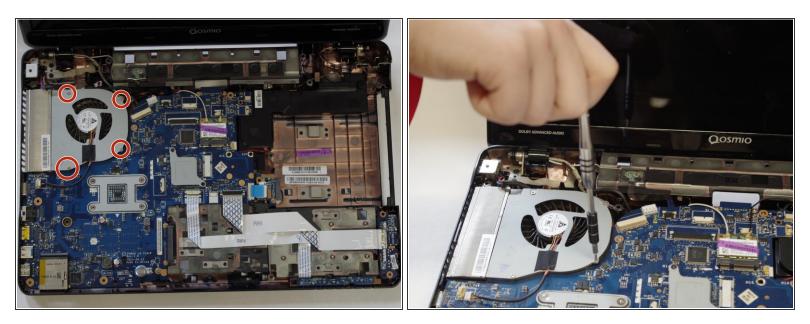


• Using a Phillips #00 screwdriver, remove the four screws securing the fan assembly to the laptop.

## Step 18

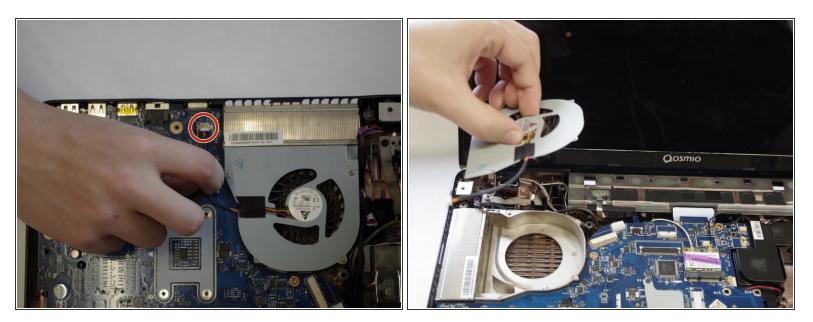


- Unplug the fan-motherboard connector.
- Remove the fan unit.

## Step 19 — Wifi Chip

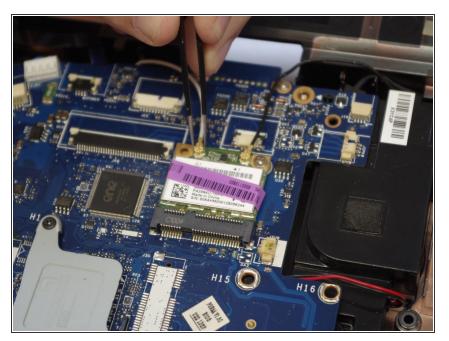


• Detach the two coaxial connections from the wifi chip.

## Step 20

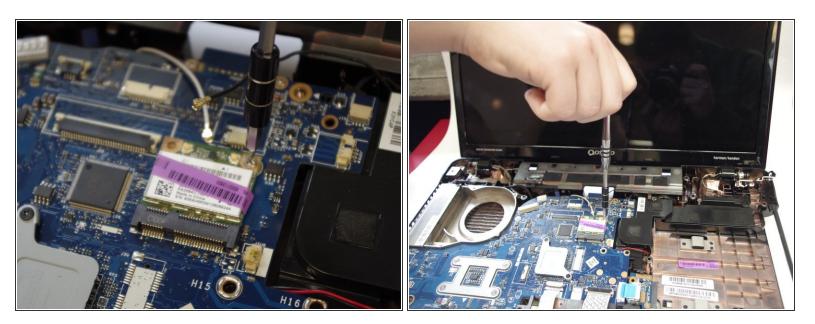

• Using a Phillips #00 screwdriver, remove the two screws from the wifi chip.

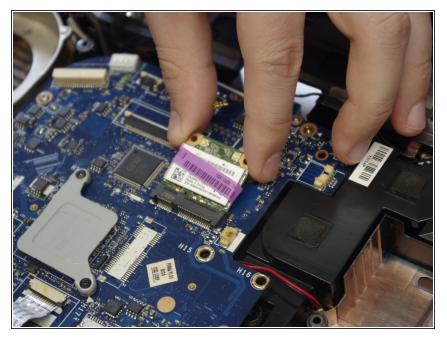

• Remove the wifi chip by pulling it out of the PCIe slot.

## Step 22 — Motherboard



Disconnect the three ribbon cables.




• Using a Phillips #00 screwdriver, remove the four screws securing the motherboard to the laptop.

## Step 24




• Disconnect the pinned connector.

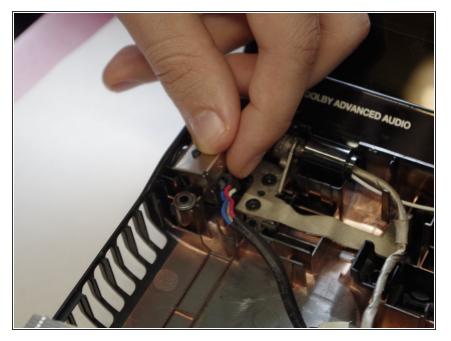

 Remove the 4-pin connector housing by gently wiggling it back and forth.

## Step 26

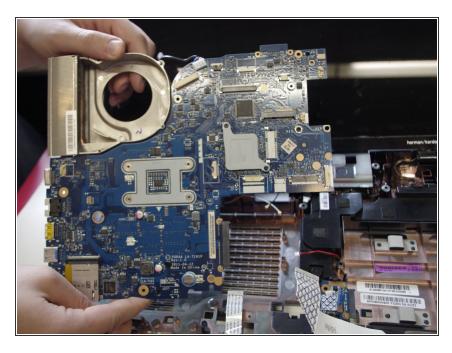

• Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.