




Samsung Chromebook 3 XE500C13-K02US

Speakers Replacement

This guide illustrates the removal of the Samsung Chromebook 3 XE500C13-K02US's speakers.

Written By: Mick McCarty

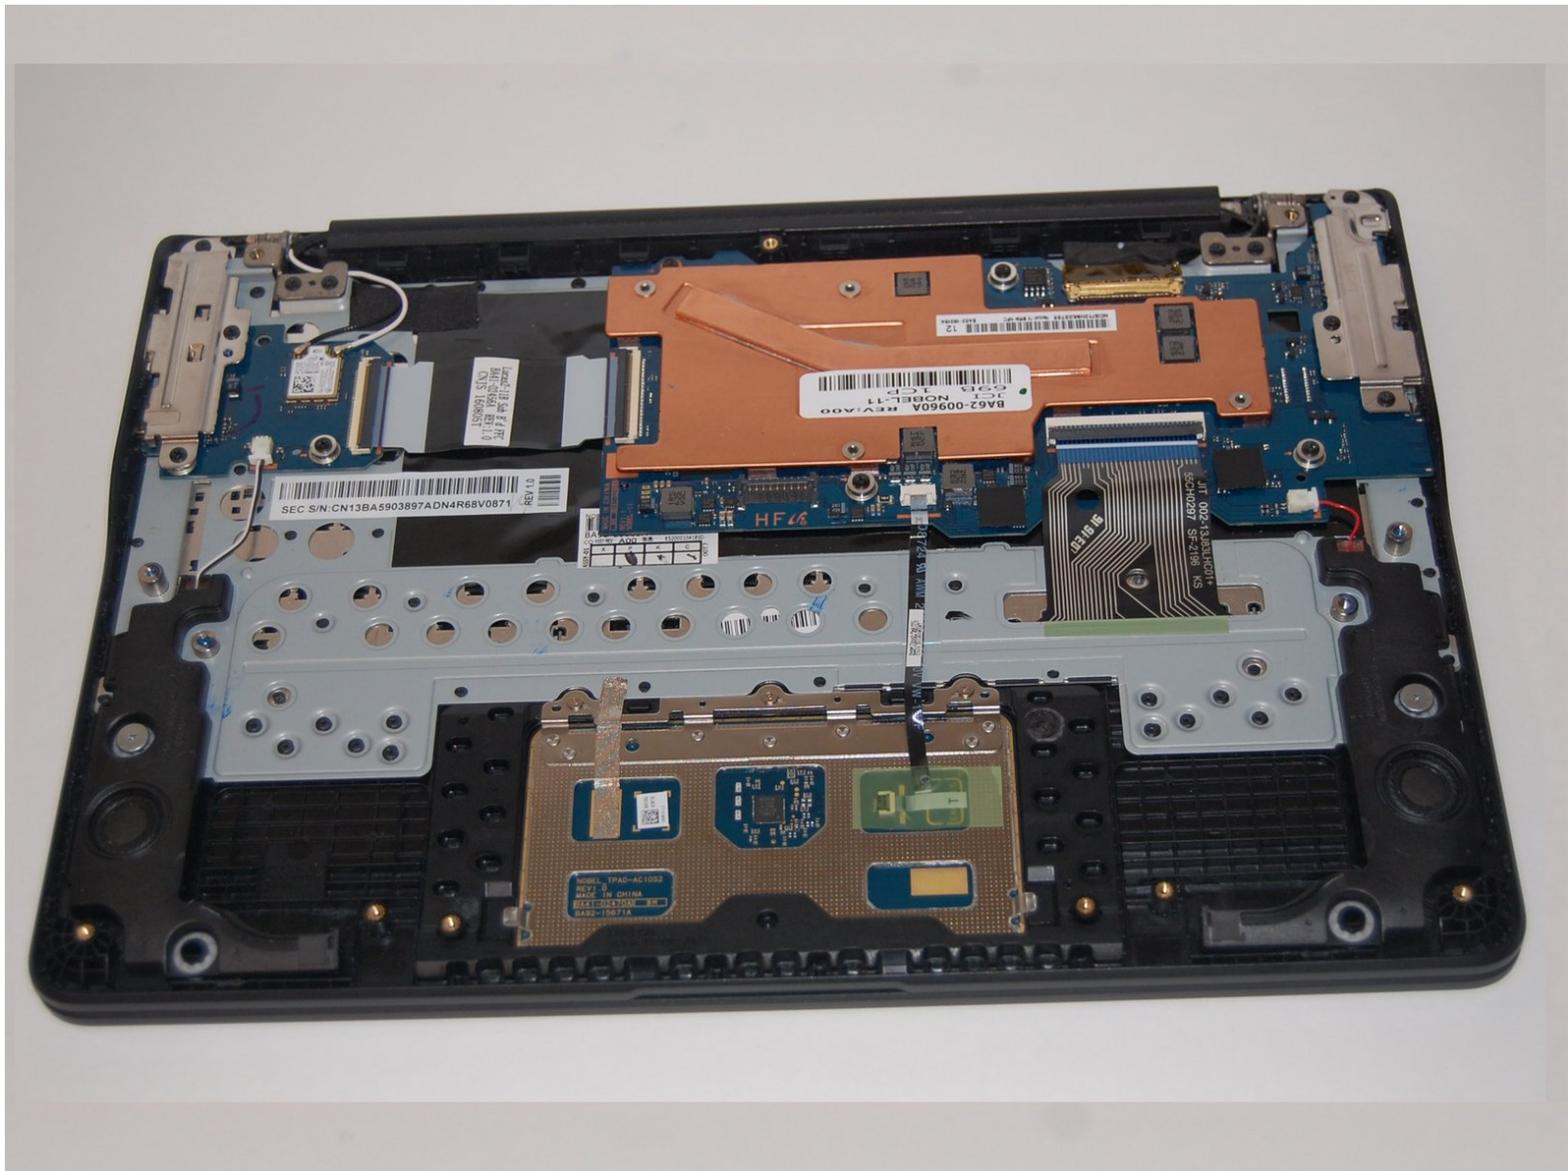

INTRODUCTION

This guide illustrates the process of removing the Samsung Chromebook 3 XE500C13-K02US speakers.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bottom Case



- Place the laptop back cover facing up to expose the screws.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

Step 2



- Use an iFixit opening tool to wedge in between the case and body of the laptop.
 - Once the tool is wedged in between the case and laptop, slide it around the entire laptop's edge to disengage the retaining clips.
- i** You should hear a popping sound as you slide the iFixit opening tool around the laptop.

Step 3



- Remove the cover exposing the inside of the laptop.

Step 4 — Battery



- Remove the four 4.6mm screws with the Phillips #00 screwdriver.

Step 5





- Use the spudger to pry underneath the cable and gently lift the connector up.

Step 6





- Lift the battery up and out of the case.

Step 7 — Speakers

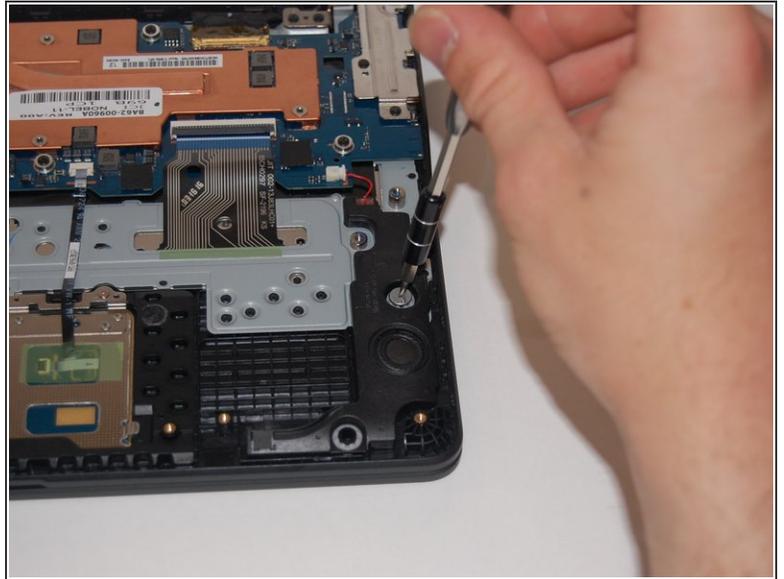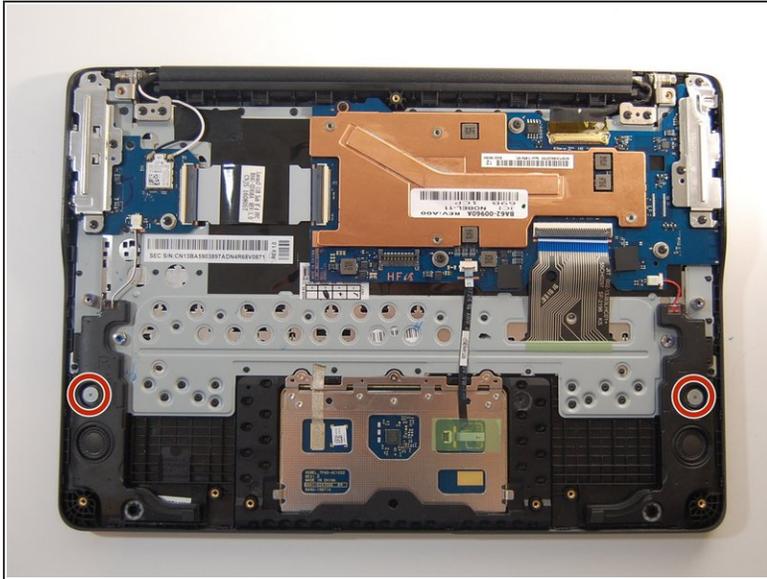


- Remove two 4.9mm silver screws with a Phillips #00 screwdriver.
- ⓘ Each speaker only has 1 screw.

Step 8

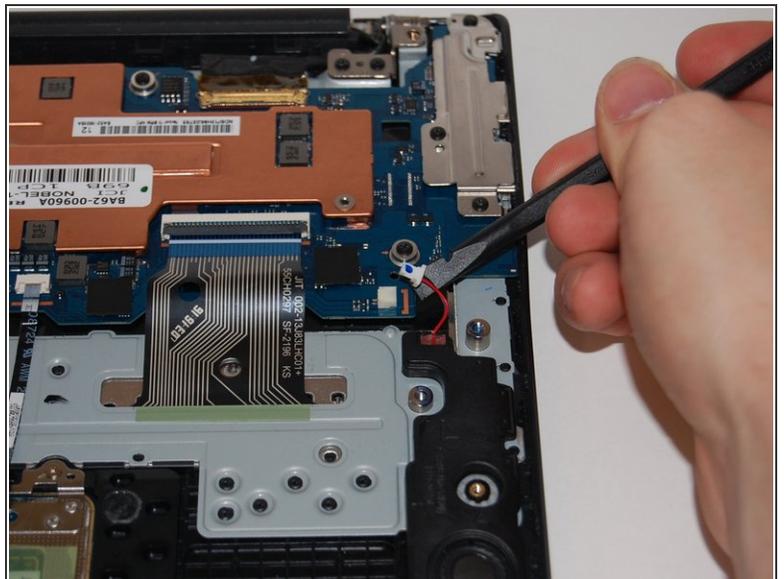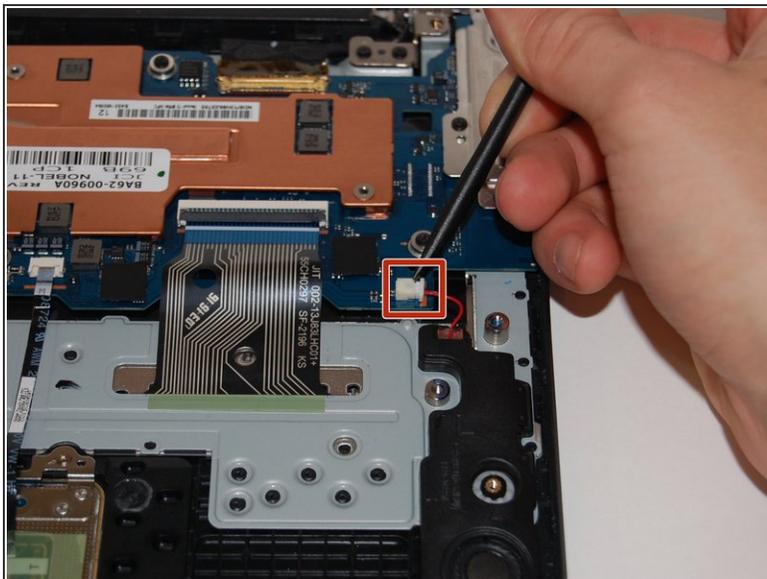

- Use the spudger to pry the speaker connector sideways out of the motherboard.
- Repeat this step for the left speaker.

Step 9

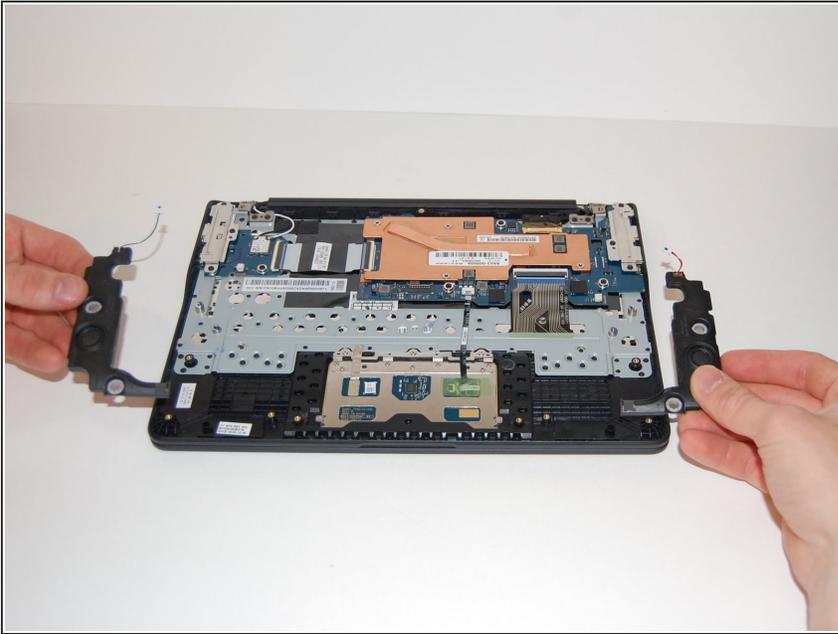

- Remove the speakers by lifting them upwards and out of the laptop.

To reassemble your device, follow these instructions in reverse order.