




Samsung Chromebook 3 XE500C13-K02US

Track pad Replacement

This guide illustrates the steps to replace the track pad in the Samsung Chromebook 3 XE500C13-K02US.

Written By: Mick McCarty

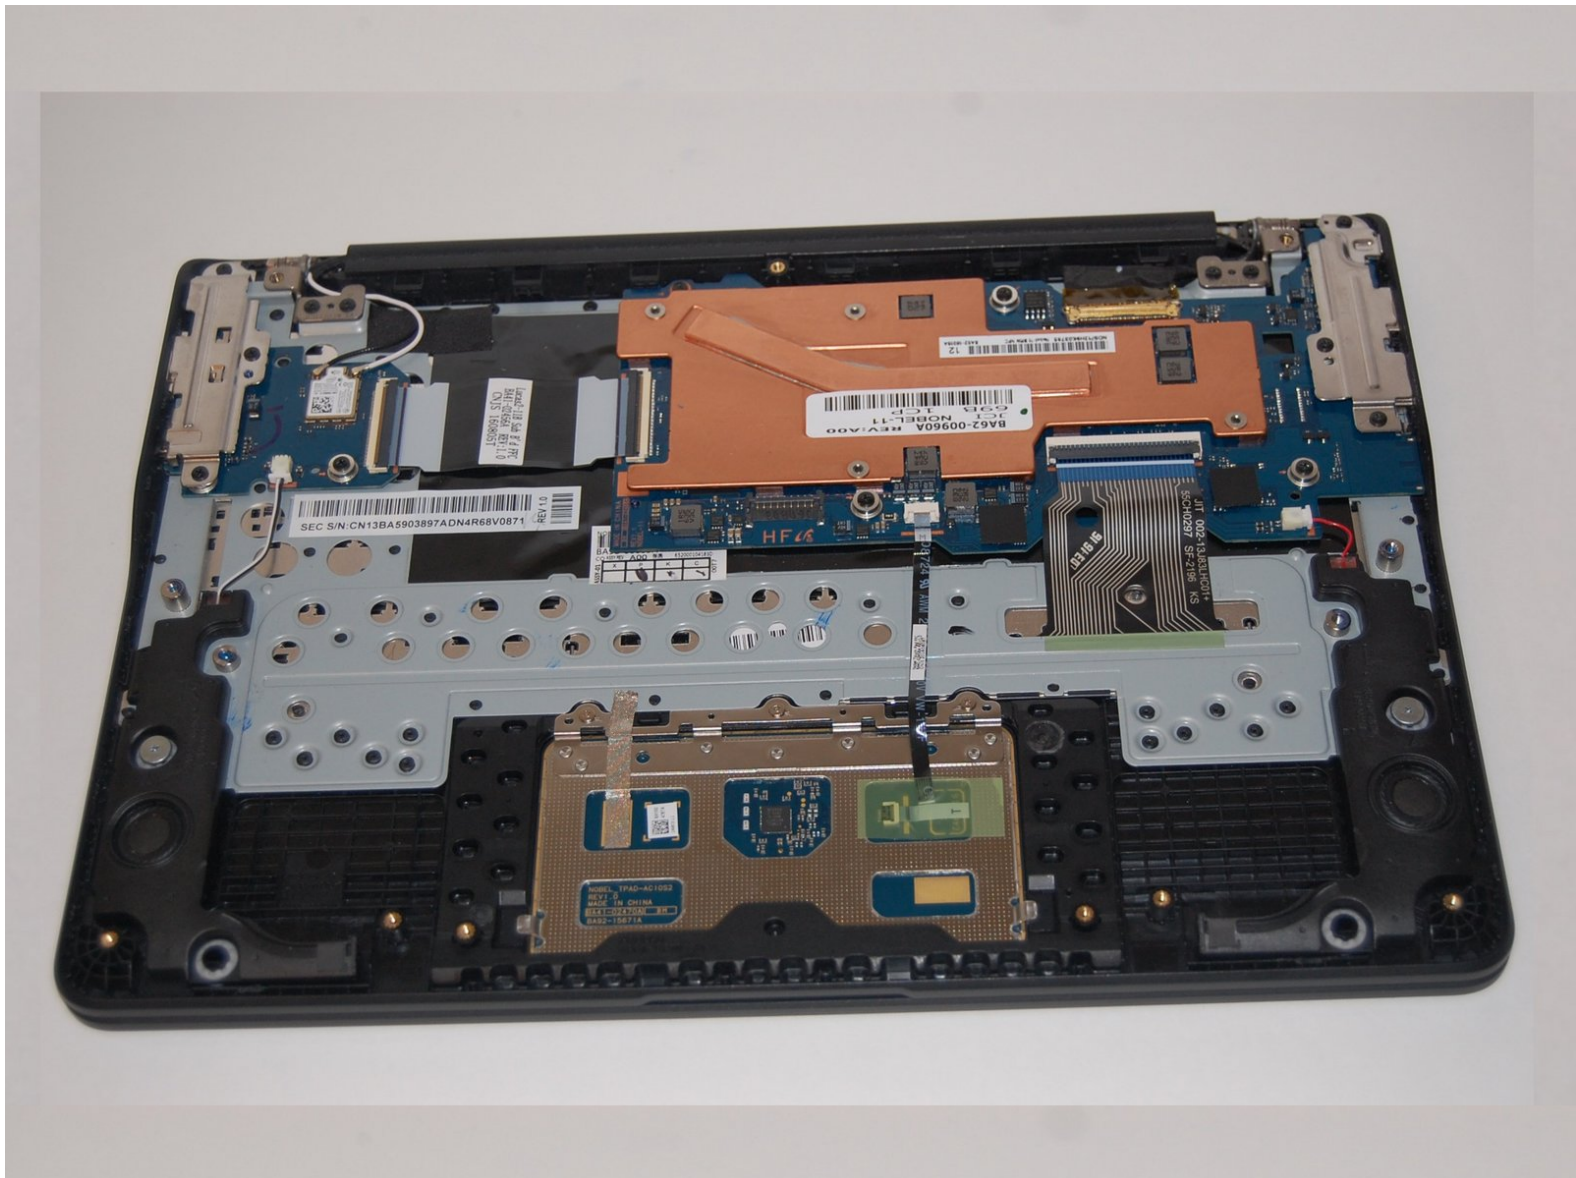

INTRODUCTION

This guide demonstrates how to removing the Samsung Chromebook 3 XE500C13-K02US track pad.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bottom Case



- Place the laptop back cover facing up to expose the screws.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

Step 2



- Use an iFixit opening tool to wedge in between the case and body of the laptop.
 - Once the tool is wedged in between the case and laptop, slide it around the entire laptop's edge to disengage the retaining clips.
- i** You should hear a popping sound as you slide the iFixit opening tool around the laptop.

Step 3




- Remove the cover exposing the inside of the laptop.

Step 4 — Battery



- Remove the four 4.6mm screws with the Phillips #00 screwdriver.

Step 5

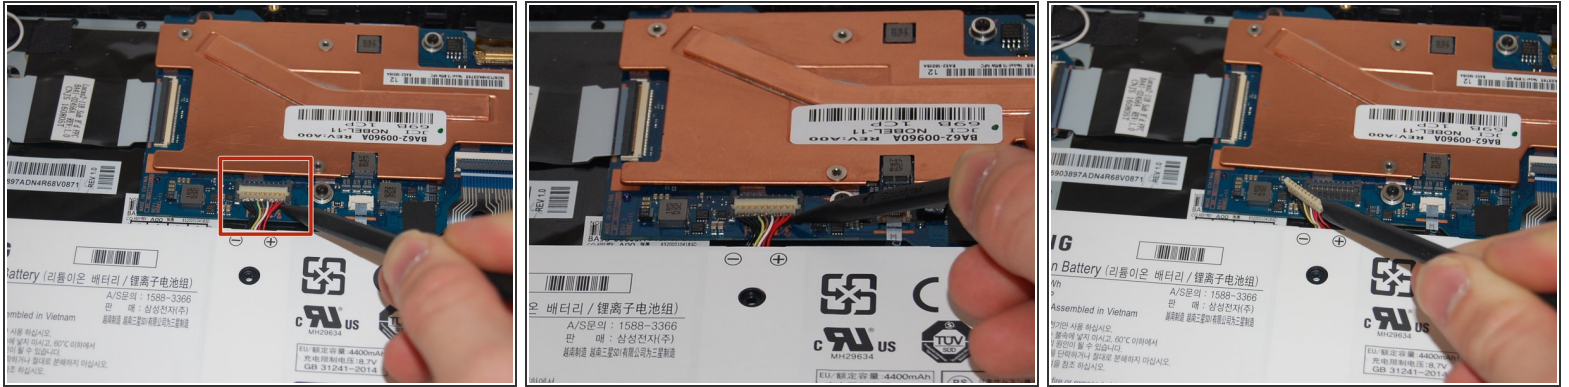



- Use the spudger to pry underneath the cable and gently lift the connector up.

Step 6






- Lift the battery up and out of the case.

Step 7 — Track pad

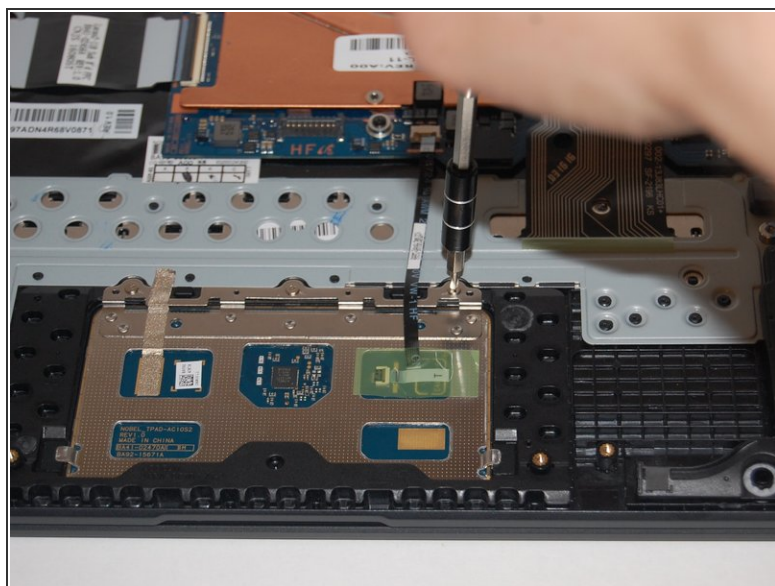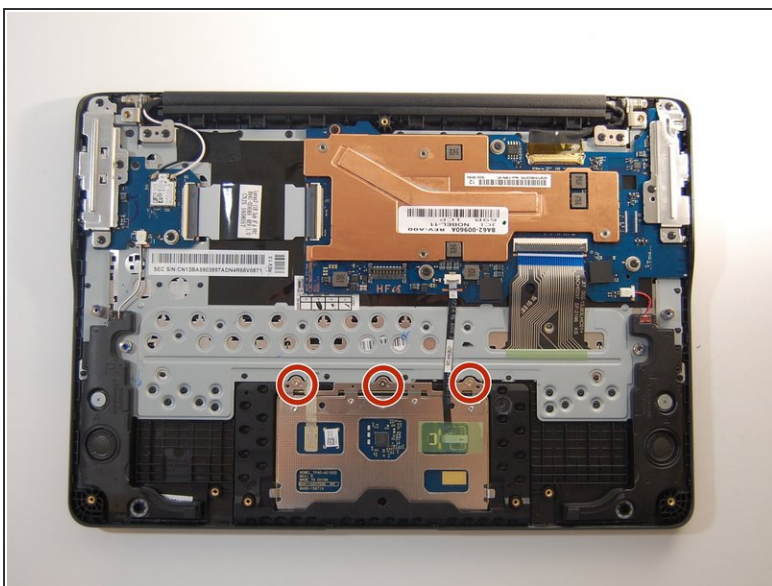


- Remove the three 2.3mm screws along the top of the trackpad using a Phillips #00 screwdriver.

Step 8

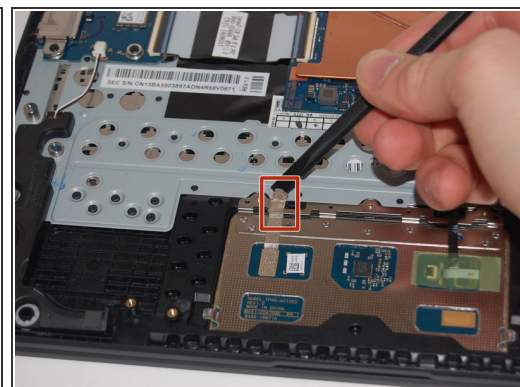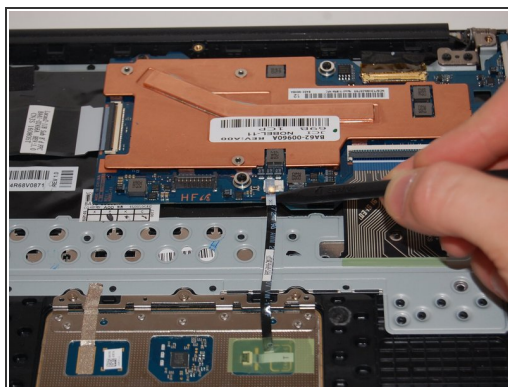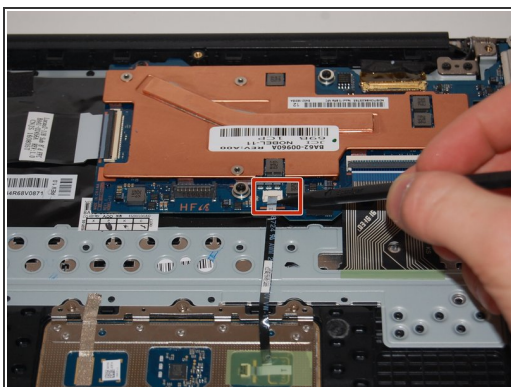

- Remove the ribbon cable by lifting it out of the connector.
- Lift the grey adhesive tape.

Step 9

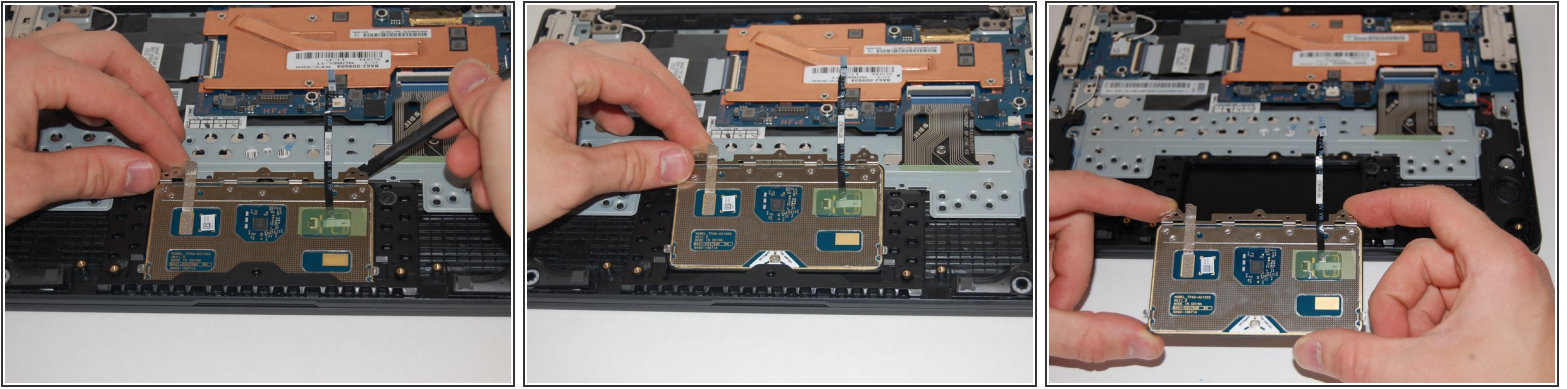

- Lift the track pad from the top.
- Slide the track pad away from yourself to clear the black plastic edge.
- Lift the track pad up and out of the laptop.

To reassemble your device, follow these instructions in reverse order.