



# Dell Vostro 3500 CMOS Battery Replacement

Note that disconnecting the so-called CMOS...

Written By: Philip Le Riche



# INTRODUCTION

Note that disconnecting the so-called CMOS battery does not reset the BIOS settings or clear a BIOS password. In fact its only purpose is to maintain the real time clock when no other power source is available.

The CMOS battery should last for around 10 years. If the computer forgets the date and time when you remove both the mains adapter and the main battery then you need to replace the CMOS battery.

---

## TOOLS:

Phillips #0 Screwdriver (1)


---

### Step 1 — Sliding the Battery Latch




- Flip the computer over.
- Slide the battery release latch to the unlock position.

## Step 2 — Sliding the Battery Release Latch

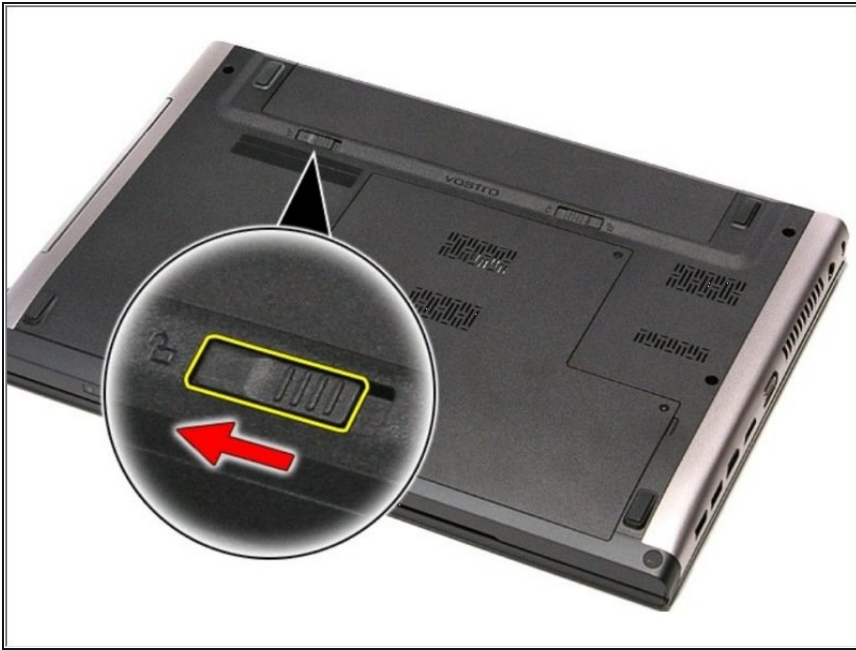

- Slide the other battery release latch to the unlock position.

## Step 3 — Removing the Battery

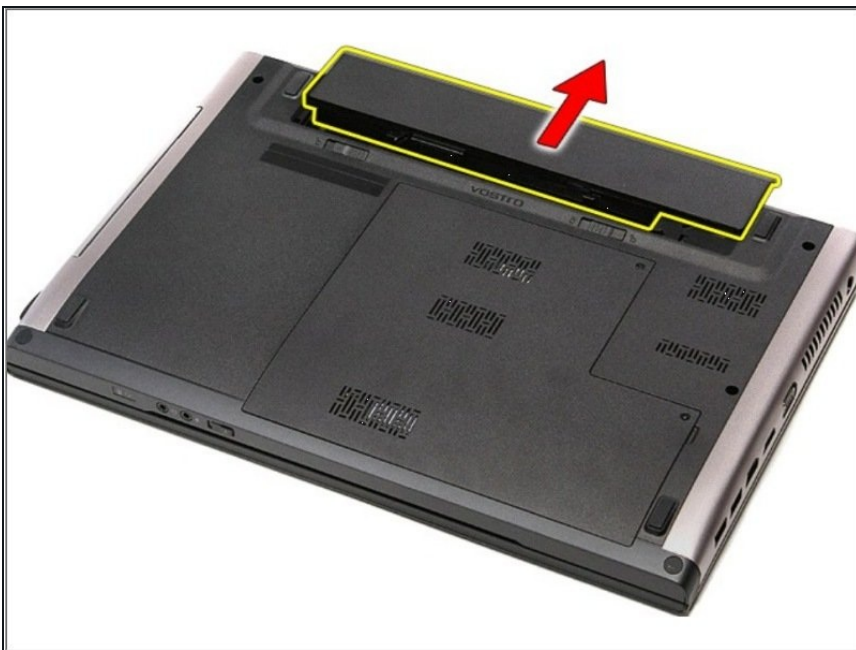

- Slide the battery and remove it from the computer.




## Step 4 — Remove the Screws



- Turn the laptop over and remove two screws securing the service cover.

## Step 5 — Removing the Base Cover

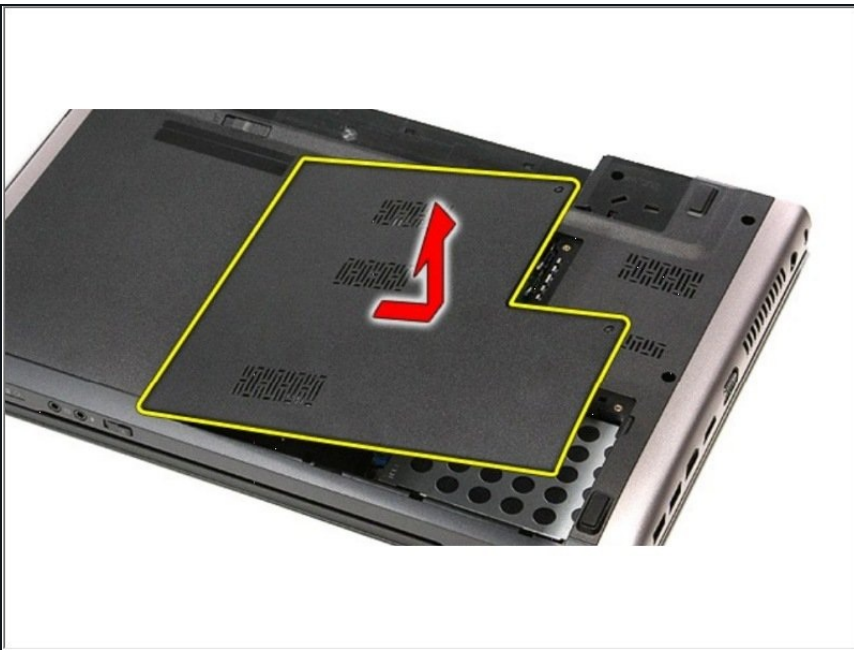

- Prise up the service cover and remove it from the computer. Clips along the edges can be snapped open except for those on the left hand edge (as shown in the photo) which have to be disengaged after all the others by removing the cover in the direction shown.
- On resassembly, insert the clips on the left hand edge then snap all the others home by applying firm pressure along the other edges of the cover.

## Step 6 — CMOS battery removal



- Locate the CMOS battery
  - Gently disengage its connector.
- ⚠ Do not disengage the connector by pulling the leads as you may tear them out of the connector. Instead, pull on the connector itself, ideally with a pair of [tweezers](#), rocking it back and forth alternately in the directions of the red and black leads.

To reassemble your device, follow these instructions in reverse order.