



# HP Elite x2 G1 1012 Speaker Replacement Guide

This is a replacement guide for HP Elite x2 G1 1012 speaker that was launched in May 2016.

Written By: Hanif Norhisham



## INTRODUCTION

If the speaker produce buzzing, crackling sound or not operational, there might be a problem with your speaker. This guide will help you go through the process of replacing the faulty speakers.

Before going through the replacement process, make sure your tablet is turned off and not connected to the power cord.



### TOOLS:

- [Suction Handle](#) (1)
  - [Tweezers](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Speakers




- Detach keyboard from the screen.

## Step 2




- While the screen is facing down, remove six 3.0 mm Torx T5 screws under the stand.
- ⓘ The screws were not available on our device, so we do not know what kind of screwdriver to use.)

## Step 3

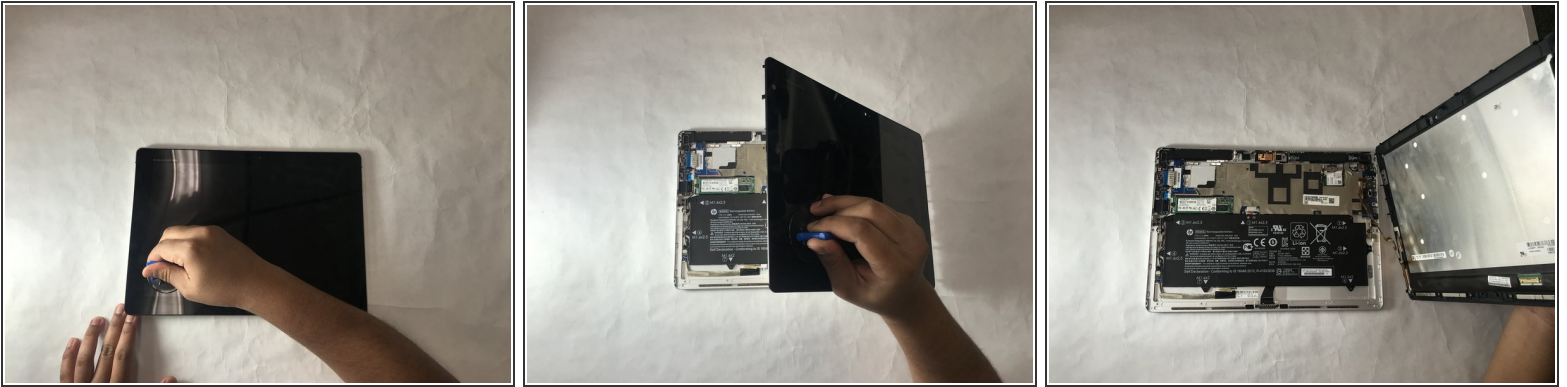

- Use a suction cup to remove the screen panel.


## Step 4

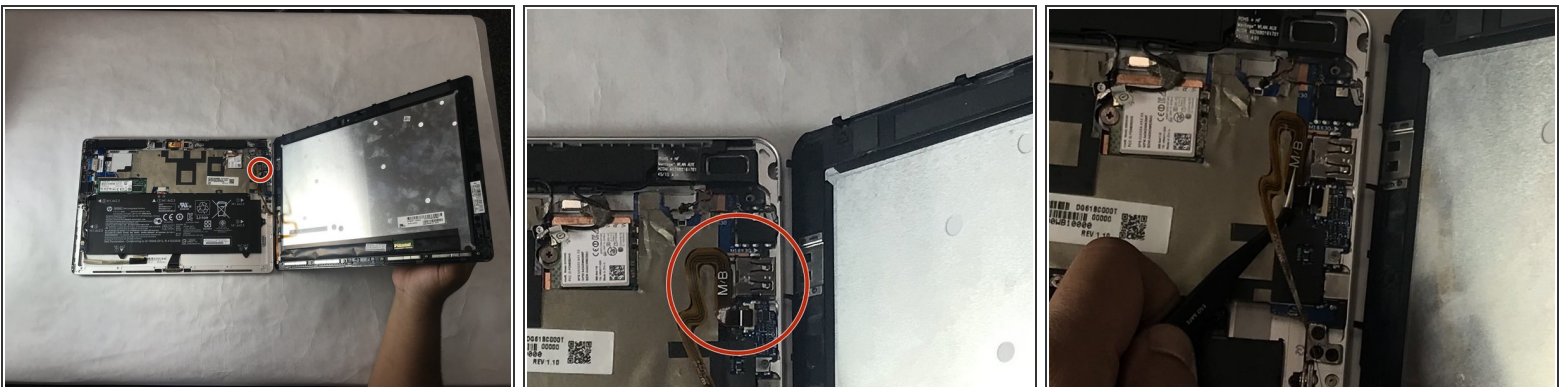

- Detach flex cable from motherboard using tweezers.





## Step 5

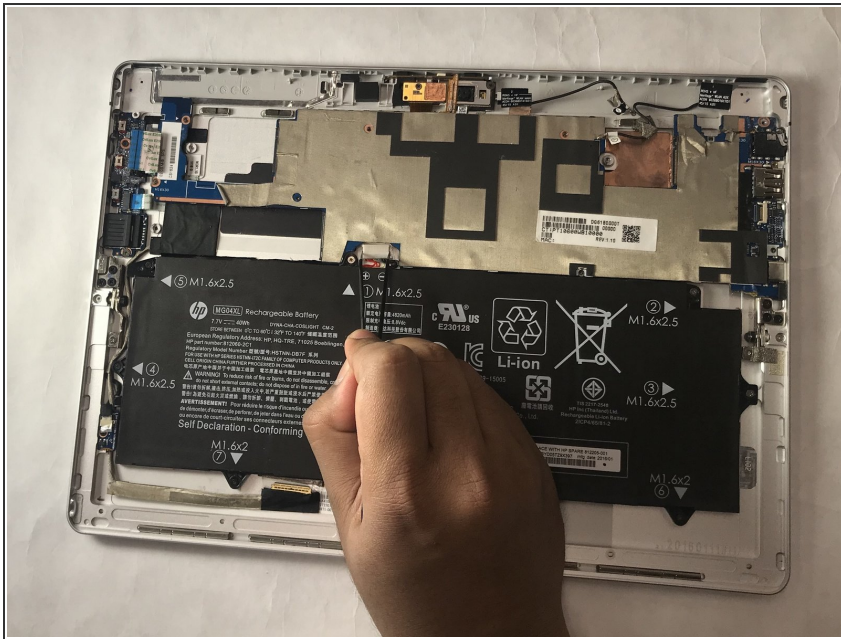


- Unplug the battery wire attached to the motherboard using tweezers.

## Step 6

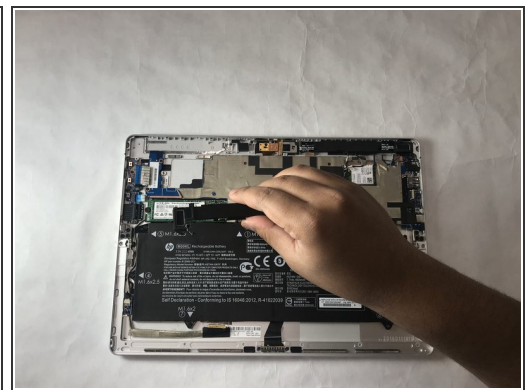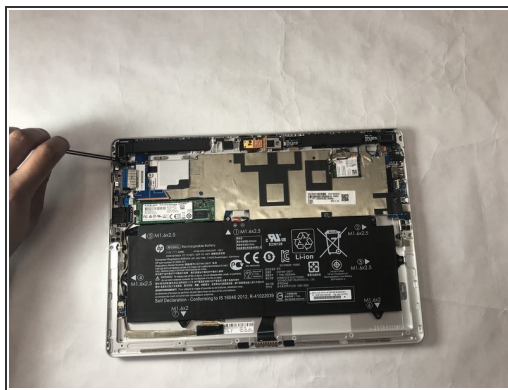



- Remove two 2.7 mm screws using the Phillips #0 screwdriver.

## Step 7

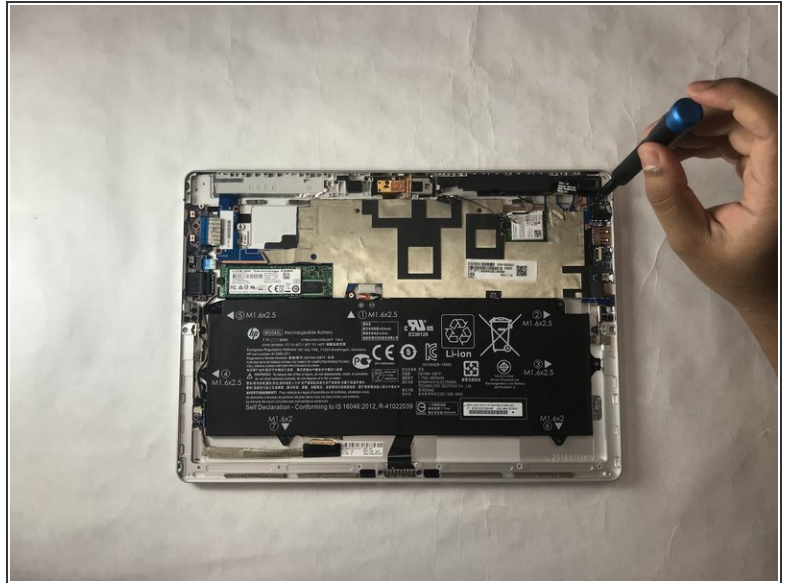

- Unplug the speaker wire attached to the motherboard.



## Step 8

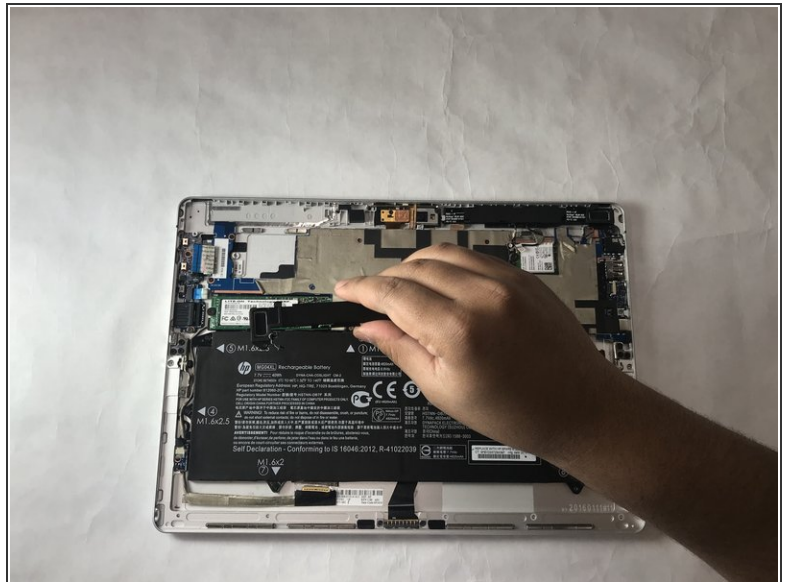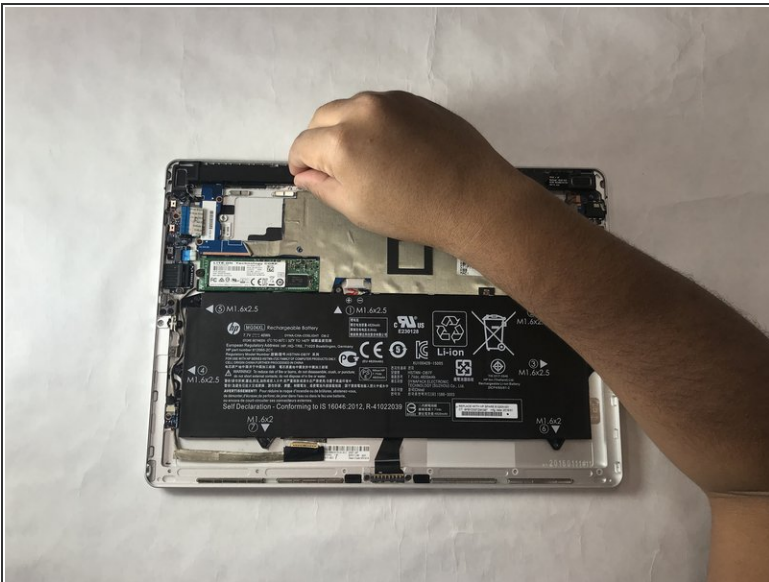

- Detach the left speakers.





## Step 9

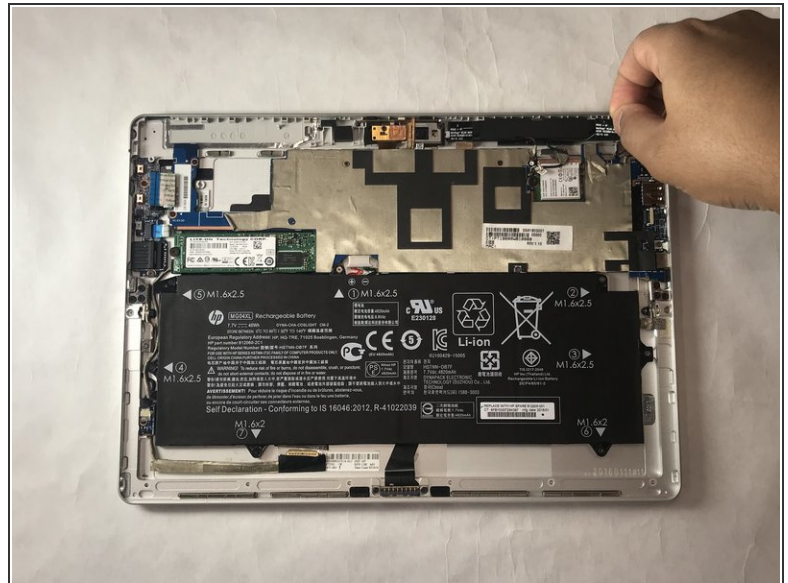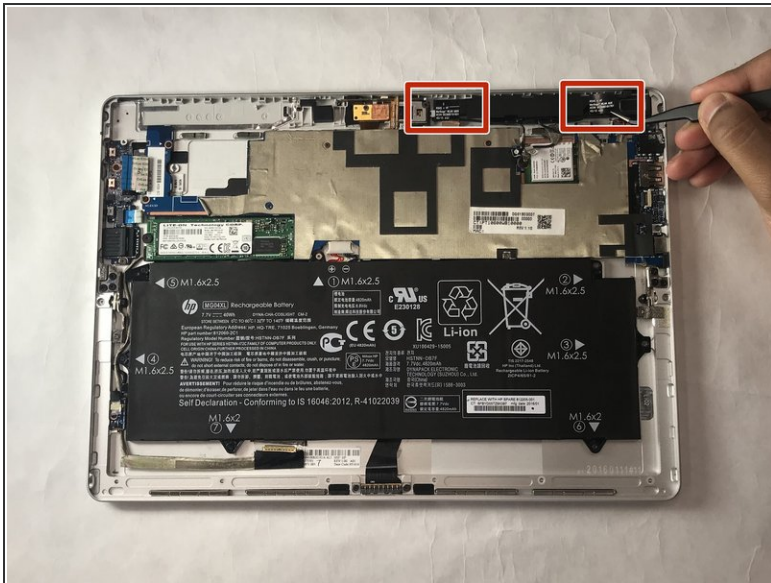



- Detach the two stickers highlighted from right speaker.

## Step 10

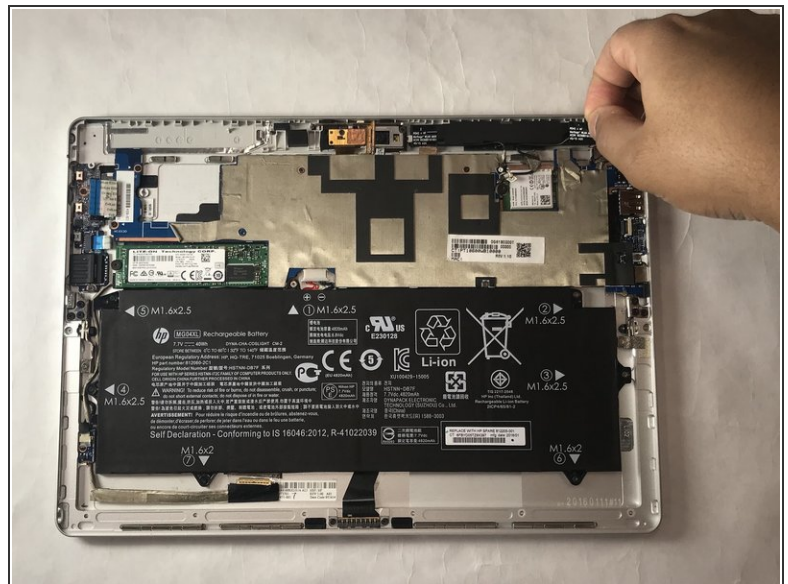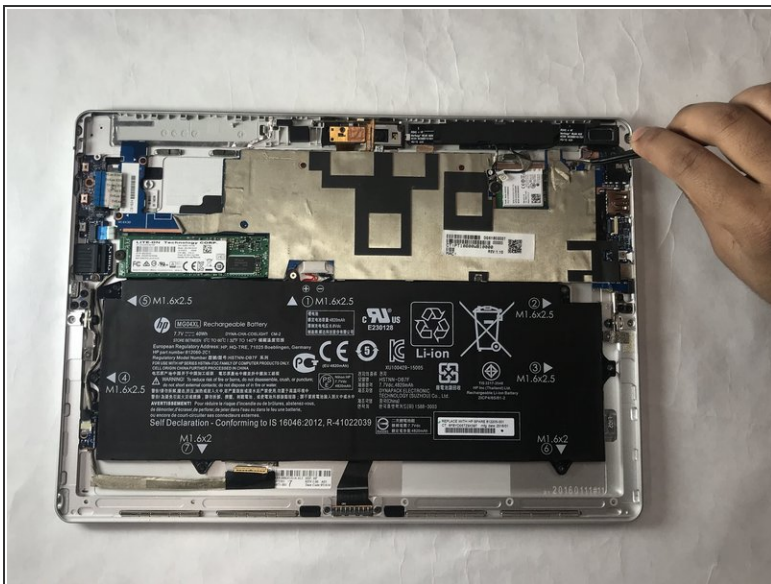

- Detach the right speaker cables from the motherboard using tweezers.

## Step 11

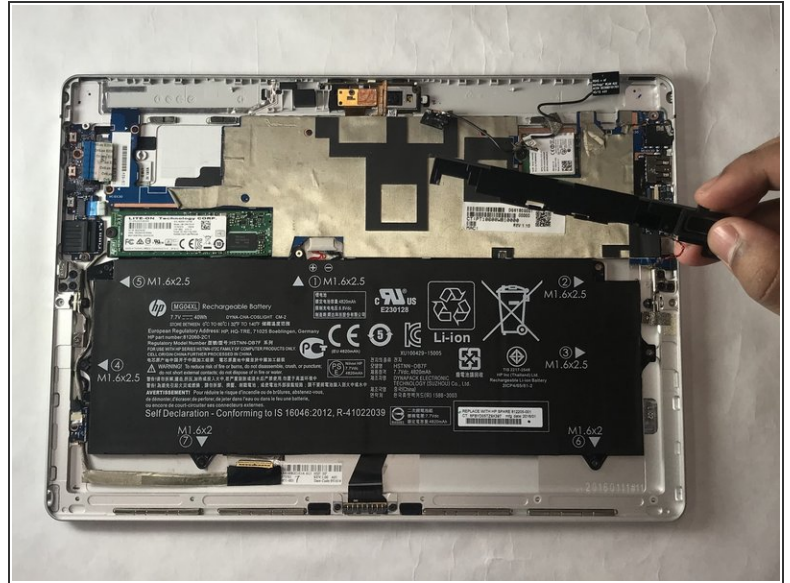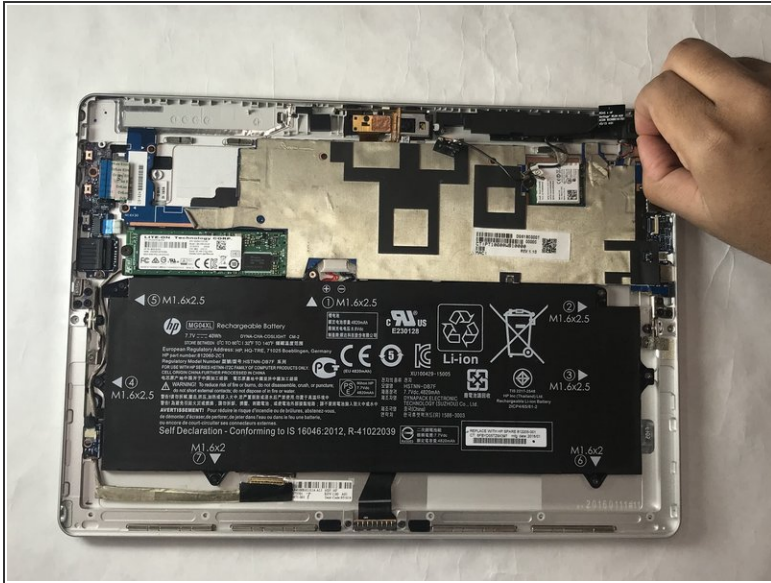

- Detach the right speaker.

To reassemble your device, follow these instructions in reverse order.