



Maze Speed SSB-508 Power and Volume Button Replacement

This guide will show you how to replace the...

Written By: Taeyoung Lee



INTRODUCTION


This guide will show you how to replace the power and volume buttons in a Maze Speed SSB-508 phone. If the power or volume buttons are unresponsive or malfunctioning, they may need to be replaced. To complete this guide, a plastic opening tool, tweezers, and a new button piece is required. Precision is recommended, as to not damage any components.

TOOLS:

[iFixit Opening Tool](#) (1)


[Tweezers](#) (1)

Step 1 — Power and Volume Buttons

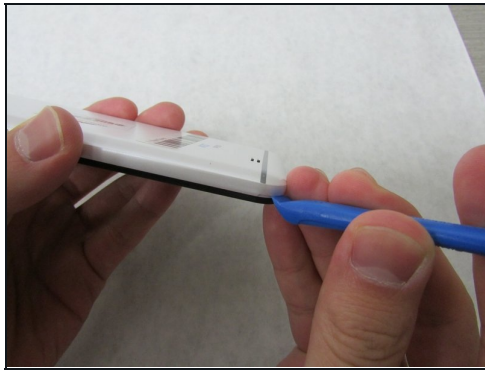

- Remove the back cover by gently prying open the bottom left corner of the case with the plastic opening tool.

Step 2

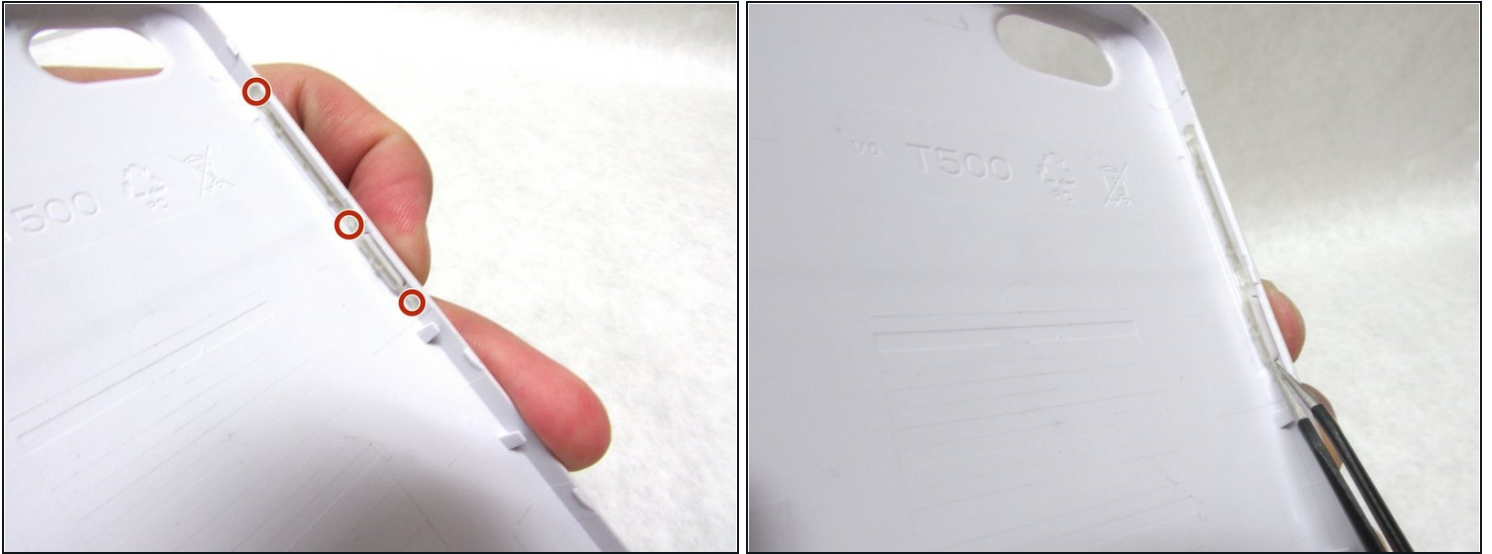

- There are three areas holding the power and volume buttons in place. Gently pull the bottom of the power button with a pair of fine-tip [tweezers](#) to release the lower half.

Step 3



- Carefully remove the top section of the button with the fine-tip tweezers . This should free the button completely.

To reassemble your device, follow these instructions in reverse order.