



Orbic Wonder Battery Replacement

This guide provides instruction to remove and...

Written By: Grant Adler



INTRODUCTION

This guide provides instruction to remove and replace a depleted battery in your Orbic Wonder. Before beginning, discharge your Orbic Wonder battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured. Turn off the Orbic Wonder prior to disassembly.

TOOLS:

[TR9 Torx Security Screwdriver](#) (1)

[Jimmy](#) (1)

[Anti-Static Wrist Strap](#) (1)

[Tweezers - Pro/ESD/Angled](#) (1)


[Phillips #000 Screwdriver](#) (1)

Step 1 — Battery



- Remove two 2mm TR9 Torx screws from the bottoms of the device.

Step 2

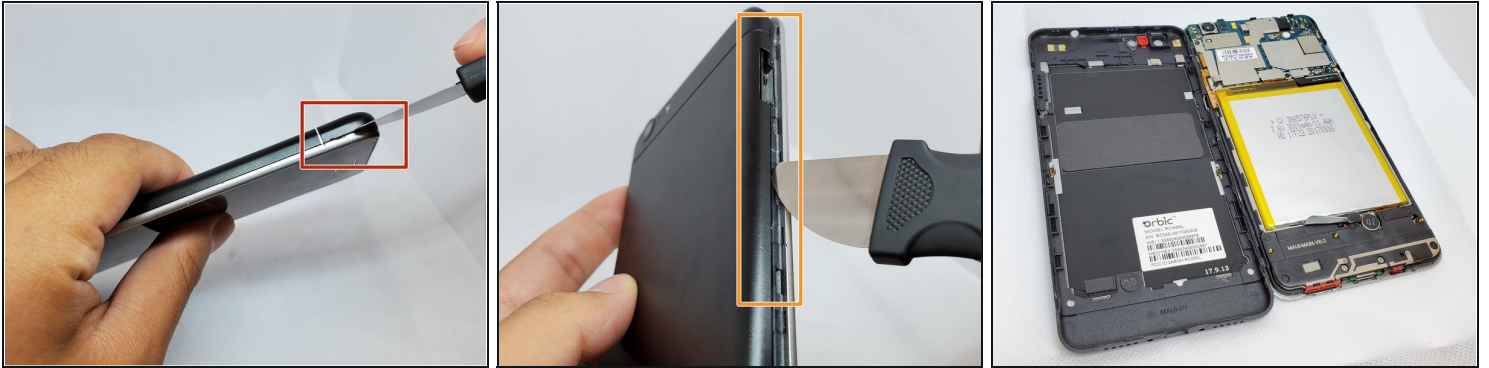

- There is a border between the black phone backing and the silver screen.
- Place the Jimmy in this border, and cautiously torque it back and forth to part the two halves.
- When the halves are parted correctly, the gap should look like this.

⚠ Be careful to avoid damaging any connecting circuitry between the two halves.



Step 3



⚠ Before continuing, tighten the [anti-static wrist strap](#) around your wrist and connect the alligator clips to a metal portion of the phone.


- On the upper right side, there is a black ribbon cable in the shape of an “L”. Remove the single 1 mm Phillips #000 screw on the left side of the ribbon cable.

Step 4

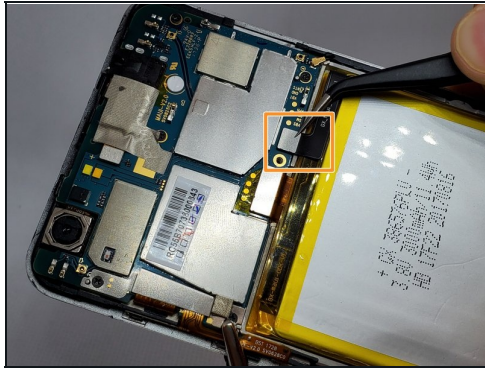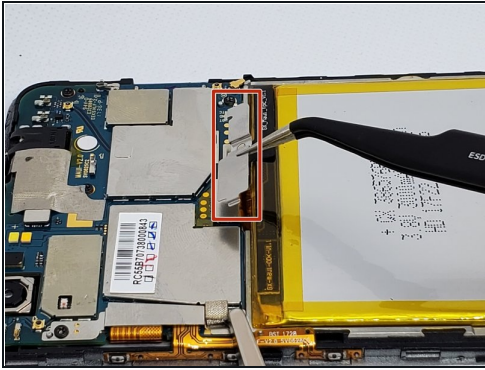

- Use a pair of angled tweezers to carefully remove the metal casing of the ribbon cable.
- Use a pair of angled tweezers to detach the black ribbon cable. This is done to unplug the battery.

Step 5

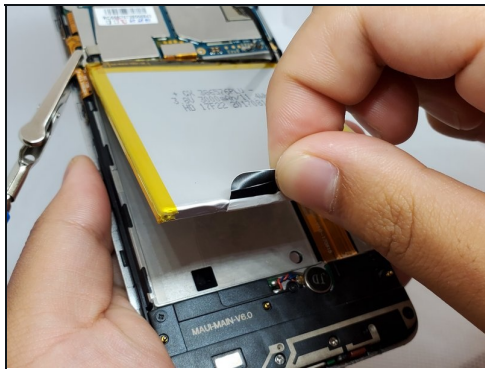

- There is a black flap on the bottom of the battery.
- Using your fingers, pinch this flap and carefully pull the battery up and out of the phone.

To reassemble your device, follow these instructions in reverse order.