



# 2017 Honda Accord Headlight Replacement

How to replace your 2017 Honda Accord's headlight.

Written By: Dennis Kravtsov



## INTRODUCTION


This guide will show you how to replace the headlight of a 2017 Honda Accord. Prior knowledge of how to use a ratchet wrench and basic car maintenance is required.



### TOOLS:

- [1 4" socket wrench](#) (1)
  - [10mm Socket](#) (1)
  - [1/4" Ratchet Extension](#) (1)
  - [6"](#)
  - [Clip Remover](#) (1)
-

## Step 1 — Headlight

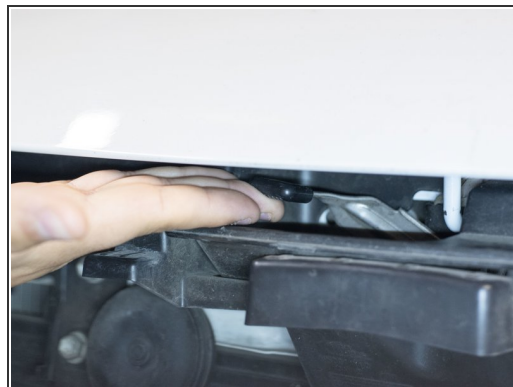

- Pull the Hood Latch lever inside the car, located under the steering wheel.
- Lift the hood while pressing up on the lever under the front of the hood.


## Step 2



- Lift up the hood prop rod and insert it into the hole on the underside of the hood.



### Step 3

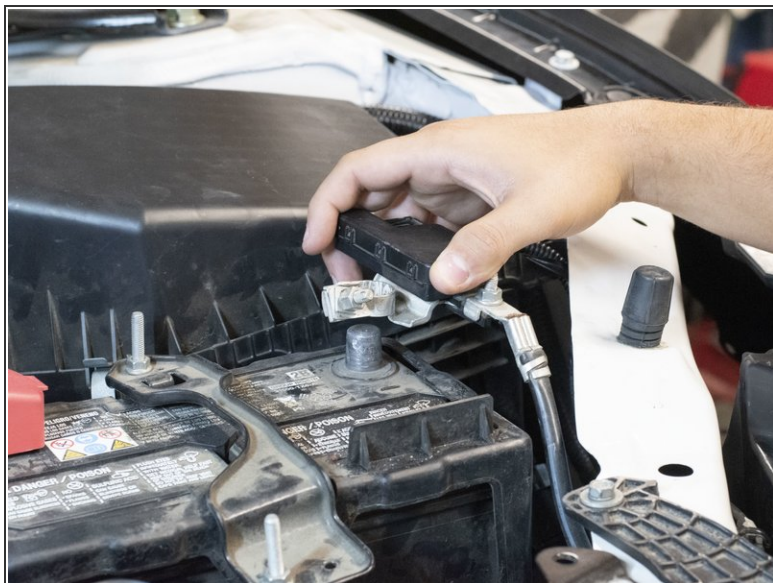

- Use a 1/4" ratcheting wrench and a 10mm socket to loosen the bolt on the negative terminal head.
- Lift the terminal up off of the battery and place it to the side.

### Step 4



- Use the clip remover tool to pry the clip up to remove it.

## Step 5



- Use a 1/4" ratcheting wrench and a 10mm socket to remove the three bolts.

## Step 6



- Use a 1/4" ratcheting wrench, a 6" extension and a 10mm socket to remove the last bolt.



## Step 7



- Gently pull the headlight out.

## Step 8



- Press the tab on the connector and pull. Do this for all 4 connectors.

To reassemble your device, follow these instructions in reverse order.